

Model Numbers: 2104800, 2104801, 2104802, 2104803

USER INSTRUCTION MANUAL: SAFLOK VERTICAL LIFELINE ROPE POLE ANCHOR SYSTEM

This manual is intended to meet the Manufacturer's Instructions requirement of applicable standards defined in Section 1.2 and should be used as part of an employee training program as required by the identified agencies.

WARNING: This product is part of a personal fall arrest system¹. The user must read and follow the manufacturer's instructions for each component or part of the complete system. These instructions must be provided to the user of this equipment. The user must read and understand these instructions or have them explained to them before using this equipment. Manufacturer's instructions must be followed for proper use and maintenance of this product. Alterations or misuse of this product or failure to follow instructions may result in serious injury or death.

IMPORTANT: If you have questions on the use, care, or suitability of this equipment for your application, contact Capital Safety.

IMPORTANT: Record the product identification information from the ID label in the Inspection and Maintenance Log in Section 9.

DESCRIPTION:

Figure 1 illustrates the components that comprise the Saflok[™] Pole Anchor System. The Pole Anchor System consists of a dielectric Vertical Lifeline Rope (1A) passing through a formed Anchor Tube (1B). The Anchor Tube drapes over the crossarm (or similar component) on a wooden utility pole and is placed with a Telescoping Hot Stick (1C) and attached Installation/Removal Tool (1D) to suspend the lifeline vertically for attachment of a fall arrest subsystem: Rope Grab (1E) with Shock Absorber (1F), and Full Body Harness. A Chain Tensioner (1G) and Endless Loop Sling (1H) are provided to secure the bottom end of the lifeline to the base of the pole.

| | | Fiç | jure 1 - Saflo | | | | | |
|--------|---|-------------|----------------|--|--|--|--|--|
| Item | Description | 2104800/802 | 2104801/803 | | | | | |
| Α | Vertical Lifeline Rope | 1 | 1 | | | | | |
| В | Anchor Tube | 1 | 1 | | | | | |
| С | Telescoping Hot Stick (purchased separately) | 0 | 0 | | | | | |
| D | Installation/Removal Tool | 1 | 1 | | | | | |
| E F | Rope Grab with Shock Absorber | 1 | 1 | | | | | |
| G | Chain Tensioner | 0 | 1 | | | | | |
| н | Endless Loop Sling | 0 | 1 | | | | | |
| Ι | Carabiner | 1 | 2 | | | | | |
| J | Carrying Bag | 1 | 1 | | | | | |
| | | | | | | | | |

Fall Arrest System: A system that prevents the worker from colliding with an obstruction or lower level by arresting a fall.
 Form: 5903024 Rev: C
 © Copyright 2010, DB Industries, Inc.

1.0 APPLICATION

- 1.1 **PURPOSE**: The Saflok[™] Pole Anchor System is is a Vertical Lifeline System for use as part of a Personal Fall Arrest System (PFAS) when climbing and working on wooden utility poles (power poles, telephone poles, etc.).
- **1.2 STANDARDS**: Refer to local, state, and federal (OSHA) requirements governing occupational safety for additional information regarding Personal Fall Arrest Systems. Refer to the following national standards on fall protection:

| ANSI | Z359-0 | Definitions and Nomenclature User for Fall Protection and Fall Arrest |
|------|----------|--|
| ANSI | Z359-1 | Safety Requirements for Personal Fall Arrest Systems, Subsystems, and Components |
| ANSI | Z359-2 | Minimum Requirements for a Comprehensive Managed Fall Protection Program |
| CSA | Z259.2.1 | Fall Arrestors, Vertical Lifelines, and Rails |

1.3 TRAINING: This equipment is intended to be used by persons trained in its correct application and use. It is the responsibility of the user to assure they are familiar with these instructions and are trained in the correct care and use of this equipment. Users must also be aware of the operating characteristics, application limits, and the consequences of improper use.

2.0 SYSTEM LIMITATIONS & REQUIREMENTS

Consider the following limitations/requirements prior to installing or using this equipment:

- **2.1 CAPACITY**: This equipment is designed for use by a one climber at a time. Combined weight of the climber (person, clothing, tools, etc.) should not exceed 310 lbs (141 kg).
- **2.2 ANCHORAGE:** In accordance with ANSI Z359.1, anchorages selected for Fall Arrest Systems must have a strength capable of sustaining static loads applied in the directions permitted by the system of at least:

| Non-Certified Anchorages: | 5,000 lbs (22.2 kN) |
|---------------------------|-------------------------------------|
| Certified Anchorages: | 2 times the Maximum Arresting Force |

- **2.3** FALL ARREST FORCES: The Personal Fall Arrest System must limit fall arrest forces to 1,800 lbs (8 kN) and deceleration distance must not exceed 42 inches (107 cm).
- **2.4 FREE FALL**: Per ANSI Z359.1, Personal Fall Arrest subsystems used with the Pole Anchor System must limit free fall to 6 feet (1.8 m). To avoid increased fall distance, do not work above the anchorage level.
- **2.5 FALL CLEARANCE**: Ensure that adequate clearance exists in the fall path to prevent striking an object during a fall. The clearance required is dependent on the type of connecting subsystem (rope grab, lanyard), the anchorage location, and the elongation characteristics of the lifeline. Table 1 approximates elongation for varied lengths of dry Lifeline. Wet Lifelines generally elongate further than dry Lifelines.

| | Table 1 - Lifeline Elongation | | | | | | | |
|-------------|--|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|
| | | Lifeline Length | | | | | | |
| | 10 ft 20 ft 30 ft 40 ft 50 ft 60 ft 70 ft 80 ft (3.0 m) (6.1 m) (9.1 m) (12.2 m) (15.2 m) (18.3 m) (21.3 m) (24.4 m) | | | | | | | 80 ft (24.4 m) |
| Elongation: | 0.4 ft (11.1 cm) | 0.7 ft (22.6 cm) | 1.1 ft (33.7 cm) | 1.5 ft (45.2 cm) | 1.9 ft (56.3 cm) | 2.2 ft (67.5 cm) | 2.6 ft (78.7 cm) | 3.0 ft (90.1 cm) |


- 2.6 ENVIRONMENTAL HAZARDS: Use of this equipment in areas where environmental hazards exist may require additional precautions to reduce the possibility of injury to the user or damage to the equipment. Hazards may include, but are not limited to: high heat, caustic chemicals, corrosive environments, high voltage power lines, explosive or toxic gases, moving machinery, or sharp edges.
- **2.7 BODY SUPPORT**: A Full Body Harness must be used with the Saflok Pole Anchor System. The harness connection point must be above the user's center of gravity. A body belt is not authorized for use with the Pole Anchor System. If a fall occurs when using a body belt it may cause unintentional release and possible suffocation because of improper body support. Substitutions of equipment or system components must not be made without the written consent of Capital Safety.
- 2.8 COMPATIBILITY OF COMPONENTS: Unless otherwise noted, DBI-SALA equipment is designed for use with DBI-SALA approved components and subsystems only. Substitutions or replacements made with non approved components or subsystems may jeopardize compatibility of equipment and may affect safety and reliability of the complete system.


- 2.9 COMPATIBILITY OF CONNECTORS: Connectors are considered to be compatible with connecting elements when they have been designed to work together in such a way that their sizes and shapes do not cause their gate mechanisms to inadvertently open regardless of how they become oriented. Connectors (hooks, carabiners, and D-rings) must be capable of supporting at least 5,000 lbs. (22 kN). Connectors must be compatible with the anchorage or other system components. Do not use equipment that is not compatible. Non-compatible connectors may unintentionally disengage (see Figure 2). Connectors must be compatible in size, shape, and strength. Self-locking snap hooks and carabiners are required by ANSI Z359.1 and OSHA.
- **2.10 MAKING CONNECTIONS**: Use only self-locking snap hooks and carabiners with this equipment. Only use connectors that are suitable to each application. Ensure all connections are compatible in size, shape and strength. Do not use equipment that is not compatible. Ensure all connectors are fully closed and locked.

DBI-SALA connectors (snap hooks and carabiners) are designed to be used only as specified in each product's user's instructions. See Figure 3 for illustration of the inappropriate connections stated below. DBI-SALA snap hooks and carabiners should not be connected:

- A. To a D-ring to which another connector is attached.
- B. In a manner that would result in a load on the gate.
- C. In a false engagement, where features that protrude from the snap hook or carabiner catch on the anchor and without visual confirmation seems to be fully engaged to the anchor point.
- D. To each other.
- E. Directly to webbing or rope lanyard or tie-back (unless the manufacturer's instructions for both the lanyard and connector specifically allow such a connection).
- F. To any object which is shaped or dimensioned such that the snap hook or carabiner will not close and lock, or that roll-out could occur.


NOTE: Other than 3,600 lb. (16 kN) gated hooks, large throat opening snap hooks should not be connected to standard size D-rings or similar objects which will result in a load on the gate if the hook or D-ring twists or rotates. Large throat snap hooks are designed for use on fixed structural elements such as rebar or cross members that are not shaped in a way that can capture the gate of the hook.

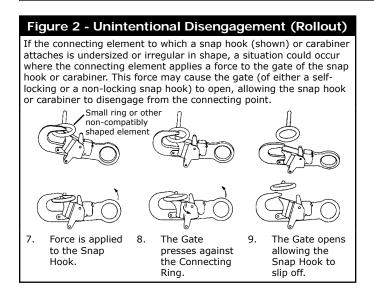

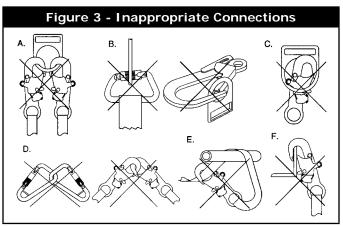

3.0 SYSTEM INSTALLATION

- 3.1 **PLANNING**: Plan your Fall Arrest System before using the Saflok[™] Pole Anchor System. Consider all limitations and requirements defined in Section 2 and the following logistical aspects:
 - A. ANCHORAGE: Figure 4 illustrates anchorage locations for the Anchor Tube. Select a rigid anchorage point that is capable of sustaining the loads specified in Section 2. The Anchor Tube should always be anchored around the Pole Top over a suitable bolted apparatus or material having a minimum 5/8 inch (15.9 mm) bolt. At least 12 inches (30.5 cm) of pole top should extend above the Anchor Tube to prevent to prevent it from flipping over the pole top. If insufficient pole top is available, the Anchor Tube should extend over and under a Crossarm or similar device.

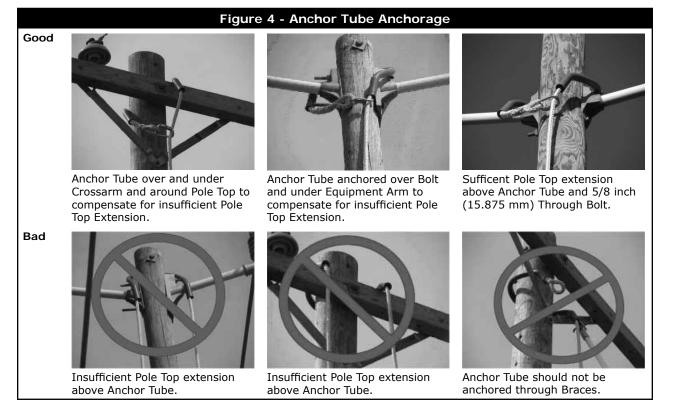

- B. POLE INTEGRITY: Inspect and secure an unsound pole so it is safe for climbing.
- C. SHARP EDGES: Avoid working where the Pole Anchor System and attached subsystems will contact or abrade against unprotected sharp edges. Do not loop the Lifeline around small diameter structural members. If working with the Pole Anchor System around sharp edges is unavoidable, apply a heavy pad over the exposed sharp edge.
- D. CLIMBING PATH: Identify the best climbing path prior to hanging the Vertical Lifeline Rope with the Anchor Tube. The Vertical Lifeline Rope will align with the Anchor Tube and should be positioned on the same side of the pole as the work area and best climbing path to avoid tangling the Lifeline.
- E. GENERAL USE CONSIDERATIONS: Avoid working where your Lifeline may cross or tangle with that of another worker. Do not allow your Lifeline to pass under you arms or tangle in your feet. Follow Live Line procedures when working around exposed live components. Situate the Vertical Lifeline Rope within the minimum approach distance.
- F. RESCUE: The employer should always have a Rescue Plan in place and the ability to readily implement the plan.
- 3.2 **INSPECTION:** Prior to installing the Pole Anchor System, inspect all components per the *Inspection Steps* in Section 5.
- **INSTALLATION HANGING THE VERTICAL LIFELINE ROPE:** After planning your Fall Arrest System 3.3 (see Section 3.1), hang the Vertical Lifeline Rope from the wood pole with the Anchor Tube:
 - Thread the Vertical Lifeline Rope through the Anchor Tube: Thread the running end of the Step 1. Vertical Lifeline Rope through the Anchor Tube until the Eye Splice is fully retracted into the tube body (Figure 5). The rope may be inserted through the Anchor Tube in either direction to facilitate maneuvering the tube and rope over and around the required anchorage points.
 - Install the Installation/Removal Tool on the end of the Telescoping Extension Pole: Step 2. Attach the Installation/Removal Tool to the end of a dielectric tested Telescoping Extension Pole. Insert the Installation/Removal Tool in the Anchor Tube so the trailing end of the Lifeline aligns in the tapered groove on the Adapter (Figure 6).


Step 3. Raise the Anchor Tube and Vertical Lifeline Rope to a position just below the Pole anchorage point: Free the trailing end of the Vertical Lifeline Rope of any knots, kinks, or tangles that might impede raising the Telescoping Extension Pole. Position the butt end of the Extension Pole on the ground below the anchorage point (Figure 7). Raise the Extension Pole and attached Anchor Tube to a point just below the desired anchorage by telescoping and locking each extension of the Extension Pole (Figure 8).

WARNING: When extending the Extension Pole, keep fingers clear of the Lock Button Holes to prevent pinching.

IMPORTANT: To ease raising and lowering of the Telescoping Extension Pole, keep the pole in a vertical position (Figure 8).

NOTE: Exercise care to protect the Vertical Lifeline Rope from contaminates that will reduce the rope's dielectric properties. Keeping the unused end of the Vertical Lifeline Rope in the provided Carrying Bag will help maintain the rope's dielectric properties.

- **Step 4. Hang the Anchor Tube over the Pole Anchorage**: Lift up on the Extension Pole slightly and then twist the Anchor Tube into position on the desired anchorage points (Figure 9). When the Anchor Tube is in position, lower the Extension Pole slightly to Hang the Anchor Tube on the anchorage points and remove the Installation/Removal Tool (Figure 10).
- **Step 5. Retrieve the Eye Splice end of the Vertical Lifeline Rope for anchorage purposes:** Insert the Rope Hook end of the Installation/Removal Tool through the the Eye Splice (Figure 11) and then retract the Telescoping Extension Pole to pull the Vertical Lifeline Rope through the Anchor Tube and retrieve the Eye Splice.

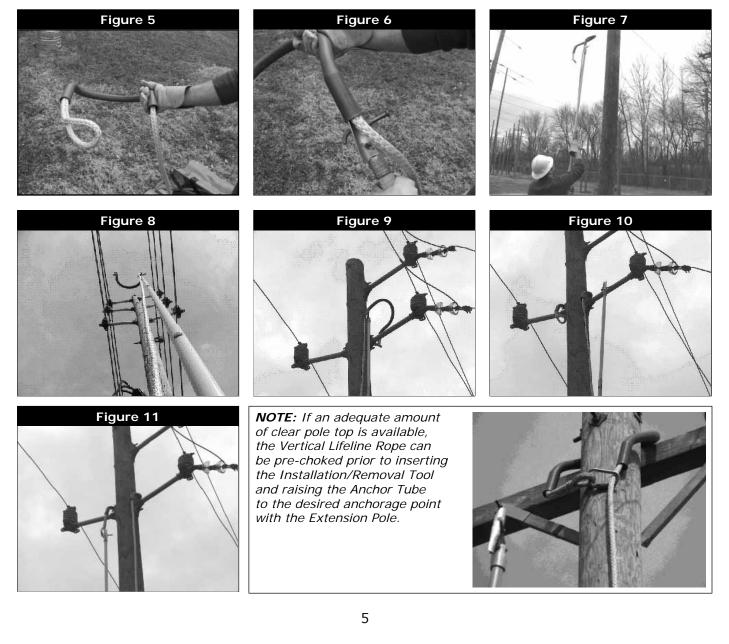

3.4 INSTALLATION - ANCHORING THE VERTICAL LIFELINE ROPE: Once the Anchor Tube is correctly secured on the Wood Pole, the Vertical Lifeline Rope should be anchored at the top or bottom of the pole:


To anchor the Vertical Lifeline Rope at the top of the Wood Pole with the Anchor Tube:


- **Step 1**. Secure the provided Carabiner to the Eye Splice on the Vertical Lifeline Rope.
- Step 2. Pass the Plain End of the Vertical Lifeline Rope through the Carabiner.
- **Step 3**. Grasp the Plain End of the Lifeline and pull the Vertical Lifeline Rope through the Anchor Tube until the Eye Splice and Carabiner are snug against the Anchor Tube and Pole Top anchorage (Figure 12 & Figure 13).


To anchor the Vertical Lifeline Rope at the bottom of the Wood Pole with the Chain Tensioner:


- **Step 1.** Hold the Chain Tensioner against the Wood Pole and wrap the free end of the chain around the Wood Pole. Feed the excess chain through the slot in the Chain Retainer and hook a link on the Button Head Screw Pin protruding from the Retainer. Turn the Hand Wheel to tighten the chain. (Figure 14).
- **Step 2.** Insert the Endless Loop Sling midway through the Eye Splice on the Vertical Lifeline Rope so a loop protrudes from each side of the Eye Splice (Figure 15).
- **Step 3**. Insert the Carabiner through the Shackle. Slide the two loops of the Endless Loop Sling over the Carabiner and then lock the Carabiner to secure the Vertical Lifeline Rope to the Chain Tensioner. (Figure 16).


WARNING: Failure to maintain a minimum of eight chain links between the Adjustment Housing and Carabiner connecting the Vertical Lifeline Rope to the Chain Tensioner may result in the lifeline pulling the chain link off the Screw Pin on the Chain Retainer, causing serious injury or death.

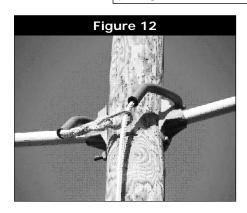


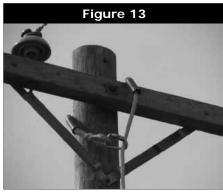

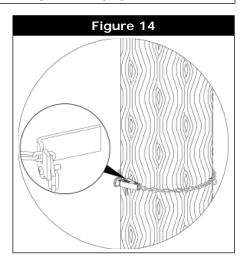

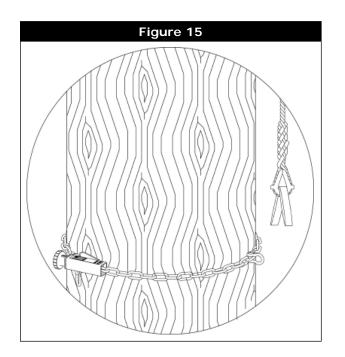

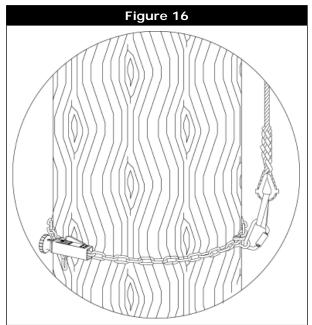

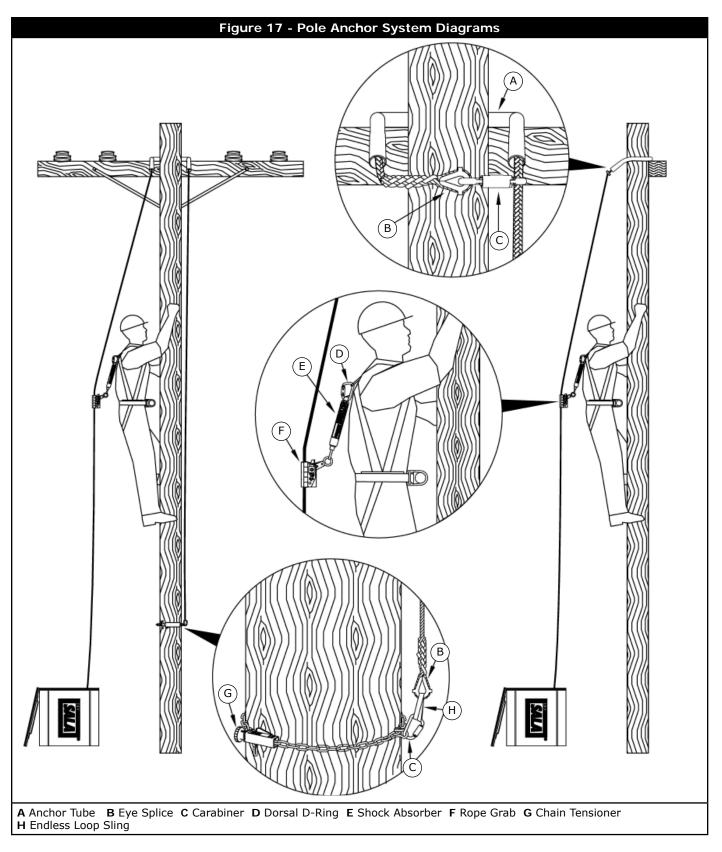

4.0 SYSTEM OPERATION

The Saflok Pole Anchor System is designed for use with a Rope Grab in a single-person fall arrest system (see Figure 17).

WARNING: Do not alter or intentionally misuse this equipment. Consult DBI-SALA when using this equipment in combination with components or subsystems other than those described in this manual. Some subsystem and component combinations may interfere with the operation of this equipment. Use caution when using this equipment around moving machinery, electrical hazards, chemical hazards, and sharp edges.

WARNING: Consult your doctor if there is reason to doubt your fitness to safely absorb the shock from a fall arrest. Age and fitness seriously affect a worker's ability to withstand falls. Pregnant women or minors must not use DBI-SALA Vertical Lifelines or subsystems.

- **4.1 BEFORE EACH USE**: Inspect the components of the Pole Anchor System according to the Inspection Guidelines (Section 5.2). Inspect the Full Body Harness according to the manufacturer's instructions.
- **4.2 USE**: Figure 17 illustrates Saflok Pole Anchor Systems with bottom or top anchorage. Operating procedures for either system are as follows:

WARNING: If the Saflok Pole Anchor System is subjected to fall arrest forces, it should be removed from service and destroyed.


- **Step 1. Don a Full Body Harness**: A Full Body Harness equipped with a back Dorsal D-ring (17D) should always be used with the Pole Anchor System. Don the harness per the manufacturer's instructions.
- **Step 2.** Attach the the Rope Grab Shock Absorber to the Full Body Harness: The Rope Grab (17F) is equipped with an attached Shock Absorber (17E). Secure the Carabiner on the end of the Shock Absorber (17E) to the Dorsal D-ring (17D) on the Full Body Harness.
- **Step 3.** Attach the Rope Grab to the Vertical Lifeline Rope: Figure 18 illustrates installation of the Rope Grab on the Vertical Lifeline Rope. Procedures are as follows:
 - A. Ensure the Rope Grab is in the 'UP' position with the arrow (18A) on the the Rope Grab pointing toward the top of the wood pole.

NOTE: The Rope Grab incorporates a Gravity-Lock Pin which slides out of the Locking Pin, preventing the Lifeline Sleeve from mating with the Rope Grab Cam if the Rope Grab is not held upright.

- B. Push the Opening Lever (18B) down until it reaches the bottom of the groove (18C) and then slide it inward until the Release Button (18D) is completely pressed and covered by the Opening Lever.
- C. Pull the Lifeline Sleeve (18E) and Locking Cam (18F) halves apart until the Rope Grab is fully opened.
- D. To install the Rope Grab on the Vertical Lifeline Rope, raise the Locking Cam (18F) to the 'UP' position, align the rope inside the Lifeline Channel (18G) and close the hinged Rope Grab halves.

Closing the Rope Grab halves releases the Opening Lever (18H) from the open position and slides the Lock Pin (18I) into the Lock Ring at the top of the Lifeline Sleeve. The Opening Lever should be resting at the top of the groove against the Lifeline Sleeve.

E. Test the Rope Grab for proper operation by pulling down on the Locking Cam (18J). The Rope Grab should lock onto the Vertical Lifeline Rope and prevent descent down the lifeline once the Cam is engaged.

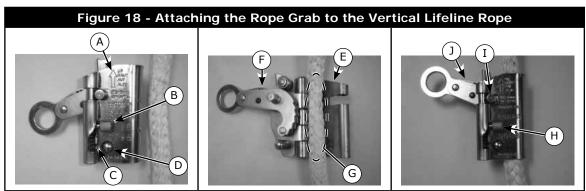

Step 4. Climb up and down the Wood Pole with the Rope Grab sliding up or down the Vertical Lifeline Rope as you ascend or descend:

A. Using the Shock Absorber (17E) connected to the Rope Grab (17F), pull up slightly on the Rope Grab's Locking Cam (18J) to release it from the locked position. Always keep a minimum of 12 feet (3.7 m) of rope below the Rope Grab to accommodate locking distance and fall clearance.

- B. Maintin upward pressure on the Rope Grab's Locking Cam as you climb to allow the Rope Grab to travel on the Vertical Lifeline Rope without locking. To assure smooth travel of the Rope Grab on the lifeline, apply tension to the Vertical Lifeline Rope. Lifeline tension can be achieved by adding a weight on the unanchored end of the Vertical Lifeline Rope or extending additional lifeline (in a hanging orientation) to provide weight.
- C. When stationary, position the Rope Grab as high as possible on the Vertical Lifeline Rope to reduce possible free fall. Lock the Rope Grab at the desired position by pulling the Locking Cam all the way down or enabling the Parking Feature (Section 4.3). The Locking Cam must be released before attempting to reposition the Rope Grab.

4.3 ROPE GRAB SAFETY FEATURES:


Parking Feature (Figure 19): The Rope Grab's Parking Feature prevents the Rope Grab from traveling down the Vertical Lifeline Rope; allowing the user to remain on the lifeline for extended periods without the threat of the Rope Grab slipping down the lifeline when the user is active. The Rope Grab operates in manual mode while the Parking Feature is engaged. To activate the Parking Feature, release the Auto-Locking Lever (19A) from the tab (19B) on the side of the Rope Grab so it rotates from vertical to horizontal. To deactivate the Parking feature, return the Auto-Locking Lever to an upright position so the hole in the lever catches on the tab on the side of the Rope Grab. Lift up on the Locking Cam to unlock the Rope Grab, allowing travel up and down the Vertical Lifeline Rope.

Anti-Panic Grip Feature (Figure 20): Rope Grabs with the Anti-Panic Grip feature are equipped with an additional Center Cam between the two sides of the Locking Cam. In the event of a fall, the user may grasp the Rope Grab in a manner that forces the Locking Cam into the open position. When the Locking Cam is forced beyond the open position, the additional Center Cam pushes out and into the lifeline; stopping the fall even though the Locking Cam is in the open position.



WARNING: To ensure optimal safety when using the Rope Grab and Vertical Lifeline Rope:

- Always protect the lifeline if passing over or around sharp edges. Sharp edges can reduce rope strength by 70% or more.
- Keep lifelines clean.
- Avoid twisting or kinking lifelines when coiling or uncoiling.
- Avoid using lifelines near acids or alkalies. If the lifeline is used around chemicals or compounds, watch for signs of deterioration.
- Never use a knotted lifeline, knots can reduce rope strength by 50%.
- Store lifelines properly (see Section 6.2).

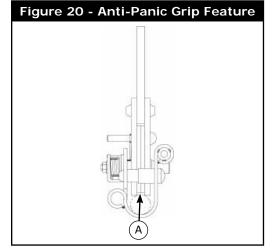

5.0 INSPECTION

5.1 FREQUENCY:

- **Before Each Use:** Visually inspect all components of the Saflok Pole Anchor System per the guidelines defined in Section 5.2. Check the labels on the Rope Grab, Vertical Lifeline Rope, and Chain Tensioner (see Section 8) to verify that annual inspection is current. If the condition of any component in the system is in doubt, do not use.
- **Annual Inspection**: A formal inspection of all components comprising the Saflok Pole Anchor System must be performed at least annually by a competent person¹ other than the user.
- After a Fall: If a fall occurs while using the Saflok Pole Anchor System, a formal inspection of the entire system must be performed by a competent person other than the user.
- **5.2 INSPECTION GUIDELINES:** To ensure safe efficient operation, components of the Saflok Pole Anchor System should be inspected per the following guidelines:


| Full Bod | y Harness: | Before Each Use | Every Year | After a Fall |
|----------|--|--------------------|---------------|-----------------|
| Step 1. | Inspect the Full Body Harness per the manufacturer's instructions. | X | Х | X |
| Rope Gra | Rope Grab: Reference Figure 21. | | | After a Fall |
| Step 1. | Inspect the Attachment Eye (21B) and Locking Cam (21A) to ensure that the cam moves freely without hesitation, binding, or sticking. | x | x | x |
| Step 2. | Inspect the Locking Cam (21A) and ensure that the teeth are not rounded or worn. | x | х | X |
| Step 3. | Inspect the Locking Cam (21A) Lever Spring and Auto-Locking Lever Springs. Ensure they are in the proper location and undamaged. | x | Х | X |
| Step 4. | Inspect the spring for the Lock Pin (21D) spring (located in the Groove [21F]) and ensure it is in the proper location and undamaged. | | х | x |
| Step 5. | Use the Opening Lever (21E) to ensure that the Locking Pin (21D) travels freely up and down the Locking Sleeve . | | Х | X |
| Step 6. | Test repeatedly that the Rope Grab opens when the Release Button (21I) is depressed with the Opening Lever (21E). The Release Button must be fully extended after the Rope Grab is closed. | | X | x |
| Step 7. | The two halves of the Rope Grab must close and open freely on the hinge. Inspect the Lifeline Channel (21G) and ensure that there are no dips or depressions worn into the channel and that the Dimples (21H) are without damage. Ensure all the labels and engravings are legible. | | х | x |
| Step 8. | Inspect the Hinge (21J), Attachment Eye (21B), and the rest of the Rope Grab for signs of corrosion, wear, cracks, distortion or other damage. | | x | x |
| Step 9. | With the Rope Grab open and upside-down, the Gravity-Lock Pin should drop down and prevent the Rope Grab from closing | | х | X |
| Step 10. | Activate the Parking Feature (Figure 19 & 21K) and verify that there is resistance against the Locking Cam (21A) when attempting to raise the Attachment Eye (21B). With the parking feature deactivated, there should be no resistance on the Locking Cam. | | x | X |
| Step 11. | To test models equipped with the Anti-Panic Grip Feature: Install the Rope Grab on the Vertical Lifeline Rope. Pass the thumb on one hand through the Attachment Eye (21B) and grasp the Rope Grab body with the rest of the hand. Force the Attachment Eye to open the Locking Lever until it stops. Run the Rope Grab down the lifeline and ensure that it locks onto the lifeline. | | x | X |

¹ Competent Person: An individual knowledgeable of a manufacturer's recommendations, instructions, and manufactured components who is capable of identifying existing and predictable hazards in the proper selection, use, and maintenance of fall protection equipment.

| Shock A | bsorber: Reference Figure 21. | Before Each Use | Every Year | After a Fall |
|---------|---|--------------------|---------------|---------------------------|
| Step 1. | Inspect the condition of the Carabiner (21M). The Carabiner must not be damaged or broken. It should be free of any sharp edges, burrs, cracks, worn parts, or corrosion. The Gate (21N) should move freely and lock upon closing. | x | х | x |
| Step 2. | Inspect the Webbing (210). All Webbing should be free of frayed, cut or broken fibers. Check for tears, abrasions, mold, burns, discoloration, etc. The webbing must be free of knots, excessive soiling, heavy paint buildup, and rust staining. Check for chemical or heat damage indicated by brown, discolored, or brittle areas. Check for ultraviolet damage indicated by discoloration and the presence of splinters or slivers on the webbing surface. All of the above factors are known to reduce webbing strength. Damaged or questionable webbing should be replaced. Inspect stitching for pulled or cut stitches. Broken stitches may indicate the Energy Absorber (21P) has been impact loaded and must be removed from service. | X | X | x |
| Step 3. | Inspect the Energy Absorber to determine if it has been activated. There should be no evidence of elongation. Ensure the cover on the Energy Absorber is secure and not torn or damaged. | x | X | Remove from Service |


| Vertical | Lifeline Rope: | Before Each Use | Every Year | After a Fall |
|----------|---|--------------------|---------------|---------------------------|
| Step 1. | Lifeline hardware must not be damaged, broken, distorted, or have any sharp edges, burrs, cracks, worn parts, or corrosion. Ensure included Carabiners work properly. Carabiner gates must move freely and lock upon closing. | x | x | x |
| Step 2. | Inspect the Vertical Lifeline Rope for concentrated wear. The material must be free of frayed strands, broken yarns, cuts, abrasions, burns, and discoloration. The rope must be free of knots, excessive soiling, heavy paint buildup, and rust staining. Rope splices must be tight, with five full tucks, and thimbles must be held by the splice. Cracked or distorted rope thimbles may indicate that the lifeline has been impact loaded. Check for chemical or heat damage (indicated by brown, discolored, or brittle areas). Check for ultraviolet damage, indicated by discoloration and the presence of splinters and slivers on the rope surface. All of the above factors are known to reduce rope strength. Damaged or questionable ropes must be replaced. | x | X | Remove from Service |
| Step 3. | Inspect labels (identified in Section 8). All labels must be present and fully legible. Replace labels if illegible or missing. | x | х | X |

| Anchor | Tube: | Before Each Use | Every Year | After a Fall |
|---------|---|--------------------|---------------|-----------------|
| Step 1. | The Anchor Tube must not be damaged or broken. It should be free of any sharp edges, burrs, cracks, worn areas, or abrasions. | X | х | X |

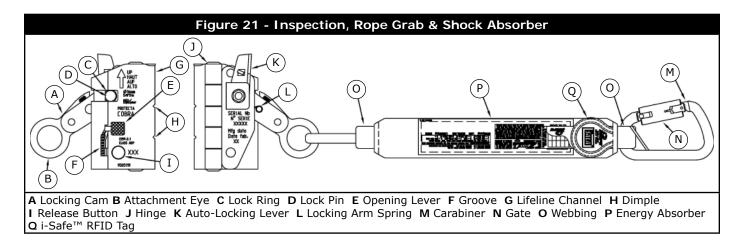

| Chain Te | ensioner: Reference Figure 22. | Before Each Use | Every Year | After a Fall |
|----------|---|--------------------|---------------|-----------------|
| Step 1. | Components of the Chain Tensioner must not be damaged. They should be free of any sharp edges, burrs, cracks, worn parts, or corrosion. | X | X | x |
| Step 2. | The Chain should be secure in the Adjustment Head (22A) of the Tensioner with the Spring Pin (22B). The Spring Pin must not be bent or cracked. | x | X | X |
| Step 3. | The Button Head Screw Pin (22C) should be screwed tight in the Chain Retainer (22D) and must not be bent. | X | Х | X |
| Step 4. | When the Knob (E) is turned, the Tensioning Screw (22F) should turn freely in the Adjustment Head (22A) without the threads binding. | X | х | x |
| Step 5. | The label must be present and fully legible (see Section 8). Replace the label if illegible or missing | X | х | x |

- **5.3 INSPECTION RECORDS:** After each inspection, record the inspection date and results in the Inspection & Maintenance Log (Section 9).
- 5.4 I-Safe[™] RFID TAG: The Shock Absorber is equipped with an i-Safe[™] Radio Frequency Identification (RFID) tag (Figure 21, Item Q). The RFID tag can be used in conjunction with the i-Safe handheld reading device and web based portal to simplify inspection and inventory control and provide records for your fall protection equipment. If you are a first-time user, contact a Capital Safety Customer Service representative (see back cover); or if you have already registered, go to www.capitalsafety.com/isafe. Follow the instructions provided with your i-Safe handheld reader or on the web portal to transfer your data to your web log.
- 5.5 UNSAFE OR DEFECTIVE CONDITIONS: If inspection reveals an unsafe or defective condition in a component of the Saflok Pole Anchor System, remove the component from service and destroy it or contact an authorized service center for repair.

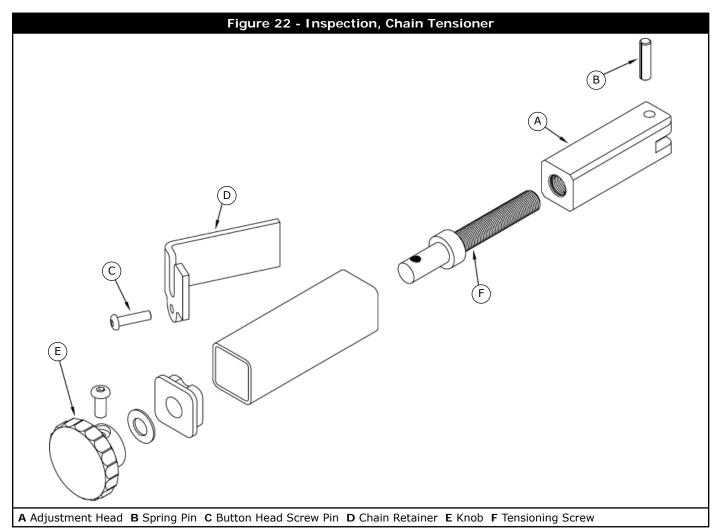

6.0 MAINTENANCE, STORAGE, AND TRANSPORT

- **6.1 MAINTENANCE**: Clean the Rope Grab, Shock Absorber, Chain Tensioner and Vertical Lifeline Rope with water and a mild soap solution. Wipe off hardware with a clean, dry cloth, and hang to air dry. Do not force dry with heat. An excessive buildup of dirt, paint, etc. may prevent components of the Pole Anchor System from working properly, and in severe cases degrade components to a point where they have weakened and should be removed from service. If you have any questions concerning the condition of any component of the Pole Anchor System, or have any doubt about putting them into service, contact Capital Safety.
- **6.2 STORAGE**: When not in use, store the Saflok Pole Anchor System in a cool, dry, clean environment; out of direct sunlight. Avoid areas where chemical vapors exist. After extended storage, thoroughly inspect all components per the guidelines in Section 5.2.
- 6.3 TRANSPORT: Transport the Saflok Pole Anchor System in the provided Carrying Bag.


7.0 SPECIFICATIONS

7.1 STANDARDS: When installed and used per the requirements and recommendations in this manual, the Saflok Pole Anchor System meets standards and requirements defined in Section 1.2.

| 7.2 | SYSTEM: | |
|-----|-----------------------------|---|
| | CAPACITY: | ♦ One User - 310 lbs (140 kg) |
| | WEIGHT: | ♦ Model 2104800 - 12 lbs (5.4 kg) |
| | | ♦ Model 2104801 - 20 lbs (9.07 kg) |
| | VERTICAL LIFELINE ROPE: | ♦ 5/8" (126 mm) x 80' (24.3 m) Oletec-12-2 ply orange, 100% Polyolefin Lifeline, High Dielectric meets ASTM F1701-05 |
| | | \diamond 2-1/2" (3.5 mm) I.D. Locked Soft Eye Splice with Plastic Thimble |
| | ANCHOR TUBE: | ♦ CPVC 4120 1" (25.4 mm) SCH 40 ASTM F 441, Grey |
| | CARABINER(S): | ♦ Heat Treated, Zinc Plated Steel |
| | | ♦ Locking Type: Double-Action Self Closing/Self Locking Gate Face/Side & Minor Axis: 3,600 Lbs. (1633 Kg) |
| | | ♦ Minimum Proof Load: 3,600 lbs (1633 kg) |
| | | ♦ Tensile Strength: 5,000 lbs, (2268 kg) |
| | INSTALLATION/REMOVAL TOOL: | ♦ Aluminum, Alloy Tool 206-T4 |
| | | \diamond Finish: Sulfuric Anodize Clear per Mil-A-8625, Type 2, Class 1 |
| | ROPE GRAB & SHOCK ABSORBER: | ♦ Riveted and Welded with Hinged Rope Channel |
| | | Material Type: Body, Hinge, Cam and Attachment Eye – High Impact Resistant Steel, Zinc Plated |
| | | ♦ Lifeline Diameter: 5/8" (16 mm) |
| | | ♦ Integrated |
| | | \diamond Parking Feature: Allows manual operation as required> |
| | | \diamond Anti-Panic Feature: Stops falls even when Locking Cam is open. |
| | CHAIN TENSIONER: | \diamond Zinc Plate per ASTM, TYPE II, CLASS Fe/Zn 12, Yellow |

8.0 LABELING

The following labels must be securely attached and fully legible:

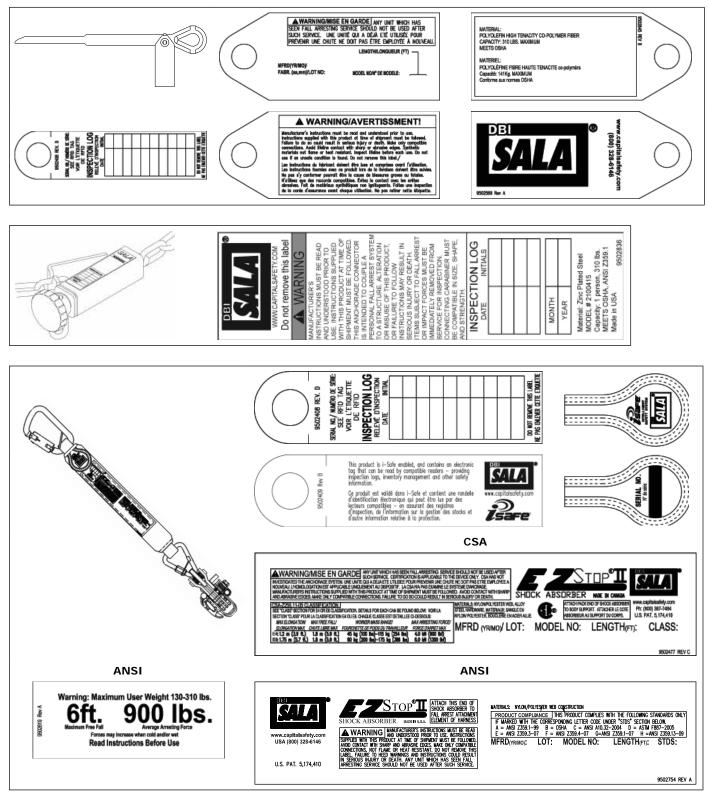

9.0 INSPECTION AND MAINTENANCE LOG

| SERIAL NUMBER: | | | | | |
|-----------------|---------------------------|--------------------|--------------------------|--|--|
| MODEL NUMBER: | | | | | |
| DATE PURCHASED: | | DATE OF FIRST USE: | | | |
| INSPECTION DATE | INSPECTION ITEMS NOTED | CORRECTIVE ACTION | MAINTENANCE PERFORMED | | |
| Approved By: | | _ | | | |
| Approved By: | | _ | | | |
| Approved By: | | _ | | | |
| Approved By: | | - | | | |
| Approved By: | | - | | | |
| Approved By: | | _ | | | |
| Approved By: | | _ | | | |
| Approved By: | | _ | | | |
| Approved By: | | _ | | | |
| Approved By: | | _ | | | |
| Approved By: | | _ | | | |
| Approved By: | | _ | | | |
| Approved By: | | _ | | | |
| Approved By: | | - | | | |
| Approved By: | | - | | | |
| Approved By: | | _ | | | |
| Approved By: | | _ | | | |
| Approved By: | | - | | | |

WARRANTY

Equipment offered by DBI-SALA is warranted against factory defects in workmanship and materials for a period of two years from date of installation or use by the owner, provided that this period shall not exceed two years from date of shipment. Upon notice in writing, DBI-SALA will promptly repair or replace all defective items. DBI-SALA reserves the right to elect to have any defective item returned to its plant for inspection before making a repair or replacement. This warranty does not cover equipment damages resulting from abuse, damage in transit, or other damage beyond the control of DBI-SALA. This warranty applies only to the original purchaser and is the only one applicable to our products, and is in lieu of all other warranties, expressed or implied.



A Capital Safety Company

CSG USA

3833 Sala Way Red Wing, MN 55066-5005 Toll Free: 800.328.6146 Phone: 651.388.8282 Fax: 651.388.5065 solutions@capitalsafety.com

CSG EMEA (France)

Le Broc Center Z.I. 1ère Avenue-5600 M BP 15 • 06511 Carros Cedex Phone: +33 (0)4 97 10 00 10 Fax: +65 6558 7058 Fax: +33 (0)4 93 08 79 70 information@capitalsafety.com Germany: Phone: +49 (0) 2634 8052 Fax: +49 (0) 2634 8055

CSG Canada Ltd.

260 Export Boulevard Mississauga, Ontario L5S 1Y9 Manor Park • Runcorn Canada Toll Free: 800.387.7484 Phone: 905.795.9333 Fax: 905.795.8777 sales.ca@capitalsafety.com

CSG Asia Pte Ltd. No. 6, Tuas Avenue 18 Singapore 638892 Phone: +65 6558 7758 inquiry@capitalsafety.com

CSG Northern Europe Ltd.

7 Christleton Court • Stuart Rd. Cheshire WA7 1ST • UK Phone: +44 (0) 1928 571324 Fax: +44 (0) 1928 571325 csgne@csgne.co.uk

CSG (Aust) Pty Ltd. 20 Fariola Street • Sliverwater Sydney, NSW 2128 Australia Phone: +61 (2) 9748 0335 Fax: +61 (2) 9748 0336 sales@capitalsafety.com.au

www.capitalsafety.com

