

# Portable Guardrail System


Model Numbers: 7900060, 7900061, 7900062, 7900063

# INSTALLATION INSTRUCTIONS: PORTABLE GUARDRAIL SYSTEM

This instruction is intended to meet the Manufacturer's Instructions requirement of OSHA and should be used as part of an employee training program.

**WARNING:** These instructions must be provided to the installer of this equipment and must be followed for proper use. Alterations or misuse of this product, or failure to follow instructions, may result in serious injury or death.


**IMPORTANT:** If you have questions on the use, care, or suitability of this equipment for your application, contact Capital Safety.

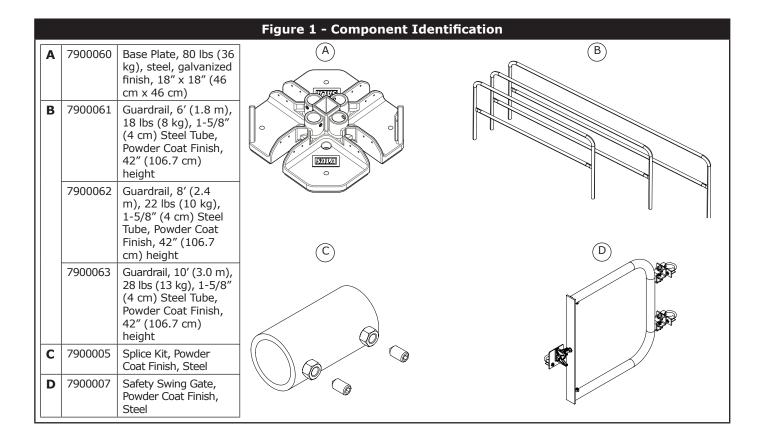

This page intentionally left blank


## Figure 2 - System Planning


- Only install on a flat, clean, dry (non-slippery, non-sloped) surface.
- Maintain a minimum distance of 10' (3.0 m) from electrical/power lines.
- Position Base Plates a • minimum of 18" (45.7 cm) from any leading edge when a curb or parapet is not present.
- Where Guardrail runs • align with a Leading Edge, install "Outrigger" Guardrails at right angles (90°) at the beginning, end, and any interruption of the run.
- Where required, use ٠ 2" x 4" (38 mm x 89 mm) lumber Toe Board to prevent materials or equipment from falling to lower levels.

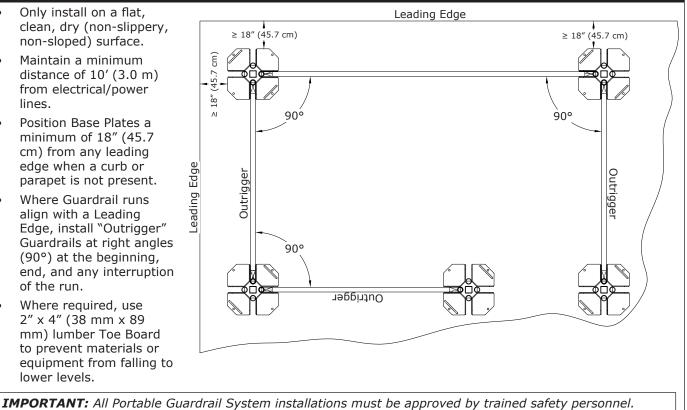

## Figure 3 - Guardrail Installation

1. Position Base Plates at the required locations on a flat, clean, dry surface (See 1. System Planning). **IMPORTANT:** Base Plates are equipped with a Rubber Pad on the bottom to prevent slippage. If the Rubber Pad is missing or damaged, do not use the Base Plate. Contact your distributor for a new Rubber Pad. 2. Insert the leg of the Guardrail in the desired receptacle on the Base Plate and tighten the Set Screw with a 1/4" Allen wrench. 3. Where required, secure 2" x 4" (38 mm x 89 mm) Toe Board to the Base Plate with nails through the holes provided on the Base Plate **WARNING:** Do not lean on Guardrails or use Guardrails for hoisting or tie 5411/2 off. Excess lateral force applied to the Rubber top of the guardrail may cause tipping, Pad resulting in injury or death.

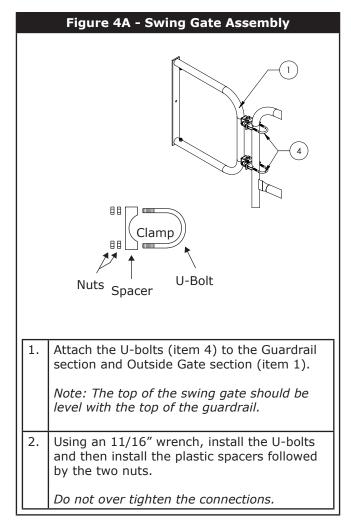

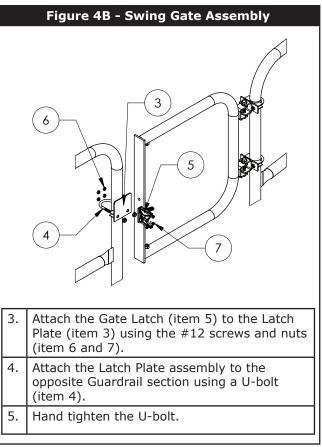



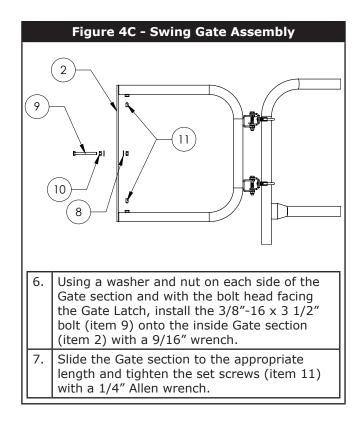


	Figure 4D - Swing Gate Assembly
8.	For the bolt to securely actuate the Gate Latch, adjust the Latch Plate U-bolt $(3/8"-16 \times 3 1/2")$ and/or inside Gate section as necessary.
9.	To prevent sliding, tighten the Striker Plate U-bolt with an 11/16" wrench.



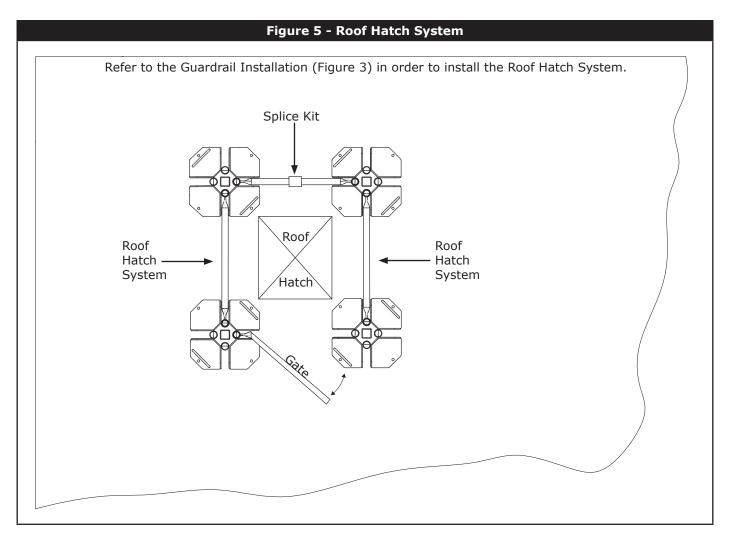

This page intentionally left blank.

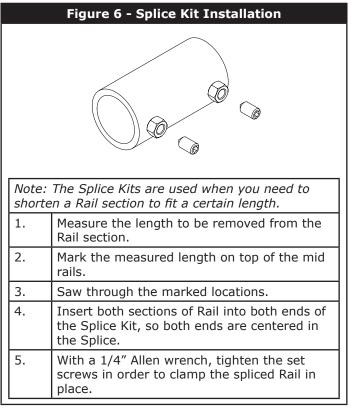

A Capital Safety Company

#### CSG USA

3833 Sala Way Red Wing, MN 55066-5005 Toll Free: 800.328.6146 Phone: 651.388.8282 Fax: 651.388.5065 solutions@capitalsafety.com

## CSG EMEA (France)

Le Broc Center Z.I. 1ère Avenue-5600 M BP 15 • 06511 Carros Cedex Phone: +33 (0)4 97 10 00 10 Fax: +65 6558 7058 Fax: +33 (0)4 93 08 79 70 information@capitalsafety.com Germany: Phone: +49 (0) 2634 8052 Fax: +49 (0) 2634 8055

## CSG Canada Ltd.

260 Export Boulevard Mississauga, Ontario L5S 1Y9 Canada

Toll Free: 800.387.7484 Phone: 905.795.9333 Fax: 905.795.8777 sales.ca@capitalsafety.com

#### CSG Asia Pte Ltd.

No. 6, Tuas Avenue 18 Singapore 638892 Phone: +65 6558 7758 inquiry@capitalsafety.com

## CSG Northern Europe Ltd.

7 Christleton Court • Stuart Rd. Manor Park • Runcorn Cheshire WA7 1ST • UK Phone: +44 (0) 1928 571324 Fax: +44 (0) 1928 571325 csgne@csgne.co.uk

## CSG (Aust) Pty Ltd.

20 Fariola Street • Sliverwater Sydney, NSW 2128 Australia Phone: +61 (2) 9748 0335 Fax: +61 (2) 9748 0336 sales@capitalsafety.com.au

## www.capitalsafety.com

