

# ANZ Aluminum Repair Procedures

## Sealing and Coating

### Aluminium Seam Sealer and Coating Removal

1



#### Pre-Cleaning

Prewash/clean vehicle prior to disassembly (power wash undercarriage area at repair).

2



#### Method A

Use Scotch-Brite™ Clean N Strip Disc to remove seam sealer and coatings where accessible.

3



#### Method B

Use CRS Scotch-Brite™ Belt to remove coatings and seam sealers in hard to reach areas.

Visit [www.3m.com.au/aad](http://www.3m.com.au/aad) or [www.3m.co.nz/aad](http://www.3m.co.nz/aad) for more SOPs and videos

### Product List ANZ

3M™ Car Wash  
Soap Concentrate,  
3.78 litre, PN 38377



3M™ All Purpose Cleaner  
and Degreaser Concentrate,  
3.78 litre, PN 38350

Scotch-Brite™ Clean N  
Strip Disc, PN 57016  
OR



Scotch-Brite™ Roloc™ +  
Clean N Strip  
TR Disc, PN 07466



3M™ Roloc™+ Holder, PN  
07500



Scotch-Brite™  
Durable Flex Belt,  
CRS



### Think About Your Health

3M™ E-A-R™ Skull Screws™  
Ear Plug, PN P1300



3M™ Half Facepiece  
Respirator, PN 07502 with  
appropriate cartridge



3M™ Lexa™ Protective Eyewear,  
PN 15200 or 3M Secure Fit  
SF401AF-AS



**Note: Use caution when working on aluminium parts. Use tools that have been cleaned properly or designated for use on aluminium to reduce potential cross contamination. Do not re-use abrasives that were previously used on steel repairs.**



For ordering information, contact your 3M Sales Representative