

Sealing and Coating

Seam Sealer and Coating Removal

1



Pre-Cleaning

Prewash/clean vehicle prior to disassembly (power wash undercarriage area at repair).

2



Method A

Use Scotch-Brite™ Clean N Strip Disc to remove seam sealer and coatings where accessible.

3



Method B

Use CRS Scotch-Brite™ Belt to remove coatings and seam sealers in hard to reach areas.

Visit www.3m.com.au/aad or www.3m.co.nz/aad for more SOPs and videos

Product List ANZ

3M™ Car Wash Soap Concentrate, 3.78 litre, PN 38377



3M™ All Purpose Cleaner and Degreaser Concentrate, 3.78 litre, PN 38350

Scotch-Brite™ Roloc™ + Clean N Strip XT Disc, PN 07470



Scotch-Brite™ Roloc™ + Clean N Strip TR Disc, PN 07466

3M™ File Belt Sander, PN 28366



Scotch-Brite™ Durable Flex Belt, CRS, PN 64475



Think About Your Health

3M™ E-A-R™ Skull Screws™ Ear Plug, PN P1300



3M™ Half Facepiece Respirator, PN 07182 or PN 07502



3M™ Lexa™ Protective Eyewear, PN 15200 or 3M Secure Fit SF401AF-SF



Note: Use caution when working on aluminum parts. Use tools that have been cleaned properly or designated for use on aluminium to reduce potential cross contamination. Do not re-use abrasives that were previously used on steel repairs.