

## Quick Links

[Resource Library](#)  
[Safety Data Sheets \(SDS\)](#)  
[Video Library](#)

Some of these links lead to web-based resources that are not product-specific.



## Product Description

The Scotch-Brite™ Low Scratch Scour Sponge 3000HEX is a 2-in-1 scouring sponge. It features a raised power dot side that is engineered to scour away tough messes with less visible scratching. The cellulose sponge side easily wipes up spills and contains antimicrobial technology that resists the growth of odor-causing bacteria.

## Special Features

### Power Dot Technology

- Raised low scratch power dot side is engineered to quickly and effectively cut through stubborn baked-on or burnt-on food.
- Low scratch mineral within the dots is designed to minimize scratching on sensitive surfaces like stainless steel.
- Power dot side is engineered for quicker rinsing and minimizing food particles from getting trapped in the web.

### 2-in-1 Cleaning Tool

- Dual purpose: only one scour sponge needed for multiple jobs.
- Power dot side combines high quality resin and low scratch minerals to provide medium duty cleaning performance.
- Cellulose sponge quickly wipes up spills and carries cleaning solutions.
- Antimicrobial technology resists the growth of odor-causing bacteria within the cellulose sponge.

### Hexagon Shape

- Designed to fit comfortably in your hand; does not need to be cut down.
- Extra corners help clean hard-to-reach areas.

## Applications

Test on an inconspicuous area prior to first use.

General purpose cleaning uses include:

- Kitchen – stainless steel surfaces & appliances, coolers, ceramic tile, countertops, and maintenance equipment
- Bathrooms – sinks, faucets, porcelain, and ceramic
- General – elevator doors, doors, kick plates, desktops, floors, walls, drinking fountains, ceramic tile, and glass

## Product Specifications

- Shape: Hexagon
- Dimensions: length 4.45 in, 113 mm (corner to corner); width 3.85 in, 98 mm (side to side)
- Color: blue
- Composition: power dot side—synthetic fibers, abrasive particles, and resin; and cellulose sponge

## General Use Directions

### IMPORTANT NOTE

The cellulose sponge does not disinfect wiped surfaces; antimicrobial technology resists the growth of odor-causing bacteria within the cellulose sponge material itself.

The scour sponge can be used wet or dry.

1. Hold the scour sponge with one hand. Both sides of the scour sponge can be used to scour depending upon the application. For most cases, scour using a circular scrubbing motion.
2. For sticky, tough, and/or baked-on food, use the power dot side to cut through thick layers and dislodge large particles. Flip the scour sponge over and use the cellulose sponge side to wipe surfaces clean of any residue.
3. Rinse off scrubbed areas with clean water or wipe with a clean sponge.

# Scotch-Brite™ Low Scratch Scour Sponge 3000HEX

## Scour Sponge Cleaning Directions

**NOTE:** Cellulose sponge does not require bleaching. Use of chlorine bleach may interfere with the antimicrobial technology within the cellulose.

Proper cleaning of the Scotch-Brite™ Low Scratch Scour Sponge 3000HEX will help extend its life. Once the power dots start to wear down or the cellulose sponge side appears noticeably worn, discard in the regular kitchen trash.

Scour sponges can be rinsed with warm or hot water or soaked in a cleaning solution to dissolve caked-on soil and grease.

### Scour Sponge Cleaning by Hand

- Spray or rinse off excess food debris from the scour sponge using a dish sprayer or sink faucet.
- Wash the scour sponge in soapy water to remove any remaining food debris and grease.
- Rinse the scour sponge with clean water, making sure no food debris is left on the scour sponge. Squeeze excess water from the scour sponge and allow to air dry.

If desired, soak the scour sponge in sanitizer solution. After soaking, squeeze excess solution from the scour sponge, rinse and allow to air dry.

### Scour Sponge Cleaning by Dishwasher

- Spray off or rinse excess food debris from the scour sponge using a dish sprayer or sink faucet. Remove any remaining food debris by hand.
- Place the scour sponge in a dishwasher and make sure both sides are exposed to washing.
- After washing, take the scour sponge out of the dishwasher and allow to air dry.

## Precautionary Summary

Power dot side:

- Use caution and test surfaces prone to scratching prior to extensive use.
- Not recommended for polished surfaces where minor scratching is undesirable.
- May damage or remove non-stick coatings.

## Health and Safety

### CAUTION

When handling any chemical products, read the manufacturers' container labels and the Safety Data Sheets (SDS) for important health, safety and environmental information. To obtain SDS sheets for 3M products, go to [3M.com/SDS](https://www.3m.com/SDS), or request by mail. In case of an emergency, call 1-888-364-3577 or 1-651-737-6501. When using any equipment, always follow the manufacturers' instructions for safe operation.

### Commercial Solutions Division

3M Center, Building 220-12E-04  
St. Paul, MN 55144

1-800-698-4595  
[3M.com/powerdots](https://www.3m.com/powerdots)

3M, Scotch-Brite and the shape of the scouring sponge are trademarks of 3M. Used under license in Canada.  
Please recycle. Printed in the USA.  
© 3M 2018. All rights reserved. 78-8134-0787-7 May 2018.

## Technical Information

Technical information and data, recommendations, and other statements provided by 3M are based on information, tests, or experience which 3M believes to be reliable, but the accuracy or completeness of such information is not guaranteed. Such technical information and data are intended for persons with knowledge and technical skills sufficient to assess and apply their own informed judgment to the information. The typical values shown should not be used for the purpose of specification limits. If you have questions about this product, contact the **Customer Service Department at 1-800-852-9722**.

## Product Use

Many factors beyond 3M's control and uniquely within user's knowledge and control affect the use and performance of a 3M product in a particular application. Given the variety of factors that can affect the use and performance of a 3M product, the user is solely responsible for evaluating the 3M product and determining whether it is fit for a particular purpose and suitable for the user's method of application.

## Warranty

3M warrants that each 3M product will be free from defects in material and manufacture for 90 days from the date of purchase from a 3M authorized distributor. 3M MAKES NO OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

## Limited Remedy

If a 3M product does not conform to this warranty, the sole and exclusive remedy is, at 3M's option, replacement of the 3M product or refund of the purchase price.

## No Extension of Warranty

In the case of an approved warranty claim, the replacement product will carry only the remaining term of the original warranty period.

## Limitation of Liability

Except where prohibited by law, 3M will not be liable for any loss or damage arising from the 3M product, whether direct, indirect, special, incidental or consequential, regardless of the legal theory asserted.

