





1 Clean surface with rubbing alcohol. Do not use household cleaners.

用火酒輕輕地擦拭牆壁，待乾。不要使用家居清潔液。

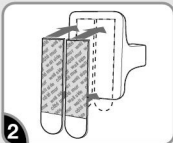

2 Separate strips. Remove red liners. Press adhesive to broom gripper.

分開膠貼，撕去紅字底紙，將膠貼貼於拖把夾背板。

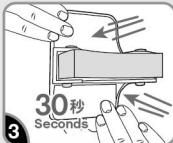

3 Remove black liners. Press firmly to wall for 30 seconds. Wait 1 hour before use.


撕去黑字底紙，將拖把夾貼於牆上，按壓30秒。靜置1小時便可以使用。



4 Push broom in to hold. Pull broom out to release.

使用時，先將軟夾攤平，將拖把置於軟夾向前推便可。相反，手握拖把拉出便可取出拖把。

REMOVE 移除步驟

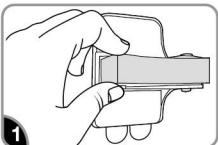


1 Hold broom gripper gently in place.

扶緊拖把夾，準備拉長膠貼。



2 Never pull the strip towards you! Always pull straight down.

需垂直拉長膠貼，直角拉扯有機會將膠貼扯斷。

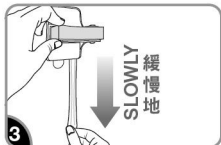

3 Stretch the strip slowly against the wall at least 38 cm (15 in) to release.

緩慢地拉長膠貼直至鬆脫，通常最少需拉長38厘米(15吋)。

Designed to hold mops and brooms with handle diameters of 2 cm to 2.5 cm (0.8" to 1.0").

Gripper can be reused with Command® Large Refill Strips.

本拖把夾適用於把手直徑2-2.5厘米(0.8-1吋)的拖把或掃把。

若需移除，可配搭無痕™大型膠貼重新安裝。

CAUTION:

Do not use on wallpaper, delicate painted surfaces, or porous surfaces. May not adhere well to vinyl surfaces. Do not hang valuable or irreplaceable items. Do not hang items over bed. Use only one gripper item hung. Hold gripper when pull strip. Use indoors 10°C - 40°C.

警告:

請勿使用於牆紙、不平整或脆弱之油漆表面、多孔的表面，或乙烯基表面。請勿懸掛珍貴或易碎之物品，以免因使用不當掉落發生危險。請勿懸掛物品於坐處或床上。不要同時使用多個拖把夾懸掛一件物品。當拉去膠貼時，請輕扶拖把夾。請於10°C至40°C之室內表面使用，以達最佳效果。

Limited Warranty:

This 3M product will be free from defects in material and manufacture. If this product is defective, your exclusive remedy shall be, at 3M's option, replacement of the product.

Limitation of Liability:

3M will not be liable for any loss or damage arising from this product, whether direct, indirect, special, incidental or consequential.

補償限制聲明:

此產品不會存在原料及製造上的缺陷。如產品出現損壞，顧客可獲得的補償，只限一個相同之完好產品。3M並保留最終之決定權。

責任限制聲明:

任何於使用此產品時所引致的損失或損傷，不論直接、間接、特殊、偶然性或附帶性的，3M均不會承擔任何責任。

一切內容以英文為準

3M和Command為3M公司的註冊商標。

© 3M 2015

保留所有權利。

3M香港有限公司

消費產品事業部

香港屈臣道15號

維多利中心5樓

電話: 2806 6111



0 5 114 1 40947 4

拖把夾於中國製造/膠貼於美國製造。