

Care and Maintenance

3M[™] Versaflo[™] M-400 Series Helmets

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance.

▶ Before Use

- Inspect for damage and replace if necessary:
- Outer shroud ensure it is free from tears and its gasket is inserted properly
- Inner collar
- Visor frame to jaw gasket
- Visor surround and gasket
- Helmet shell
- Forehead seal
- Head harness
- Comfort pad/s
- Replace Peel Off visor covers (if used).

Monthly

• Carry out all the 'Before Use' inspections and create record of this monthly check.

After Use

- Clean with cloth dampened with a mild solution of water and liquid
- Disinfect with 3M 105 Wipes.
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents.

▶ Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.

Further Information and Advice


If you require additional guidance on the Care and Maintenance of your 3M Powered and Supplied Air Equipment, please contact the Helpline or your local 3M representative.

11

to ensure correct levels of protection.



To download this poster please visit: www.3M.co.uk/maintenancepack or

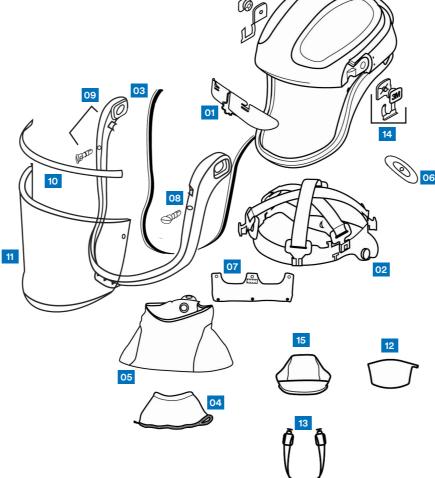

Replace all damaged parts immediately



3M Personal Safety Division 3M United Kingdom plc 3M Centre, Cain Road Bracknell, Berkshire RG12 8HT United Kingdom Tel: 0870 60 800 60 www.3M.co.uk/safety





	Description	Part N°
	Versaflo M-406 Respiratory Helmet, with Coated Visor and High Durability Shroud	M-406
	Versaflo M-407 Respiratory Helmet, with Coated Visor and Flame Resistant Shroud	M-407
	Accessories and spare parts	
01	Replacement Airflow Deflector	M-316
)2	Head Suspension	M-350
)3	Jaw Gasket	M-441
)4	Inner Collar	M-444
)5	Flame Resistant Outer Shroud (M-407)	M-447
)5	High Durability Outer Shroud (M-406)	M-448
)6	Size Reducing Ratchet Comfort Pad	M-956
)7	Forehead Comfort Pad	M-957
8	Visor Frame Buttons	M-919
9	Visor Frame Assembly	M-920
0	Visor Gasket	M-921
11	Molten Metal Visor	M-925
11	Coated Visor	M-927
2	Peel-Off Visor Covers	M-928
3	Chin Strap	M-958
4	Visor Pivot Kit	M-960
15	Flame Resistant Headtop Cover	M-972