

How-To Use

PACKAGE INCLUDES:



Temporary Spot Marker(s)
 To help find your hanging spot.
Marker does NOT hold frame up.



3M™ CLAW Drywall Picture Hanger(s)
 To hang your frame.

1 IDENTIFY FRAME HARDWARE

SAWTOOTH	D-RING	WIRE
<p>Remove liner from gray side, exposing adhesive.</p> <p>Stick marker to frame so that top point is where a nail would normally go.</p> <p>Remove liner from white side.</p>	<p>Mark a dot on the frame where a nail would normally go and flip down D-ring.</p> <p>Remove liner from gray side and stick marker to the frame so that the top points to your dot.</p> <p>Remove liner from white side. Repeat on the other D-ring.</p>	<p>Pull wire up as high as you can and mark a dot where a nail would normally go.</p> <p>Remove liner from gray side and stick marker to the frame so that the top points to your dot.</p> <p>Remove liner from white side.</p>

CONTINUE TO STEP 2

2 MARK HANGING SPOT

CAUTION

Marker is for temporary use, not intended to hold frame to wall.

Lightly touch marker to wall and pull back without letting go of frame.

Mark the wall in the bottom notch of marker.

IMPORTANT

Remove marker from wall.

3 INSTALL HANGER

Align notch in bottom of hanger to dot on wall.

First, push **bottom part** of hanger straight into wall with thumbs.

Then, push **top part** in.

IMPORTANT

Continue to push until top and bottom parts are **completely flush** against wall.

Hang frame on hook.

REMOVAL

Slide a flat head screwdriver between the hook and wall, then gently pull away.

Please see backcard for additional information.

Issue Date: 2020-10
 34-8726-4070-0