

Description:

The Scotch-Brite™ Power Pad 2000 is an all-purpose hand pad which scours faster but scratches less than many conventional scouring products. This pad is made from high quality fibres, scouring particles and resin.

Special Features:

- Unique bow-tie shape for ease of handling.
- Scours 2-4 times faster than conventional commercial scouring pads, and is 6-10 times less abrasive than other conventional commercial scouring pads.
- Fibre: Durable synthetic fibers that are crimped and heat set to create strong web.
- Scouring Particles: Unique soil-removing particles for effective scouring, cleaning, and scrubbing. Particles are evenly distributed throughout the pad to ensure effective, consistent scouring, and lasting performance throughout the life of the pad.
- Resin: High quality bonding resin system designed to provide resistance to degradation from exposure to hot water, detergents and normal cleaning liquids.

Applications:

Test in an inconspicuous area prior to use.

Use for cleaning a wide variety of surfaces. Ideal for cleaning surfaces where minimal scratching is desired.

Kitchen: Stainless steel surfaces and appliances, heavily baked-on food soil on pots and pans, cooking appliances, coolers, ceramic tile, countertops, and maintenance equipment.

Bathrooms: Sinks, faucets, porcelain and ceramic.

General: Elevator doors, doors, kick plates, desktops, floors, walls, drinking fountains, lockers, ceramic tile, and glass.

Packaging:

20 pads/case

General Use Directions:

The pad can be used wet or dry.

1. Hold pad with one hand.
2. Place either side of the pad against the surface to be cleaned. Apply desired pressure and scrub the area in circular motion.

3. Rinse off scrubbed areas with clean water or wipe off with clean, damp cloth.
4. Clean pad as necessary after use.

Pad Cleaning Instructions:

Cleaning the pad provides multiple uses. Used and/or worn out pads can be disposed of in regular kitchen trash.

Pads can be rinsed with warm or hot water or soaked in a cleaning solutions to dissolve caked-on soil and grease.

Pad cleaning by hand:

1. Spray or rinse off excess food debris from pad using a dish sprayer or sink faucet.
2. Wash the pad in soapy water to remove any remaining food debris and grease. Remove embedded food debris from pad by hand.
3. Rinse pad with clean water. Make sure no food debris is left on the pad. Squeeze excess water from the pad and allow to air dry.

If desired, soak pad in sanitizer solution. After soaking, squeeze excess solution from the pad, rinse and allow to air dry.

Pad cleaning by dishwasher:

1. Spray off or rinse excess food debris from pad using dish sprayer or sink faucet. Remove stubborn food debris such as cheese from pad by hand.
2. Place pad in dishwasher and make sure both sides of the pad are exposed to washing.

After washing, take pad out of dishwasher and allow to air dry.

Product Specification:

(Typical Values)

1. Size:
 - Length: 5.5 inches
 - Width: 3.9 inches
 - Thickness: 0.4 inches
2. Colour: dark blue

Precautionary Summary:

- Do not use on soft metal and plastic surfaces, painted surfaces, or other surfaces that are easily scratched.

Important:

The information provided in this report is believed to be reliable; however, due to the wide variety of intervening factors, 3M does not warrant that the results will necessarily be obtained. All details concerning product specifications and terms of sale are available from 3M.



3M Commercial Solutions Division
PO Box 5757
1840 Oxford Street East
London, ON N6A 4T1
Phone 1-800-364-3577
Web: 3MCanada.ca