

Quick Start Guide

3M™ Drive-Thru Headset G5

Buttons



Volume

Adjust Volume Level

Lane 2

Answer Lane 2 Order Point in a Dual Lane

Paging

Talk to Other Headsets

Lane 1

Answer Lane 1 Order Point in Dual Lane

• Feather-touch buttons

sense finger pad for a touch versus push

- Vibration confirms that the button has been pressed

NOTE: In a Single Lane operation, use Lane 1 or Lane 2 touch zones to answer the Order Point.

Light on Microphone Boom



• **Green (Steady) Light:** Lane 1 no car present, stand by



• **Red/Green (Steady) Light:** Lane 2 (Dual Lane) no car present, stand by



• **Blue (Flashing) Light :** Vehicle arrived, but not answered



• **Blue (Steady) Light:** Vehicle present and answered




• **Red (Steady) Light:** Talk (either lane or page)

Headset Charging Station and Batteries



Battery

Four lights indicate 100% fully charged

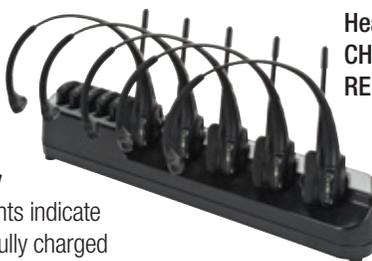

Headset Charging Station
CHARGE HEADSETS WITHOUT REMOVING BATTERIES

Battery Removal



1



Place pointer finger between Control Pod and Battery; place thumb on the battery latch.

2



Using a pinching motion, pinch and gently pull battery straight out.

Contact your 3M Representative Today

1-800-328-0033 • www.3M.com/drivethru

3M Commercial Solutions Division

3M Center, Bldg 233-2N-21
St. Paul, MN 55144-1000
www.3M.com/drivethru

3M is a trademark of 3M.
Used under license in Canada.
Please recycle. Printed in U.S.A.
© 3M 2014. All rights reserved.
78-8134-0599-6

