

Instructions

3M-Matic™ 7000a-7000a3 Pro

Type 32600

Adjustable Case Sealer

Serial #: _____

For reference, record machine serial number here.

Important Safety Information

BEFORE INSTALLING OR OPERATING THIS EQUIPMENT

Read, understand and follow all safety and operating instructions.

Spare Parts

It is recommended you immediately order the spare parts listed in the “Spare Parts/Service Information” section. These parts are expected to wear through normal use, and should be kept on hand to minimize production delays.



This instruction manual covers safety aspects, handling and transport, storage, unpacking, preparation, installation, operation, adjustments, maintenance, troubleshooting, repair work and servicing plus parts list of the 3M-Matic™ 7000a-7000a3 Pro Adjustable case sealer.

3M Industrial Specialties Division
3M Center
St. Paul, MN 55144-1000

Edition June 2026

Copyright 3M - June 2026
All rights reserved

The manufacturer reserves the right to change the product at any time without notice.

Replacement parts and service information

To Our Customers:

This is the 3M-Matic™/AccuGlide™/Scotch® equipment you ordered.
It has been set up and tested in the factory with Scotch® Tapes.

Included with each machine is an Instructions and Parts List Manual.

Technical Assistance / Replacement Parts and Additional Manuals:

For technical assistance, contact our help line at 1-800-328-1390.

Provide the customer support coordinator with the model/machine name,
machine type, and serial number that are located on the identification plate
(For example: Model 7000a - 7000a3 Pro, Type 32600 - Serial Number 13282).

To order replacement parts, contact us:

CSPD Combi Packaging Systems LLC.
6299 Dressler Road NW
North Canton, OH 44720
store.combi.com/CSPD/PublicStore/

Phone: 1-800-344-9883
Fax: 1-877-847-5883
e-mail: CSPD-CSR@combi.com
www.combi.com

Identification Plate

	3M Company - St. Paul MN 55144 USA 3M - Matic™	Elec. Drawing Schéma électrique 	Conforms to / Conforme à la norme UL 963 Certified to / Certifié selon la norme CSA 22.2 No 68 Indoor Industr. use only / Utilisation industrielle intérieure seulement Control No / Numéro de contrôle 4000563			
	Model / Modèle	Part Number / Numéro de pièce	VAC / V.c.a.	Hertz	Ampère	
Type	Serial Number/Numero de série	Yr/Année	Phase	Watts	Volume	

Minimum billing on replacement part orders will be \$50.00

Replacement part information and pricing available on request

There is a 15% restocking fee (per order) on returned parts

Note: Outside of the United States, for replacement parts and ordering
information please contact your local /regional 3M or 3M representative.


Replacement parts and service information

To Our Customers:

This is the 3M-Matic™/AccuGlide™/Scotch® equipment you ordered. It has been set up and tested in the factory with Scotch® tapes. If any problems occur when operating this equipment and you desire a service call or phone consultation, call, write, or fax the appropriate number listed below.

Included with each machine is an Instructions and Parts List Manual.

Service, replacement parts, and additional manuals available direct from:



Order parts by part number, part description, and quantity required.
Also, when ordering parts or additional manuals, include model/machine name, machine type, and serial number that are located on the identification plate.

Table of Contents:

7000a-7000a3 Pro Adjustable Case Sealer

7000a-7000a3 Pro Adjustable Case Sealer	Page
Cover Page	
Replacement Parts and Service Information	iii– v
Table of Contents	vii – xi
Acronyms and Abbreviations	xii
1. Introduction	
1.1 Manufacturing Specifications / Description / Intended Use	1
1.2 How to Read and Use the Manual	2
1.2.1 Importance of the Manual	2
1.2.2 Manual Maintenance	2
1.2.3 Consulting the Manual	2
1.2.4 How to Update the Manual in Case of Modifications	2
2. General Information	
2.1 Identification Data	3
2.2 After-Sale Service	3
2.3 Warranty / Contents	4
3. Safety	
3.1 General Safety Information	5
3.2 Signal Words Explanation	5
3.3 Table of Warnings	6 – 7
3.4 Operator's Qualifications Definition	8
3.5 Number of Operators	8
3.6 Safe Use of the Machine Instructions	8
3.7 Residual Hazards	8
3.8 Prevent Other Hazards — Recommendations and Measures	8
3.9 Personal Safety Measures	8
3.10 Incorrect / Predictable Actions Not Allowed	8
3.11 Operator's Required Skill Levels	9
3.12 Component Locations	10
3.13 Table of Warnings and Replacement Labels	11
4. Technical Specifications	
4.1 Power Requirements	13
4.2 Operating Rate	13
4.3 Operating Conditions	13
4.4 Machine Noise Levels	13
4.5 Set-Up Recommendations	14
4.6 Tape	14
4.7 Tape Width	14
4.8 Tape Roll Diameter	14
4.9 Tape Application Leg Length — Standard	14
Tape Application Leg Length — Optional	14
4.10 Box Board	14
4.11 Box Weight and Size Capacities	14 – 15
4.12 Machine Dimensions	16

Table of Contents *(continued)*:

7000a-7000a3 Adjustable Case Sealer

5. Shipment, Handling, and Storage	
5.1 Packed Machine Shipment and Handling	17
5.2 Overseas Shipment Packaging (Optional)	17
5.3 Handling and Transportation of Uncrated Machine	17
5.4 Machine Storage	17
6. Unpacking	
6.1 Uncrating	18
6.2 Packaging Materials Disposal	18
7. Installation	
7.1 Operating Conditions	19
7.2 Space Requirements for Machine Operation and Maintenance	19
7.3 Tool Kit Supplied with the Machine	19
7.4 Machine Positioning	19
7.5 Plastic Ties Removal	20
7.6 Assembly Completion	20
7.7 Taping Heads Completion	21
7.8 Outboard Tape Roll Holder	21
7.9 Preliminary Electric Inspection	21
7.10 Main Power Machine Connection and Inspection	21
8. Theory of Operation	
8.1 Working Cycle Description	22
8.2 Running Mode Definition	22
8.3.1 Normal Stop Procedure	22
8.3.2 Emergency Stop	22
9. Controls	
9.1 Box Width Adjusting Knobs	23
9.2 Box Height Adjusting Crank	23
9.3 On/Off Main Switch	23
9.4 Emergency Stop Button (Latching)	23
10. Safety Devices	
10.1 Blade Guards	24
10.2 Emergency Stop Button	24
10.3 Electric System / Circuit Breaker	24
11. Set-Up and Adjustments	
11.1 Box Width Adjustment	25
11.2 Box Height Adjustment	25
11.3 Top Flap Compression Roller Adjustment	25
11.4 Changing the Tape Leg Length	25
11.5 Special Set-Up Procedure — Column Stops and Outer Column Repositioning	26 – 27

Table of Contents *(continued)*:

7000a-7000a3 Adjustable Case Sealer

(For Taping Head information, see Manual 2 or 3: AccuGlide™ 3 Taping Heads, 2 Inch or 3 Inch)

12. Operation	
12.1 Operator's Correct Working Position	28
12.2 Starting the Machine	28
12.3 Starting Production	28
12.4 Tape Replacement	28
12.5 Box Size Adjustment	28
12.6 Cleaning	28
12.7 Table of Adjustments	28
12.8 Safety Devices Inspection	28
12.9 Trouble Shooting	29 – 30
12.10 Operation Warnings	31
13. Maintenance	
13.1 Safety Measures (see section 3).	32
13.2 Tools and Spare Parts Supplied with Machine	32
13.3 Maintenance Operations — Recommended Inspections/Frequency	32
13.4 Inspections Performed Before/After Every Maintenance Operation	32
13.5 Safety Features (Inspection Efficiency).	32
13.6 Machine Cleaning	32
13.7 Cutter Blade Cleaning	32
13.8 Drive Belt Replacement	33
13.9 Drive Pulley Ring	34
13.10 Box Drive Belt Tensioning	34- 35
13.11 List of Maintenance Operations.	36
14. Additional Instructions	
14.1 Machine Disposal Information	37
14.2 Fire emergency	37
15. Enclosures and Special Information	
15.1 Statement of Conformity	37
15.2 Hazardous Substances Emission	37
16. Technical Documentation and Information	
16.1 Electric Diagrams	38
16.2 Spare Parts / Ordering	39 – 41

Taping Head Information (See applicable taping head manual)

Abbreviations and Acronyms

List of Abbreviations/Acronyms


3M-Matic	Trademark of 3M St. Paul, MN 55144-1000
AccuGlide	Trademark of 3M St. Paul, MN 55144-1000
Scotch	Trademark of 3M St. Paul, MN 55144-1000
Drw.	Drawing
Ex.	For Example
Fig.	Exploded View Figure no. (spare parts)
Figure	Illustration
Max.	Maximum
Min.	Minimum
Nr.	Number
N/A.	Not Applicable
OFF.	Machine Not Operating
ON	Machine Operating
PLC.	Programmable Logic Control
PP	Polypropylene
PU/PU Foam	Polyurethane Foam
PTFE.	Polytetrafluorethelene
PVC.	Polyvinyl chloride
W	Width
H	Height
L	Length

1. Introduction

1.1 Manufacturing Specifications / Description / Intended Use

The 3M-Matic™ 7000a-7000a3 Pro Adjustable Case Sealer with AccuGlide™ 3 Taping Heads is designed to apply a “C” clip of Scotch® pressure-sensitive film box sealing tape to the top and bottom center seam of regular slotted containers. The 7000a-7000a3 Pro is manually adjustable to a wide range of box sizes (see “Specifications Section – Box Weight and Size Capacities”).

The 3M-Matic™ case sealing machines have been designed and manufactured in compliance with the legal requirements at the date of inception.

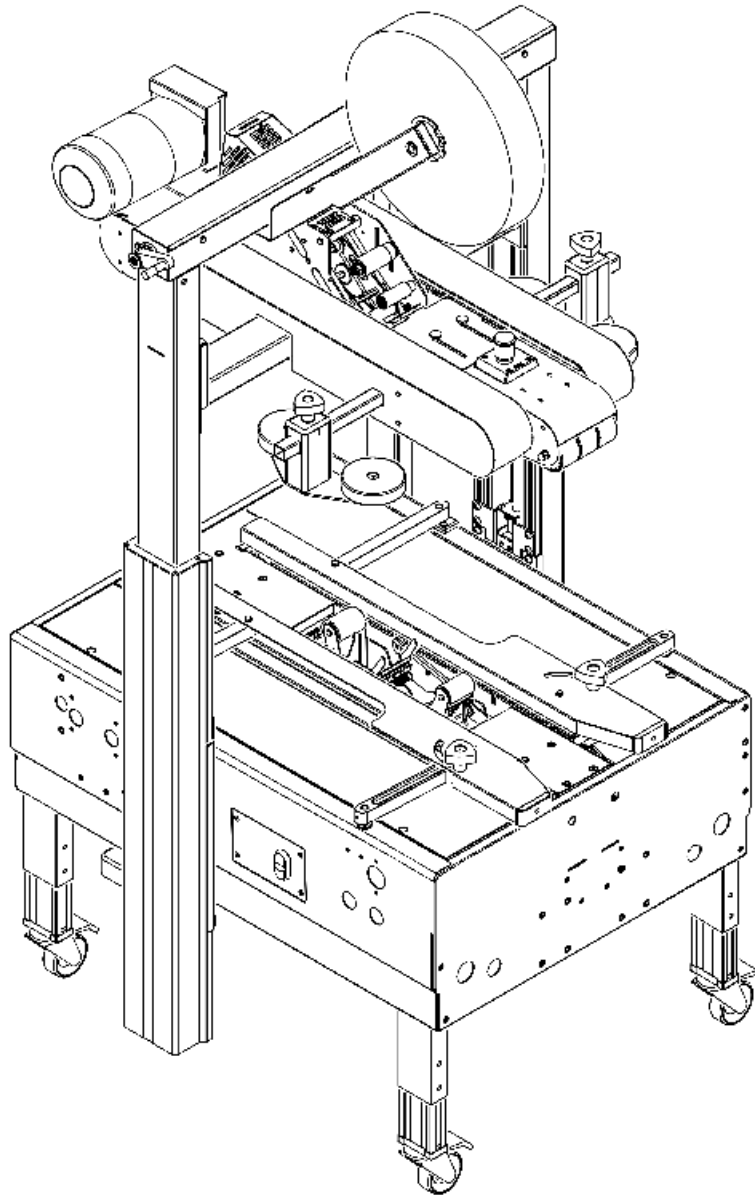

3M-Matic™ 7000a-7000a3 Pro Adjustable Case Sealer, Type 32600

1. Introduction *(continued)*

1.2 How to Read and Use the Instruction Manual

This instruction manual covers safety aspects, handling and transport, storage, unpacking, preparation, installation, operation, set-up and adjustments, technical and manufacturing specifications, maintenance, troubleshooting, repair work and servicing, electric diagrams, warranty information, disposal (ELV), a definition of symbols, plus a parts list of the 3M-Matic™ 7000a-7000a3 Pro Adjustable Case Sealer.

3M Industrial Specialties Division

3M Center,

St. Paul, MN 55144-1000 (USA)

Edition June 2026 © 3M 2026 All rights reserved.

The manufacturer reserves the right to change the product at any time without notice.

Publication © 3M 2021. 44-0009-2132-8.

1.2.1 Importance of the Manual

The manual is an important part of the machine; all information contained herein is intended to enable the equipment to be maintained in perfect condition and operated safely. Ensure that the manual is available to all operators of this equipment and is kept up to date with all subsequent amendments. Should the equipment be sold or disposed of, please ensure that the manual is passed on. Electrical and pneumatic diagrams are included in the manual. Equipment using PLC controls and/or electronic components will include relevant schematics or programs in the enclosure and in addition, the relevant documentation will be delivered separately.

1.2.2 Manual Maintenance

Keep the manual in a clean and dry place near the machine. Do not remove, tear, or rewrite parts of the manual for any reason. Use the manual without damaging it. In case the manual has been lost or damaged, ask your after sale service for a new copy.

1.2.3 Consulting the Manual

The manual is composed of:

- Pages which identify the document and the machine
- Index of the subjects
- Instructions and notes on the machine
- Enclosures, drawings and diagrams
- Spare parts (last section)

All pages and diagrams are numbered. The spare parts lists are identified by the figure identification number. All the notes on safety measures or possible dangers are identified by the symbol:




1.2.4 How to Update the Manual in Case of Modifications to the Machine

Modifications to the machine are subject to manufacturer's internal procedures. The user receives a complete and up-to-date copy of the manual together with the machine. Afterwards the user may receive pages or parts of the manual which contain amendments or improvements made after its first publication. The user must use them to update this manual.

2. General Information

2.1 Data Identifying Manufacturer and Machine

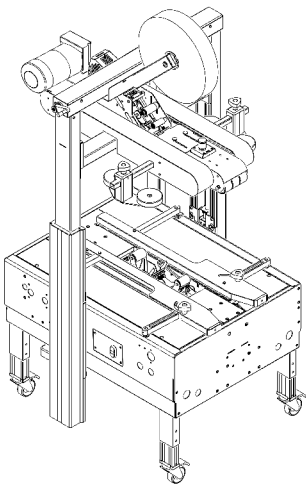

Identification Plate

3M	3M Company - St. Paul MN 55144 USA 3M - Matic™	Elec. Drawing Schéma électrique 	Conforms to / Conforme à la norme UL 963 Certified to / Certifié selon à la norme CSA 22.2 No 68 Indoor Industr. use only / Utilisation industrielle intérieure seulement Control No / Numéro de contrôle 4000563				 Intertek
Model / Modèle	Part Number / Numéro de pièce	VAC / V.c.a.	Hertz	Ampère	Compressed Air/Air Comprimé		
Type	Serial Number/Numero de série	Yr/Année	Phase	Watts	Volume		

2.2 Data for Technical Assistance and Service

**Agent/Distributor or
Local After Sale Service:**

2. General Information *(continued)*

2.3 Warranty

Equipment Warranty and Limited Remedy: THE FOLLOWING WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND ANY IMPLIED WARRANTY ARISING OUT OF A COURSE OF DEALING, A CUSTOM OR USAGE OF TRADE:

3M sells its 3M-Matic™ 7000a-7000a3 Pro Adjustable Case Sealer, Type 32600 with the following warranties:

1. The drive belts and the taping head knives, springs and rollers will be free from all defects for ninety (90) days after delivery.
2. All other taping head parts will be free from all defects for three (3) years after delivery.
3. All other parts will be free from all defects for two (2) years after delivery.

If any part is proved to be defective within its warranty period, then the exclusive remedy and 3M's and seller's sole obligation shall be, at 3M's option, to repair or replace the part, provided the defective part is returned immediately to 3M's factory or an authorized service station designated by 3M. A part will be presumed to have become defective after its warranty period unless the part is received or 3M is notified of the problem no later than five (5) calendar days after the warranty period. If 3M is unable to repair or replace the part within a reasonable time, then 3M at its option, will replace the equipment or refund the purchase price. 3M shall have no obligation to provide or pay for the labor required to install the repaired or replacement part. 3M shall have no obligation to repair or replace (1) those parts failing due to operator misuse, carelessness, or due to any accidental cause other than equipment failure, or (2) parts failing due to non-lubrication, inadequate cleaning, improper operating environment, improper utilities or operator error.

Limitation of Liability: 3M and seller shall not be liable for direct, indirect, special, incidental or consequential damages based upon breach of warranty, breach of contract, negligence, strict liability or any other legal theory.

The foregoing Equipment Warranty and Limited Remedy and Limitation of Liability may be changed only by a written agreement signed by authorized officers of 3M and seller.

Contents: 7000a-7000a3 Pro Adjustable Case Sealer

- (1) 7000a-7000a3 Pro Adjustable Case Sealer, Type 32600
- (1) Upper Assembly Height Adjustment Crank Hardware
- (1) Tool and Spare Parts Kit
- (1) Instruction and Parts Manual


3. Safety

3.1 General Safety Information

Read all the instructions carefully before starting work with the machine; please pay particular attention to sections marked by the symbol:



Figure 3-1

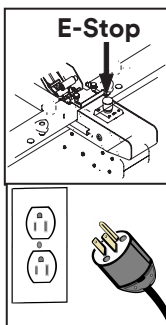

The machine is provided with a LATCHING EMERGENCY STOP BUTTON (Figure 3-1); when this button is pressed, it stops the machine at any point in the working cycle. Maintain clear access to power cord while machine is operating.

Disconnect plug from power source before machine maintenance (Figure 3-1). Also disconnect air if the machine has a pneumatic system.

Keep this manual in a handy place near the machine. This manual contains information that will help you to maintain the machine in a good and safe working condition.

3.2 Explanation of Signal Word and Possible Consequences



This safety alert symbol identifies important messages in this manual. READ AND UNDERSTAND THEM BEFORE INSTALLING OR OPERATING THIS EQUIPMENT.




Caution

Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury and/or property damage.




Warning


Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury and/or property damage.

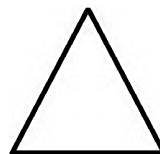


Caution
Prohibition

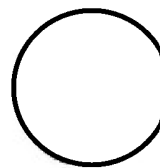


Information

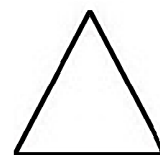


Electrical Supply Disconnect before work or servicing machine

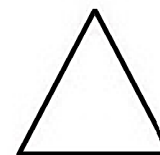


Warning!
Sharp knife



Emergency Stop (Latching)

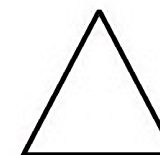

Keep hands out of moving parts

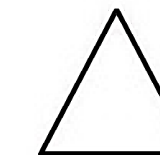

Physical Earth connection



3. Safety *(continued)*




3.3 Table of Warnings

 Warning
• To reduce the risk associated with mechanical and electrical hazards: - Read, understand, and follow all safety and operating instructions before operating or servicing the case sealer. - Allow only properly trained and qualified personnel to operate and service this equipment.

 Warning
• To reduce the risk associated with hazardous voltage: - Position electrical cord away from foot and vehicle traffic.

 Warning
• To reduce the risk associated with pinches, entanglement and hazardous voltage: - Turn electrical supply off and disconnect before performing any adjustments, maintenance or servicing the machine or taping heads.

 Warning
• To reduce the risk associated with pinches and entanglement hazards: - Do not leave the machine running while unattended. - Turn the machine off when not in use. - Never attempt to work on any part of the machine, load tape, or remove jammed boxes from the machine while the machine is running.

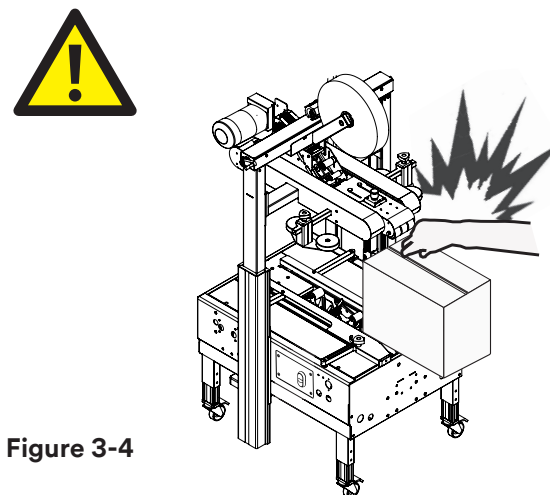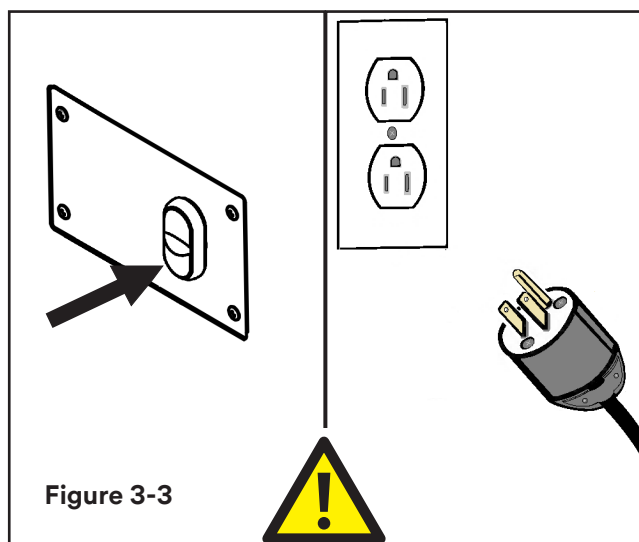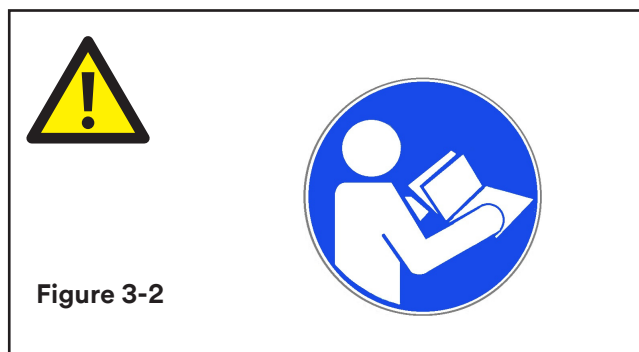

IMPORTANT! Cavity in the conveyor bed. Never put your hands inside any part of the machine while it is working. Serious injury may occur (Figure 3-4).

3. Safety (continued)



Warning

- To reduce the risk associated with sharp blade hazards:
 - Keep hands and fingers away from tape cutoff blades under orange blade guards. The blades are extremely sharp.

Important! Tape cutting blade. Never remove safety device which covers blade on top and bottom taping units. Blades are extremely sharp. Any error may cause serious injuries (**Figure 3-5**).



Warning

- To reduce the risk associated with fire and explosion hazards:
 - Do not operate this equipment in potentially flammable / explosive environments.



Warning

- To reduce the risk associated with muscle strain:
 - Use appropriate rigging and material handling equipment when lifting or repositioning this equipment.
 - Use proper body mechanics when removing or installing taping heads that are moderately heavy or may be considered awkward to lift.



Caution

- To reduce the risk associated with pinch and entanglement hazards:
 - Keep hands clear of the upper head support assembly as boxes are transported through the machine.
 - Keep hands, hair, loose clothing, and jewelry away from box compression rollers and all moving parts.
 - Always feed boxes into the machine by pushing only from the end of box.

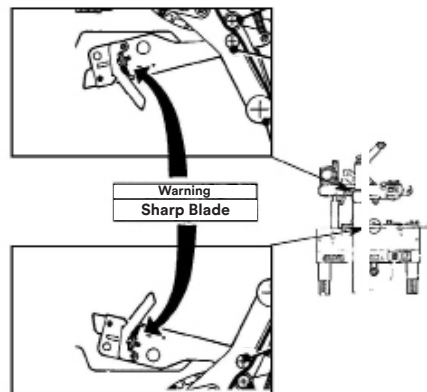


Figure 3-5

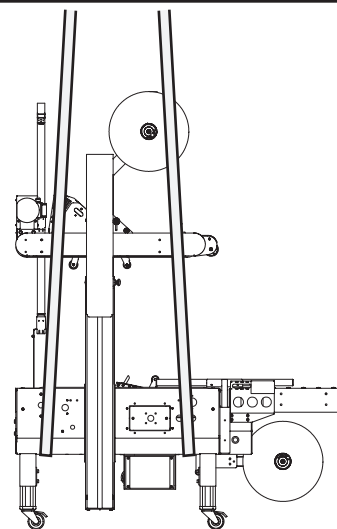


Figure 3-6

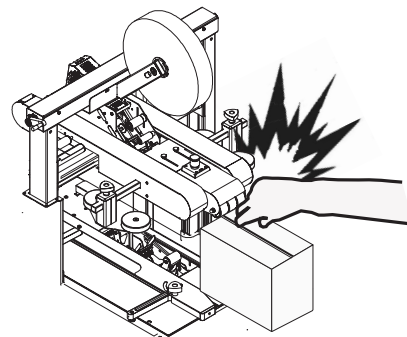


Figure 3-7

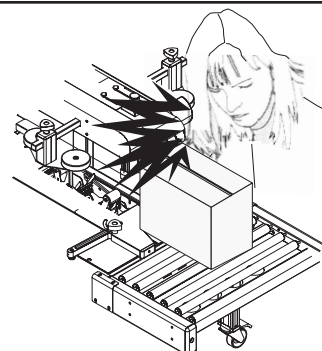


Figure 3-8

3. Safety *(continued)*

3.4 Operator's Qualifications

- Machine Operator
- Mechanical Maintenance Technician
- Electrical Maintenance Technician
- Manufacturer's Technician/Specialist
(See Section 3)

3.5 Number of Operators

The operations described below have been analyzed by the manufacturer; the recommended number of operators for each operation provides the best and safest work performance.

Note: A smaller or greater number of operators could be unsafe.

3.6 Instructions for a Safe Use of the Machine / Definition of Operator's Qualifications

Only persons who have the skills described in the skill levels section should be allowed to work on the machine. It is the responsibility of the user to appoint the operators having the appropriate skill level and the appropriate training for each category of job.

3.7 Residual Hazards

The case sealer **7000a-7000a3 Pro** incorporates various safety protections which should never be removed or disabled. It is essential that the operator and service personnel be warned that hazards exist which cannot be eliminated:

3.8 Recommendations and Measures to Prevent Other Hazards which Cannot be Eliminated

- The operator must stay on the working position shown in the Operation Section. He must never touch the running driving belts or put his hands inside any cavity.
- The operator must pay attention to the blades during the tape replacement.

3.9 Personal Safety Measures

Safety glasses, safety gloves, safety helmet, safety shoes, air filters, ear muffs - None is required except when recommended by the user.

3.10 Predictable Actions which are Incorrect and Not Allowed

- Never try to stop/hold the box while being driven by the belts.
- Never remove or disable the safety devices.
- Only authorized personnel should be allowed to carry out the adjustments, repairs or maintenance which require operation with reduced safety protections.
During such operations, access to the machine must be restricted. When the work is finished, the safety protections must immediately be reactivated.
- The cleaning and maintenance operations must be performed after disconnecting the electric power.
- Do not modify the machine or any part of it.
- Clean the machine using only dry cloths or light detergents. Do not use solvents, petrols, etc.
- Install the machine following the suggested layouts and drawings.



Warning

• To reduce the risk associated with mechanical and electrical hazards:

- Read, understand, and follow all safety and operating instructions before operating or servicing the case sealer.
- Allow only properly trained and qualified personnel to operate and service this equipment.

3. Safety (continued)

3.11 Operator's Skill Levels Required to Perform the Main Operations on the Machine

The Table shows the minimum operator's skill for each machine operation.

Important! The factory manager must ensure that the operator has been properly trained on all the machine functions before starting work.

Skill 1: Machine Operator

This operator is trained to use the machine with the machine controls, to feed cases into the machine, make adjustments for different case sizes, to change the tape and to start, stop and restart production.

Skill 2: Mechanical Maintenance Technician

This operator is trained to use the machine as the MACHINE OPERATOR and in addition is able to:

- Work with the safety protection disconnected
- Check and adjust mechanical parts
- Carry out machine maintenance operations/repairs

He is not allowed to work on live electrical components

Skill 2a: Electrical Maintenance Technician

This operator is trained to use the machine as the MACHINE OPERATOR and in addition is able to:

- Work with the safety protection disconnected
- Check and adjust mechanical parts
- Carry out machine maintenance operations / repairs / adjustments / repair electrical components

He is allowed to work on live electrical panels, connector blocks, control equipment, etc.

Skill 3: Specialist from the Manufacturer

Skilled operator sent by the manufacturer or its agent to perform complex repairs or modifications (on agreement with the customer).

Operator's Skill Levels Required to Perform the Main Operations on Machine

Operation	Machine Status	Required Operator Skill	Number of Operators
Machine installation and setup	Running with safety protections disabled	2 and 2a	2
Extraordinary mechanical maintenance		3	1
Extraordinary electrical maintenance		2a	1
Adjusting box size	Stopped by pressing the EMERGENCY STOP button	1	1
Tape replacement		1	1
Blade replacement	Electric power disconnected	2	1
Drive belt replacement		2	1
Ordinary maintenance		2	1

3. Safety *(continued)*

3.12 Component Locations

Refer to **Figure 3-9** below to acquaint yourself with the various components and controls of the case sealer. Also refer to Manual 2 for taping head components.

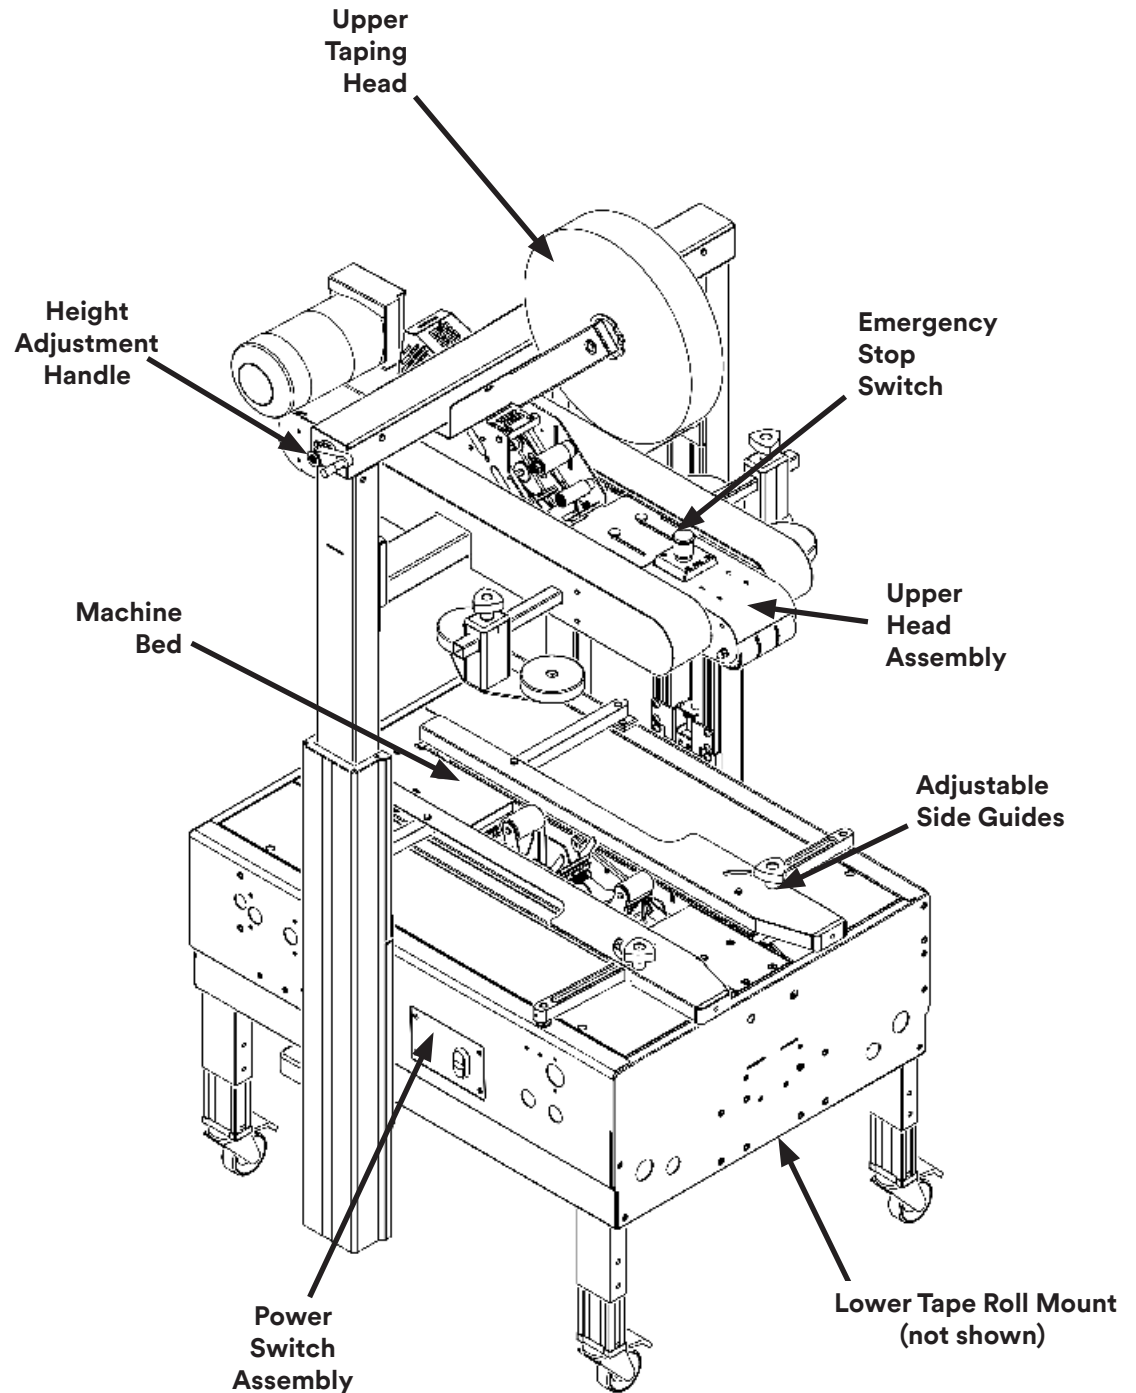


Figure 3-9 7000a-7000a3 Pro Case Sealer Components (Left Front View)

3. Safety (continued)

3.13 Table of Warnings and Replacements Labels

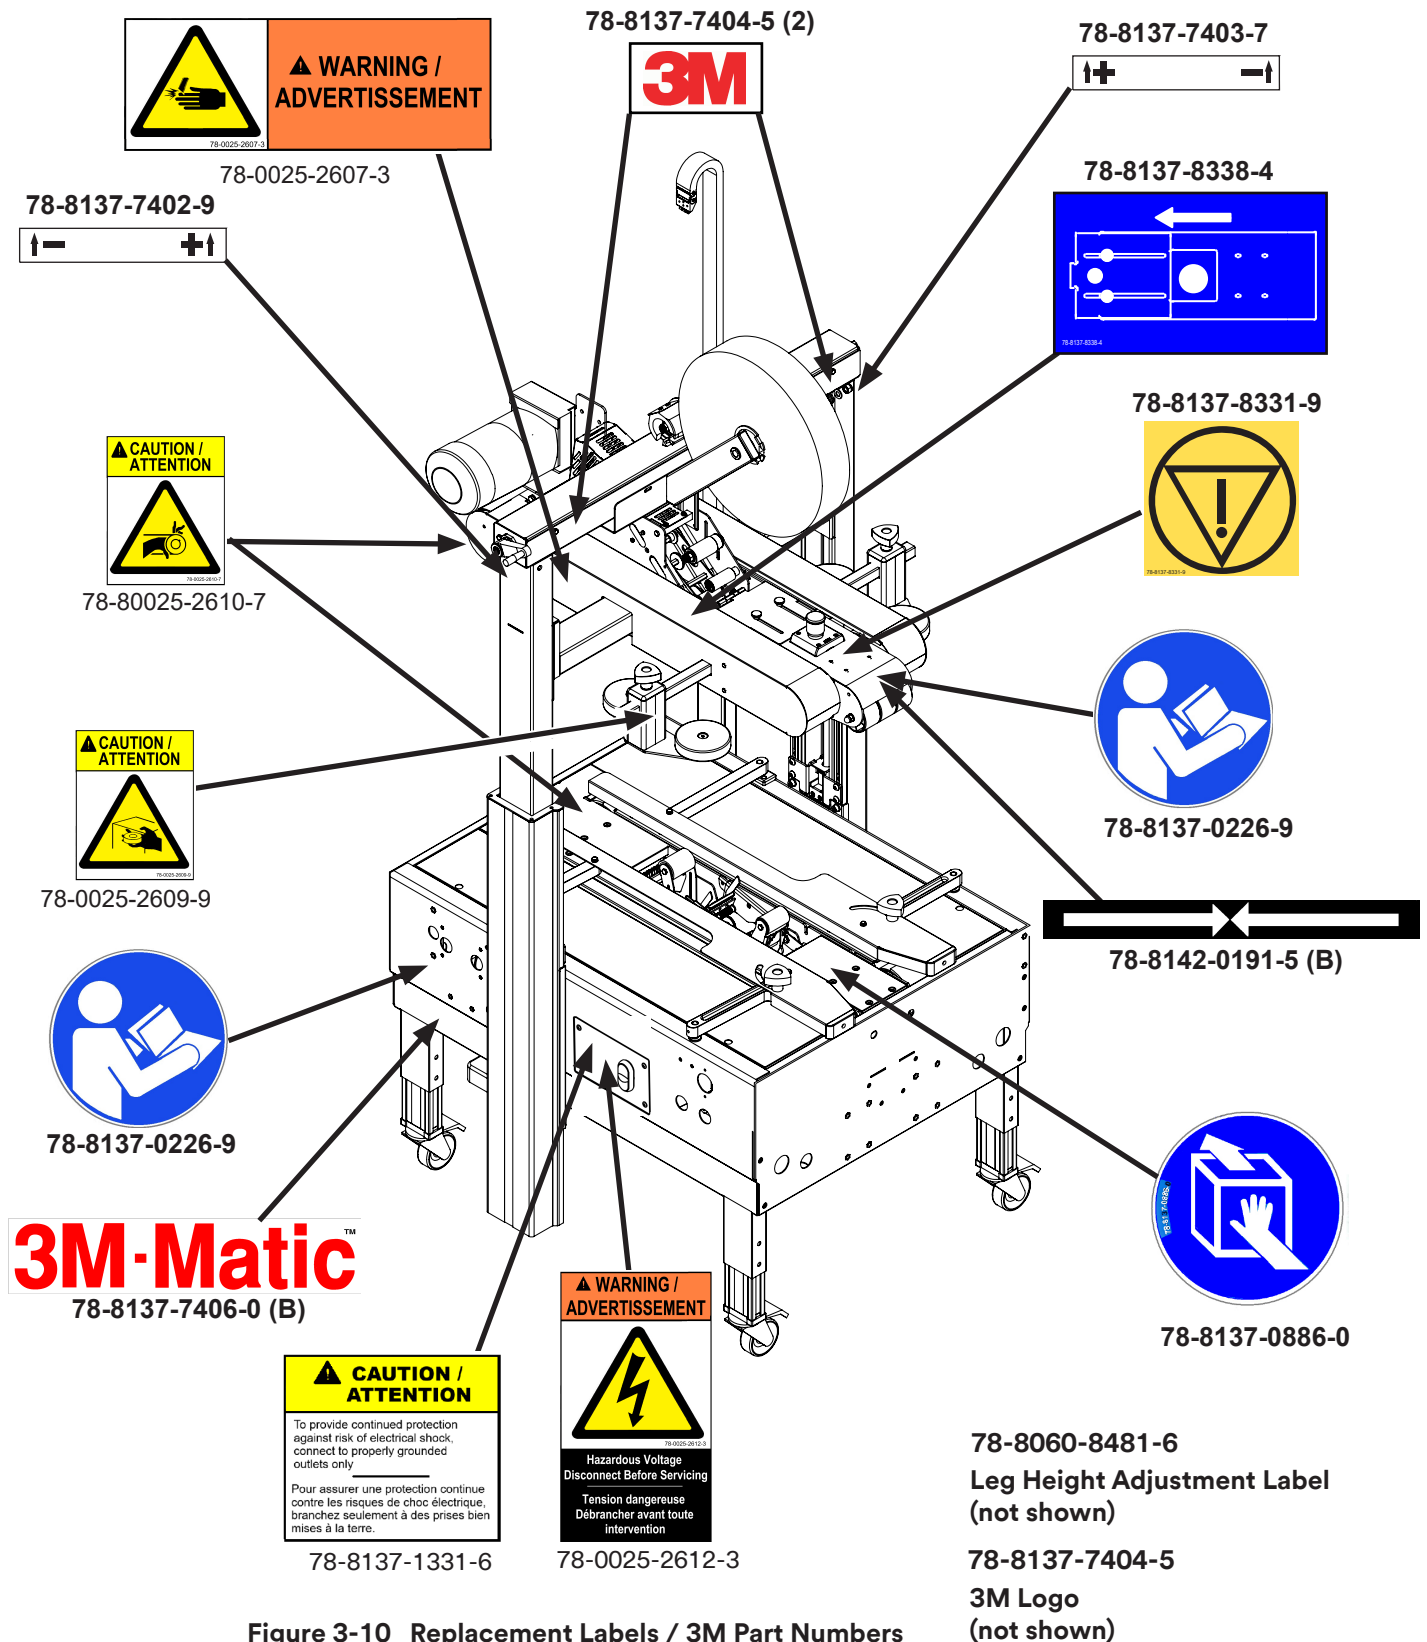


Figure 3-10 Replacement Labels / 3M Part Numbers


4. Specifications

4.1 Power Requirements:

Electrical – 120 VAC, 60 Hz, 6A, 720W

The machine is equipped with two 1/4 HP gearmotors and comes with an 2.4m [8 foot] standard neoprene covered power cord and a grounded plug. Contact your 3M Representative for power requirements not listed above. Contact your 3M Representative for power requirements not listed above.

4.2 Operating Rate: Belt speed is 0.5m/s [100 F.P.M.]

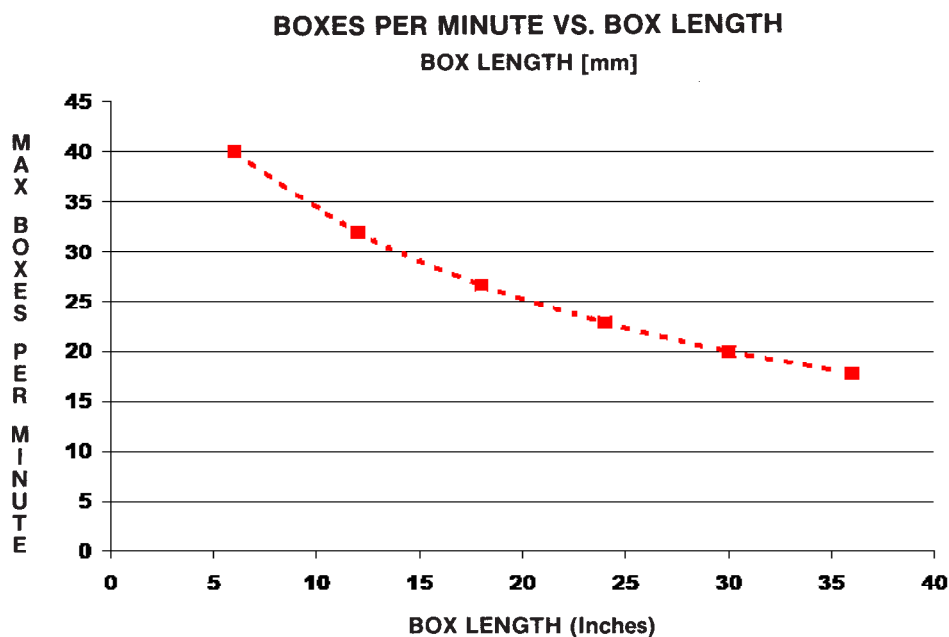

Actual production rate is dependent on operator's dexterity.
Boxes must be 18 inches (457mm) apart minimum.

4.3 Operating Conditions

Use in dry, relatively clean environments at 5° C to 50° C [40° F to 120° F] with clean, dry boxes.

Note: Machine should not be washed or subjected to conditions causing moisture condensation on components.



Warning

- To reduce the risk associated with fire and explosion hazards:
 - Do not operate this equipment in potentially flammable or explosive environments.

4.4 Machine Noise Level:

Acoustic pressure measured at a distance of 1m. from machine with Scotch PVC adhesive tape in operation; 78dB Acoustic radiation pressure at 1.6m. height with Scotch PVC adhesive tape in operation; 73dB Measurement taken with appropriate instrument:(Type SPYRI-MICROPHON 11).

4. Specifications *(continued)*

4.5 Set-Up Recommendations:

- Machine must be level.
- Customer supplied optional infeed and exit conveyors (if used) should provide straight and level box entry/exit.
- Optional exit conveyor (powered or gravity) can help move sealed boxes away from machine.

4.6 Tape

Scotch® pressure-sensitive film box sealing tapes.

4.7 Tape Width

50.8mm [2 inch] minimum to 76.2mm [3 inch] maximum

4.8 Tape Roll Diameter

Up to 406.4mm [16 inch] maximum on a 76.2mm [3 inch] diameter core.
(Accommodates all system roll lengths of Scotch® film tapes.)

4.9 Tape Application Leg Length

(See Taping Head Manual)

4.10 Box Board

Style – regular slotted containers – RSC
125 to 275 P.S.I. bursting test, single wall or double wall B or C flute.
23-44 lbs. per inch of width Edge Crush Test (ECT)

4.11 Box Weight and Size Capacities

- A. Box Weight, filled: 5 lbs.– 85 lbs. [2.3 kg–38.6 kg]. Contents must support flaps.
B. Box Dimensions for 7000a Pro and 7000a3 Pro Machines: Inches [mm]

	Length	Width	Ⓐ Standard Pos. AG 3 Tape Leg (i.e. 2.75" [70])	Ⓑ Alternate Pos.	Ⓒ Fully Raised Pos. LHB Tape Leg (i.e. 1.38" [35])
Minimum	6" [152]	6.5" [165]*	4.5" [114]	1.5" [38]	12.25" [311]
Maximum	N/A	25.5" [648]	28" [711]	25" [635]	35.5" [901]


* Boxes narrower than 10 inches [254mm] may require more frequent belt replacement because of limited contact area.

To accommodate smaller or larger boxes, machine upper taping head frame and/or outer column assemblies can be repositioned as described in “Special Set-Up Procedure” section of this manual. Refer to illustration/chart for box height range possibilities by adjusting machine upper frame and/or outer column positioning.

4. Specifications *(continued)*

Minimum/Maximum Box Height Combinations

(To relocate upper frame or outer columns, see "Special Set-Up Procedure")

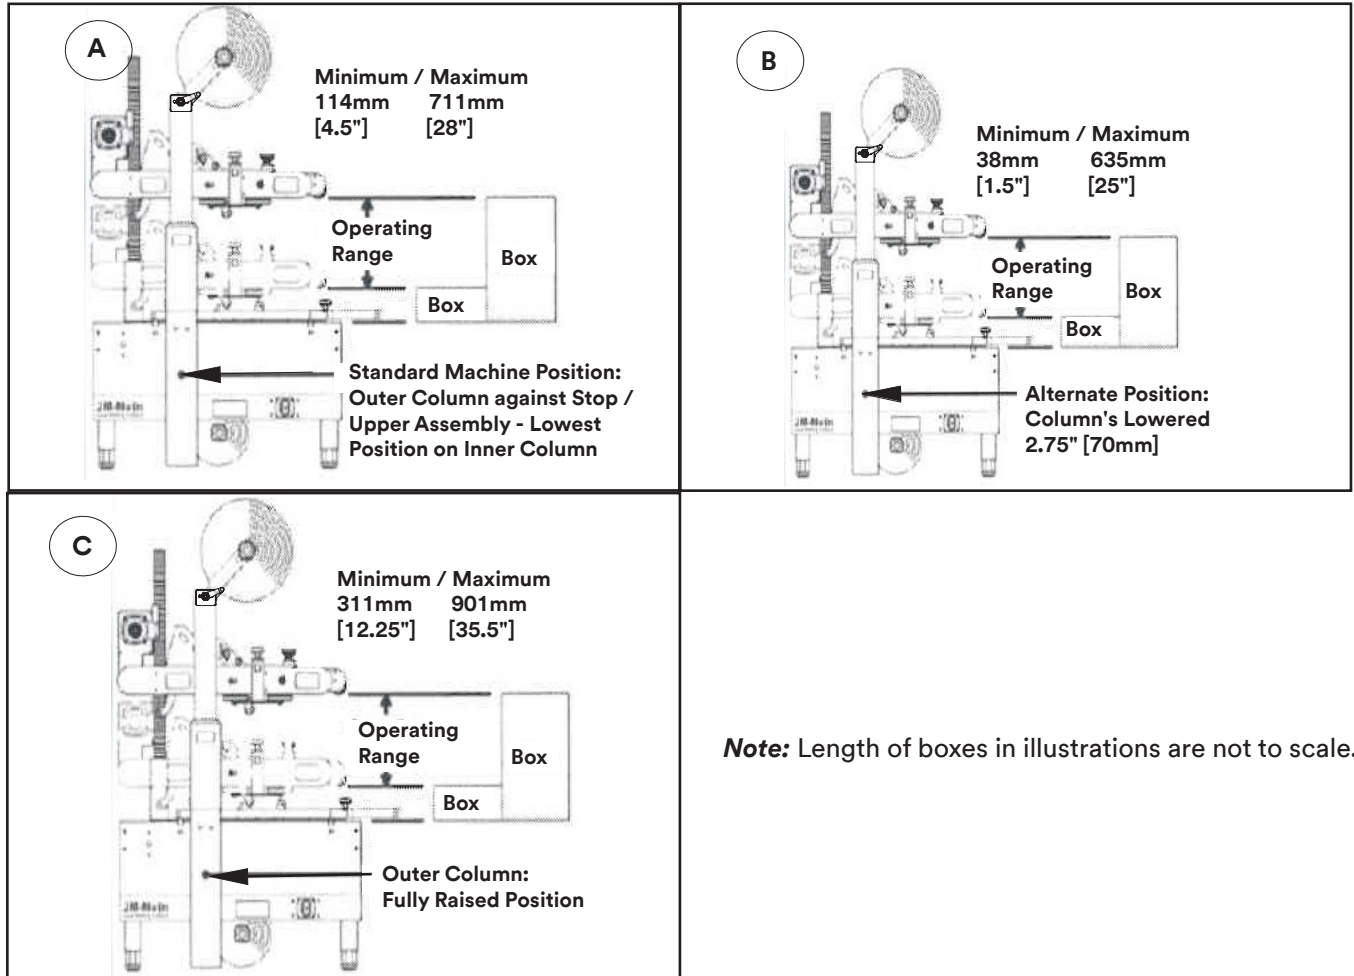

Note: Length of boxes in illustrations are not to scale.

Case Height Range Illustration:

- A. Standard Machine Position:** Outer Columns positioned against Stop with Upper Drive Assembly set to Lowest Position on Inner Columns. Tape Leg Length - 2.75" [70mm].
- B. Alternate Machine Position:** Lowest possible Box Height for LHB - Alternate Position (i.e. Outer columns lowered 2.75" [70mm] from Standard Position [A]). LHB Tape Leg Length - 1 3/8" [35mm].
- C. Raised Machine Position:** Maximum Box Height (i.e. Outer Columns and Upper Drive Assy in Highest Position - See Special Set-Up Procedure). Tape Leg Length - 2.75" [70mm].

* Boxes narrower than 10" [254mm] may require more frequent belt replacement because of limited contact area.

** Alternate Position "C" / LHB Alternate Position requires lower machine production speed.

The case sealer can accommodate most boxes within the size range listed above.

Note: Columns may be "infinitely" adjustable depending on column position / tape head interference. Special modifications may be available for carton sizes. Contact your 3M Representative for information.


However, if the box length (in direction of seal) to box height ratio is .6 or less, then several boxes should be test run to assure proper machine performance.

Any box ratio approaching this limitation should be test run to assure performance.

DETERMINE THE BOX LIMITATIONS BY COMPLETING THIS FORMULA:

$$\frac{\text{BOX LENGTH IN DIRECTION OF SEAL}}{\text{BOX HEIGHT}} \text{ SHOULD BE GREATER THAN } 0.6$$

4. Specifications (continued)

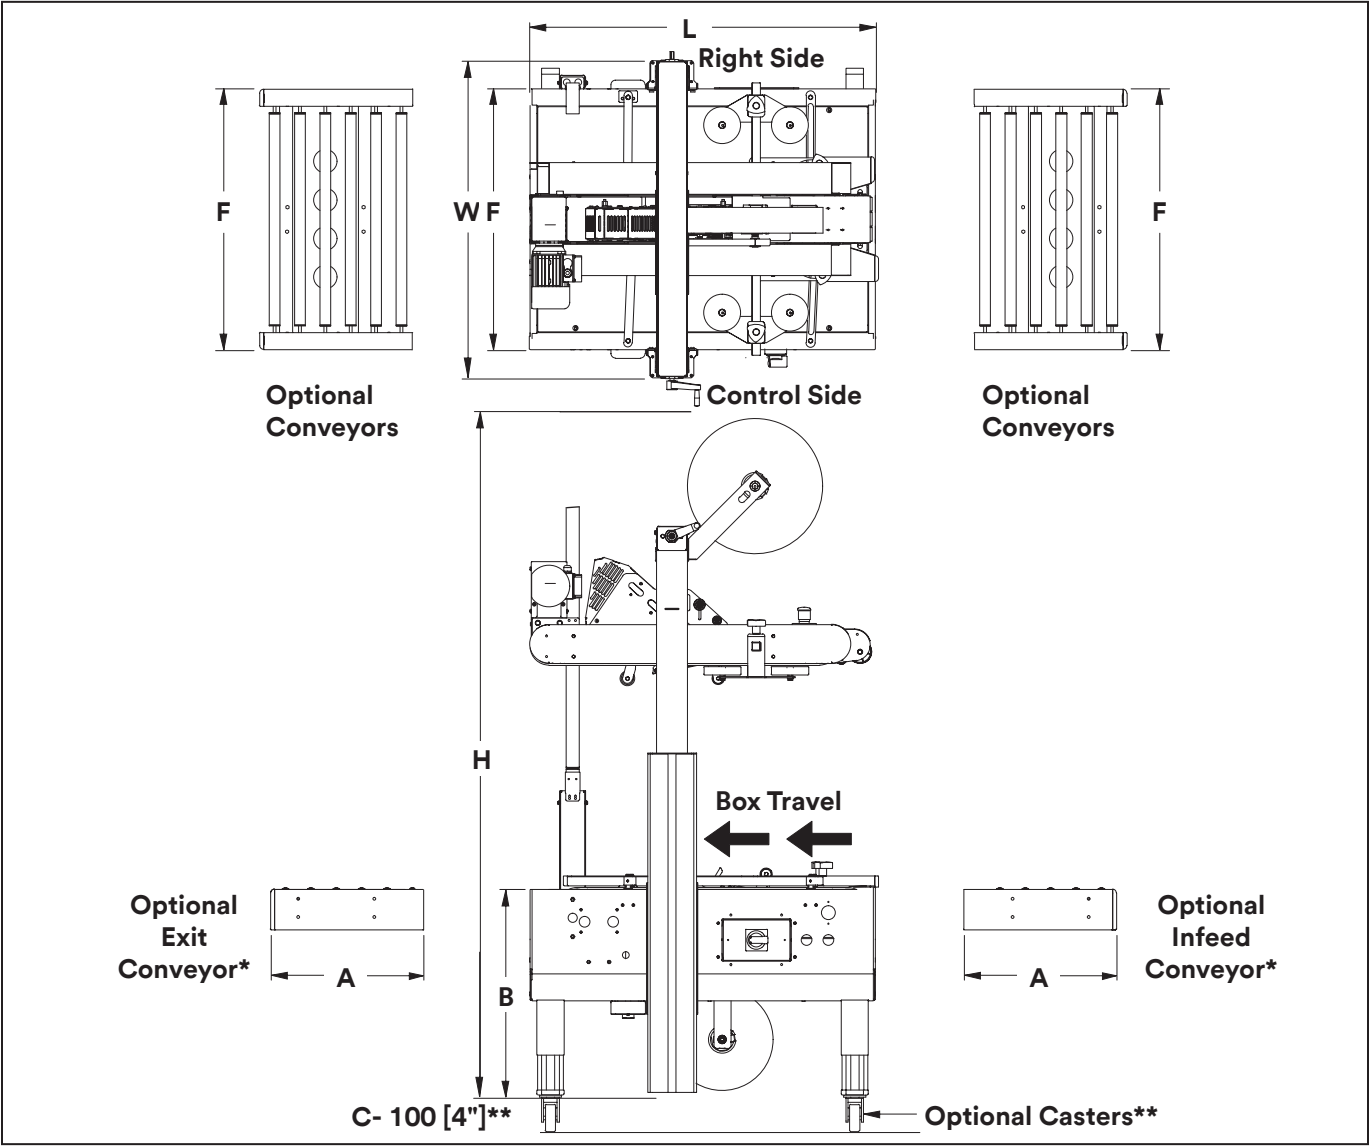

4.12 Machine Dimensions:

	W	L	H	A*	B***	C	F
Minimum							
mm	940	1021	1346	457	610	102	770
[Inches]	[37]	[40.2]	[53]	[18]	[24]	[4]	[30.3]
Maximum							
mm	--	--	2184	--	889	--	--
[Inches]	--	--	[86]	--	[35]	--	--


- * Infeed/Exit conveyors are optional
- ** Casters are optional
- *** Columns must be adjusted upward to reach minimum bed height

Packaged Machine Dimensions:

Height (H) - 49.5" [1257]
Length (L) - 51" [1295]
Width (W) - 42" [1067]

Weight:

Crated Weight - 190 kg [425 pounds] (approximate)
Uncrated Weight - 170 kg [375 pounds] (approximate)

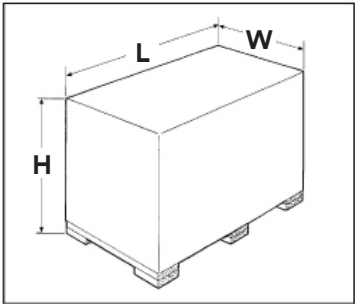

5. Shipment-Handling-Storage-Transport

5.1 Shipment and Handling of Packed Machine

- The machine is fixed on the pallet with four (4) bolts and can be lifted by using a fork truck.
- The package is suitable to travel by land and by air.
- Optional sea freight package is available.

Packaging Overall Dimensions (Figure 5-1)

See Specifications.

During the shipment it is possible to stack a maximum of 2 machines (Figure 5-2).

5.2 Packaging for Overseas Shipment (Optional - Figure 5-3)

The machines shipped by sea freight are covered by an aluminum/polyester/polyethylene bag which contains dehydrating salts.

5.3 Handling and Transportation of Uncrated Machine

The uncrated machine should not be moved except for short distances and indoors ONLY. Without the supporting pallet, the machine is exposed to damage and may cause injuries. To move the machine use belts or ropes, paying attention to place them in the points indicated using care to not interfere with the lower taping head (Figure 5-4).

5.4 Storage of the Packed or Unpacked Machine

If the machine is not used for a long period, please take the following preCautions:

- Store the machine in a dry and clean place.
- If the machine is unpacked it is necessary to protect it from dust.
- Do not stack anything over the machine.
- It is possible to stack a maximum of 2 machines (if they are in their original packing).

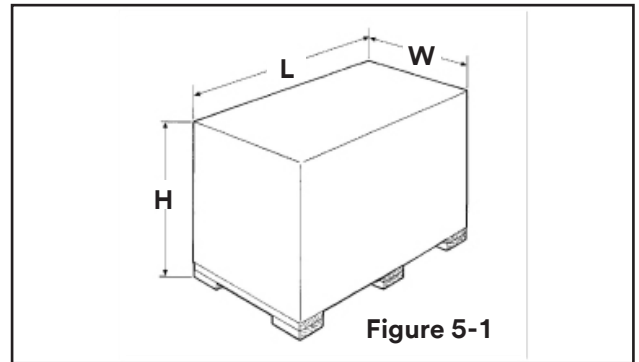


Figure 5-1

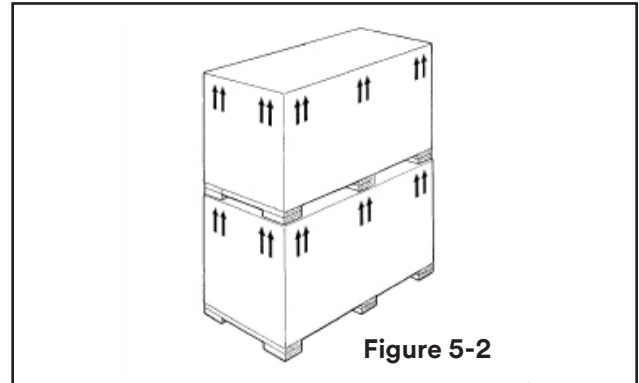


Figure 5-2

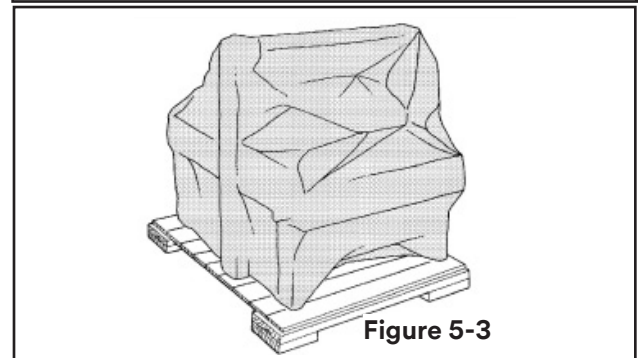


Figure 5-3

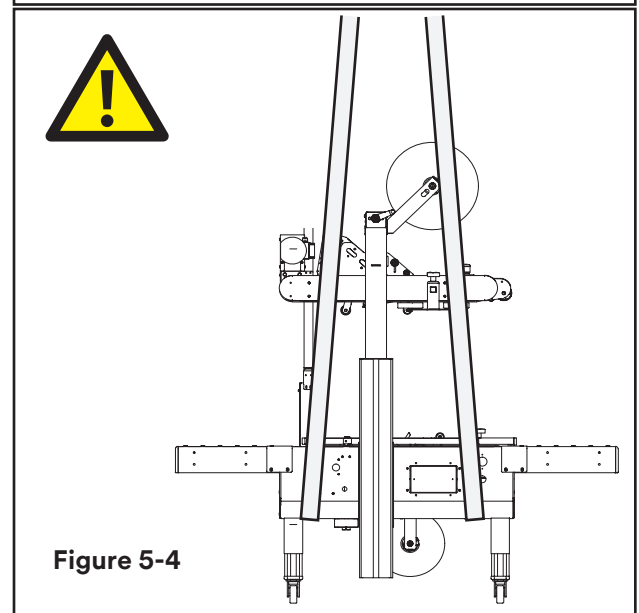


Figure 5-4

6. Unpacking

6.1 Uncrating

The envelope attached to shipping box contains the uncrating instructions of the machine (Figure 6-1).

Cut straps. Cut out staple positions along the bottom of the shipping box (or remove staples with an appropriate tool - Figure 6-2). After cutting out or removing the staples, lift the shipping box in order to clear the machine (two persons required).

Transport the machine with a fork-lift truck to the operating position. Lift the pallet at the point indicated in Figure 6-3 (weight of machine + pallet = See Specifications).

Removal of Pallet

Loosen and remove nuts and brackets using the open end spanner supplied in the tool box (Figure 6-4).

A cardboard box is located under the machine body. Retrieve instruction manual for additional set-up procedures. The box also contains parts removed for shipping, spare parts and tools (Figure 6-5).

6.2 Disposal of Packaging Materials

The 7000a-7000a3 Pro package is composed of:

- Wooden pallet
- Cardboard shipping box
- Wooden supports
- Metal fixing brackets
- PU foam protection
- PP plastic straps
- Dehydrating salts in bag
- Special bag of laminated polyester/aluminium/Polyethylene (sea freight package only)
- Polyethylene protective material

For the disposal of the above materials, please follow the environmental directives or the law in your country.

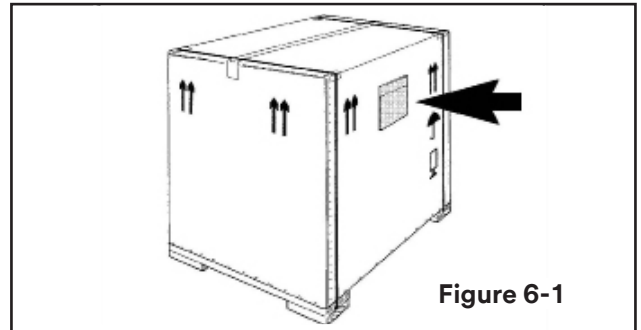


Figure 6-1

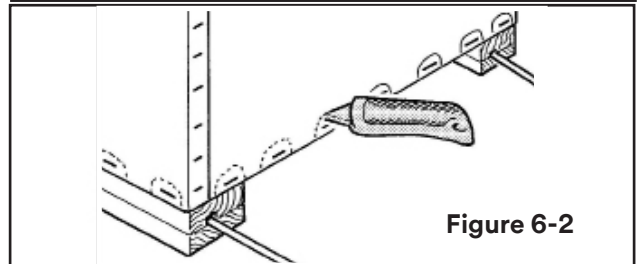


Figure 6-2


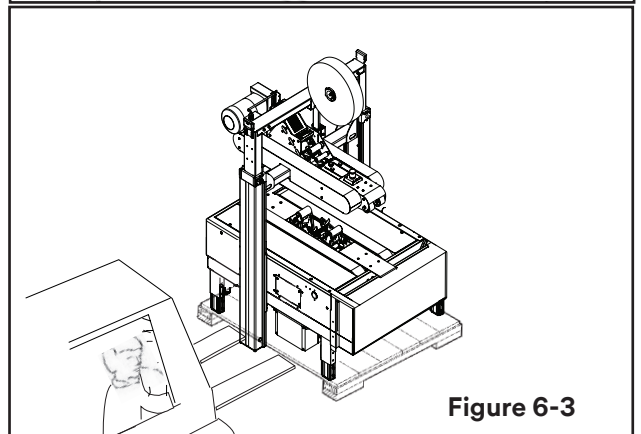


Figure 6-3

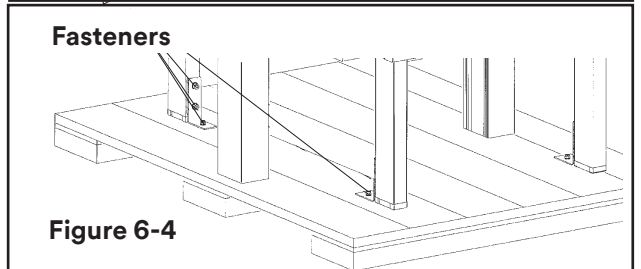

Fasteners

Figure 6-4

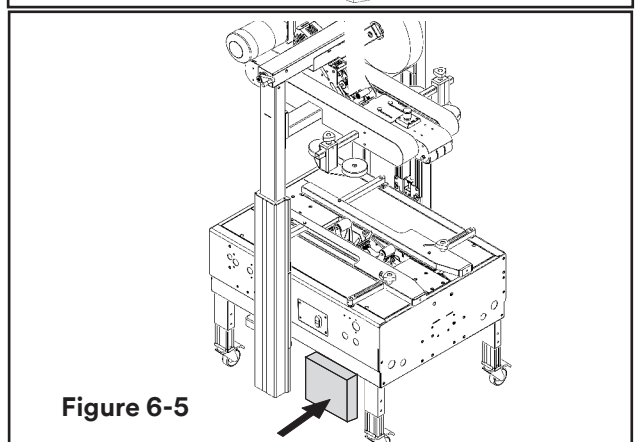


Figure 6-5

7. Installation

7.1 Operating Conditions

The machine should operate in a dry and relatively clean environment (See Specifications).

7.2 Space Requirements for Machine Operation and Maintenance Work

Minimum distance from wall (Figure 7-1):

A = 1000mm.

B = 700mm.

Minimum height = 2700mm.

7.3 Tool Kit Supplied with Machine

This kit contains the necessary specialty tools required for this case sealer. Other tools supplied by the customer will be required for machine maintenance and set-up.

7.4 Machine Set-Up / Bed Height

1. Lift the machine with belts or ropes paying attention to place the belts in the points (Figure 7-2).

To set the machine bed height, do the following:

2. Adjust machine bed height.
The case sealer is equipped with four (4) adjustable legs that are located at the corners of the machine frame.
The legs can be adjusted to obtain different machine bed heights (Figure 7-3).

Also refer to “Specifications”

3. Lock the screws.
4. Repeat the operation for all legs.
(It is not necessary to fix or anchor the machine to the floor).

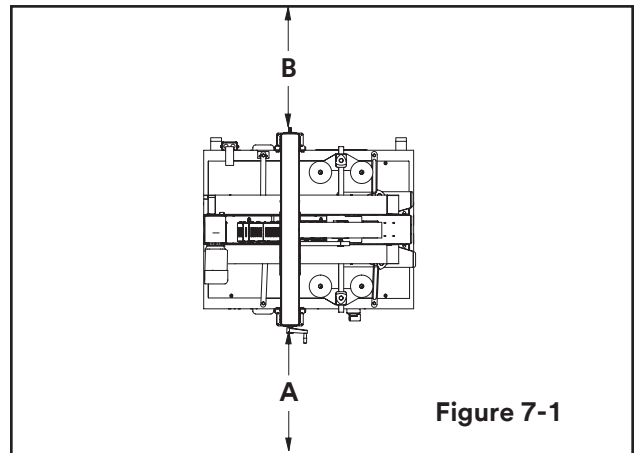


Figure 7-1

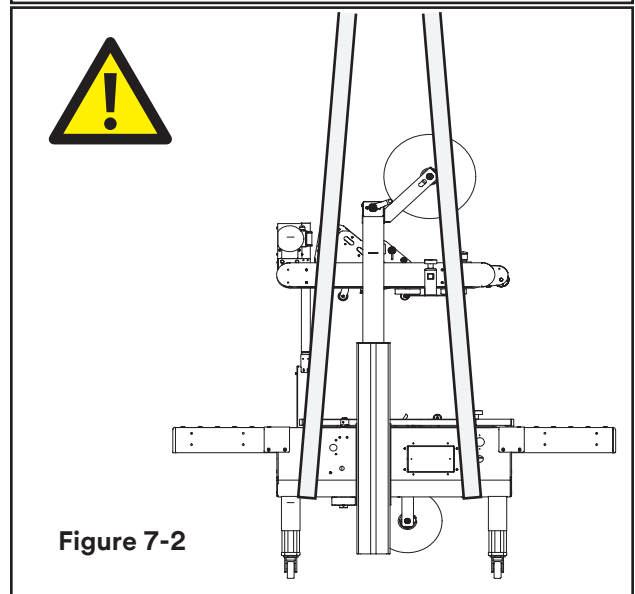


Figure 7-2

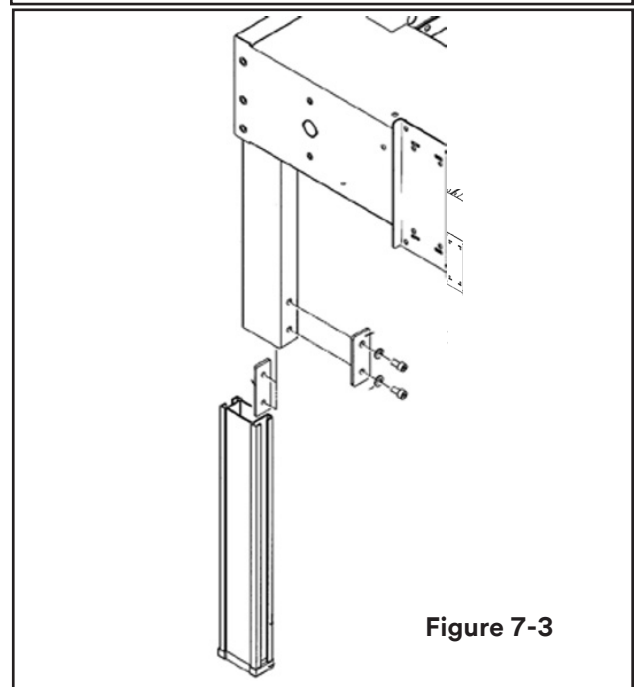


Figure 7-3

7. Installation *(continued)*

7.5 Removal of Plastic Ties

Cut the plastic which attaches the top head to the frame and remove the polystyrene blocks (Figure 7-4).

Cut the plastic strap which attaches the strip and the EMERGENCY STOP cable to frame (Figure 7-5).

Cut the plastic ties holding lower taping head in position (Figure 7-6).

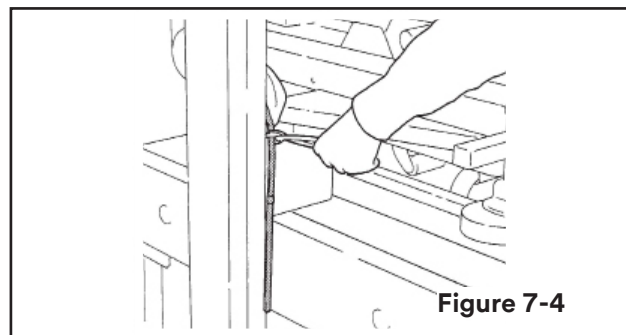


Figure 7-4

7.6 Assembly Completion

1. Handle - Remove handle from shipping position and reinstall in operational position - (Figure 7-7A).
2. Tape Drum Bracket - Install upper tape drum bracket on top cross bar as shown (Figure 7-7B).
3. Compression Rollers - For shipping purposes, Compression Rollers are packaged upside down. Flip Rollers over and mount using provided hardware (Figure 7-7C).
4. Centering Guides - The Box Centering Knobs are located in the Tool Kit Box. Install Knobs on Centering Guides (Figure 7-7D).

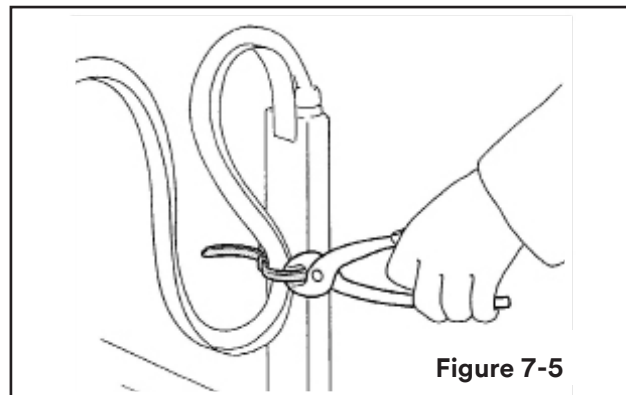


Figure 7-5

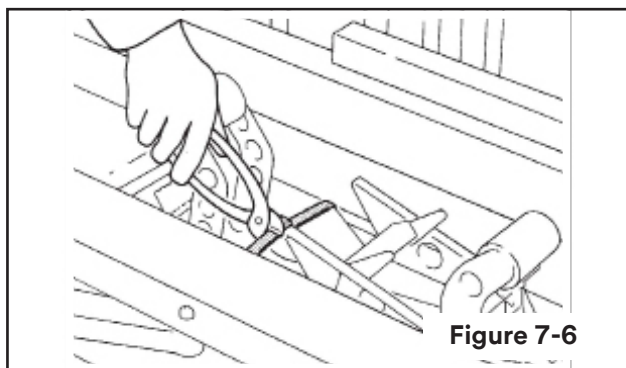


Figure 7-6

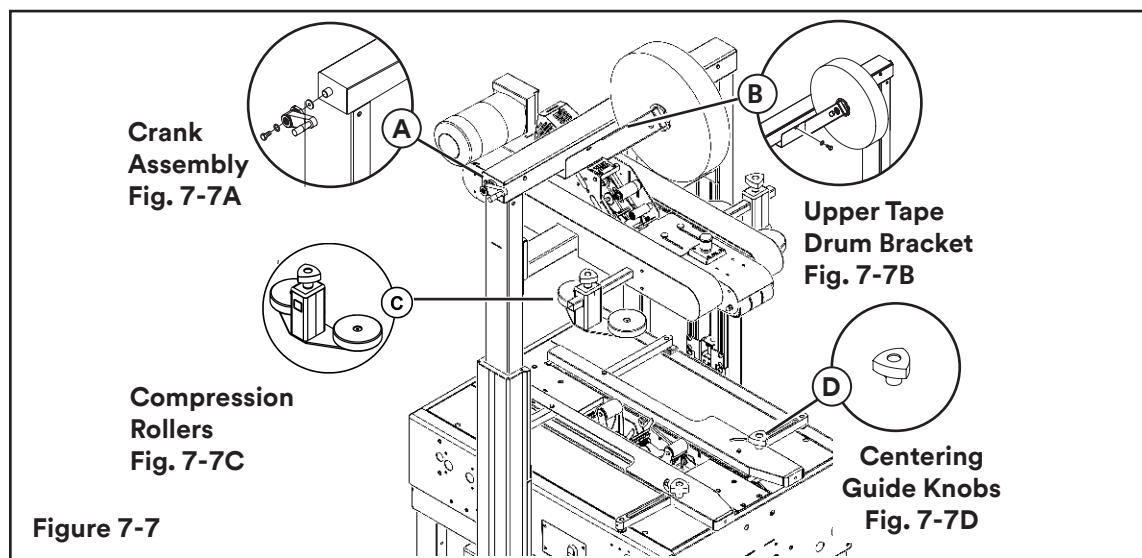


Figure 7-7

7. Installation *(continued)*

7.7 Completion of Taping Heads

See Manual 2 or 3 for Complete Instructions:

1. Place the Upper Taping Head in a convenient working position
2. Use Figure 7-8 and tape threading label. Position the tape supply roll so the adhesive side of tape is facing the front of the taping head as it is pulled from the supply roll.
3. Attach the threading needle to the end of the roll. Guide the threading needle around the wrap roller (Position 1) then back around the one-way tension roller (Position 2).
4. Continue pulling the threading needle down and guide it between the two (2) rollers on the apply arm (Position 3).
5. Pull the threading needle down until the tape travels between the apply plate and the ears of the apply arm (Position 4) until it extends past the applying roller. When properly threaded the adhesive side of the tape should be facing the knurled rollers at position 2 and also position 3.
6. Cut away any excess tape and repeat steps for Lower Taping Head.

Important – Do not cut against the apply roller - roller damage could occur.

7.8 Outboard Tape Roll Holder

If you intend to use the outboard tape roll holder, proceed as follows:

1. Remove the lower taping head from the machine.
2. Remove the tape drum bracket assembly, stud spacer, and fasteners from the lower taping head.
3. Install alternative wrap roller and bracket on the head in place of tape bracket. Replace lower head into machine.
4. Install and secure tape drum bracket assembly on the entry end of the lower frame (as shown in Figure 7-9).

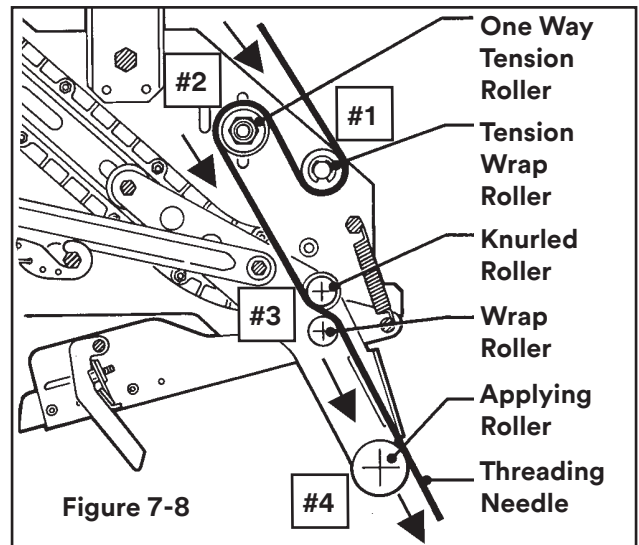


Figure 7-8

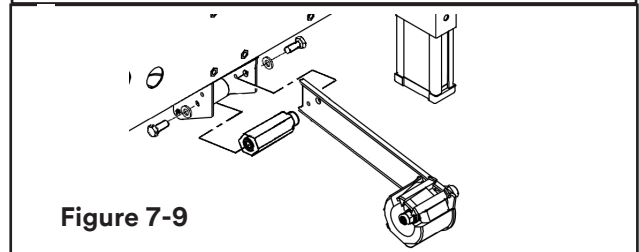


Figure 7-9

7.9 Preliminary Electric Inspection

Before connecting the machine to the mains please carry out the following operations:

- 7.9.1 Make sure that the socket is provided with an earth protection circuit and that both the mains voltage and the frequency match the specifications on the name plate.
- 7.9.2 Check that the connection of the machine to the mains meets the safety regulations in your country.
- 7.9.3 The machine is fitted with a main switch and a circuit breaker. The user should check that the electrical settings of the machine are compatible with all the components of the mains system.

7.10 Machine Connection to the Mains

For technical specifications:

See Section 4 - Specifications


- Push the LATCHING EMERGENCY STOP BUTTON.
- The main switch turned OFF (O).

Connect the power cord supplied with the machine to a wall socket using a plug which complies with the safety regulations of your country.

8. Theory of Operation

8.1 Description of the Working Cycle


After having closed the top flaps of the carton, the operator pushes it under the top infeed end in order to avoid the opening of the top flaps. Further pushing causes the two top and bottom belts to drive the box through the taping heads which automatically seal the top and bottom seams. The carton is then expelled on the exit conveyor.

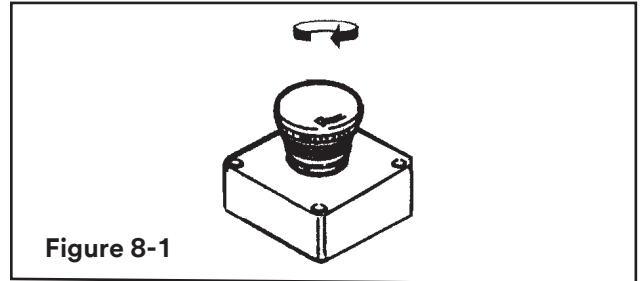

8.2 Definition of Running Mode

The case sealer 7000a-7000a3 Pro has only one (automatic) operating mode with:

- The EMERGENCY STOP BUTTON unlocked (Figure 8-1)
- The main On/Off switch “ON” (I) (Figure 8-2)

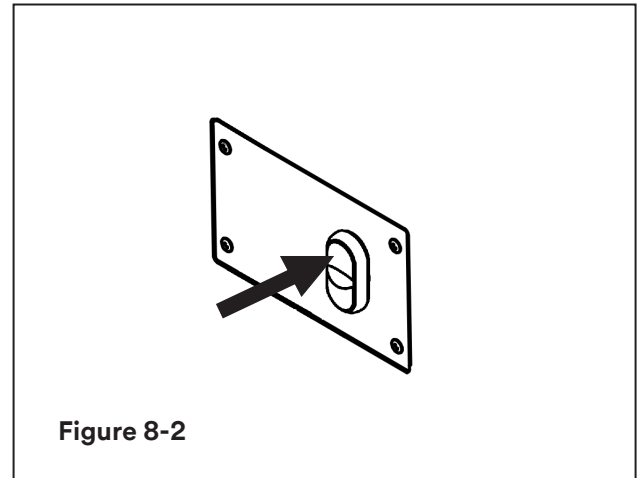


8.3.1 Normal Stop Procedure

When the main switch is turned OFF (O), the machine stops immediately at any point of the working cycle. The same thing happens in case of electrical failure or when the machine is disconnected from the mains.


8.3.2 Emergency Stop

The LATCHING EMERGENCY STOP BUTTON is located on the top center of the machine (Figure 8-3).

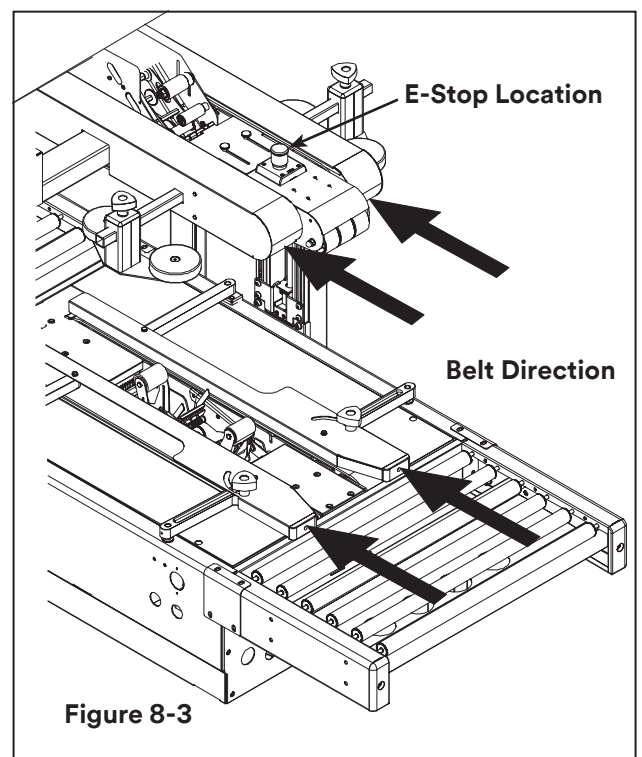


9. Controls


9.1 Box Width/Side Guide Adjusting Knobs

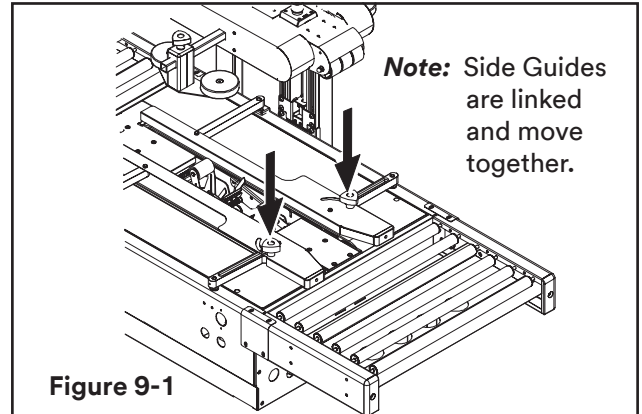


9.2 Box Height Adjusting Crank

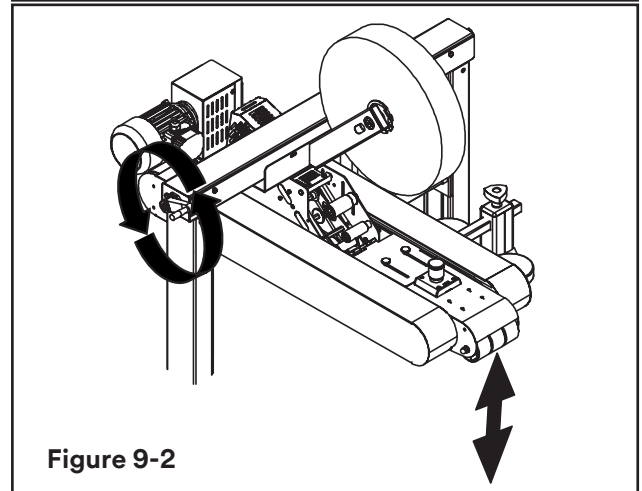

9.3 On/Off Switch

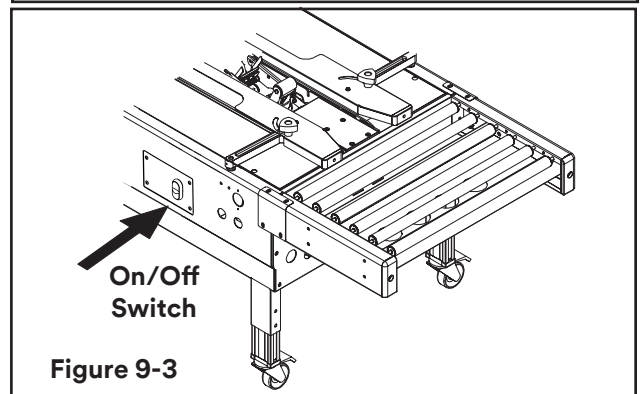

9.4 Lockable Emergency Stop Button

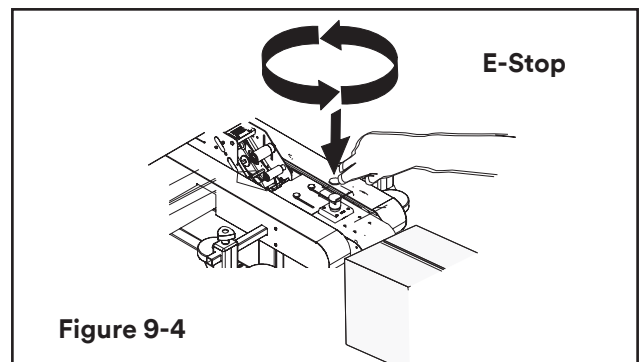

10. Safety Devices of the Machine

10.1 Blade Guards

Both top and bottom taping units have a blade guard (Refer to associated taping head manual).

10.2 Emergency Stop Button

The box drive belts are turned on and off with the electrical switch on the side of the machine frame.

The machine electrical supply can be turned off by pressing the latching emergency stop switch.

To restart machine, rotate the emergency stop switch clockwise to release the switch latch (Figure 10-1).

Restart machine by turning the On/Off switch to the Off (O) position and then to the On (I) position (Figure 10-2)

10.3 Electric System / Circuit Breaker

The electric system is protected by a ground wire whose continuity has been tested during final inspection. The system is also subject to insulation and dielectric strength tests.

Circuit Breaker

The case sealer is equipped with a circuit breaker which trips if the motors are overloaded. Located inside the electrical enclosure on the side of the machine frame just below the machine bed, the circuit breaker has been pre-set and requires no further maintenance. If circuit is overloaded and circuit breaker trips, unplug machine from electrical power:

1. Determine cause of overload and correct.
2. Plug in machine.
3. Turn machine switch "On" (I) to resume case sealing

Important: The use of an extension cord is not recommended. However, if one is needed for temporary use, it must:

- Have wire size 1.5mm dia. [AWG 16]
- Have a max. length 30.5m [100 ft]
- Be properly grounded.

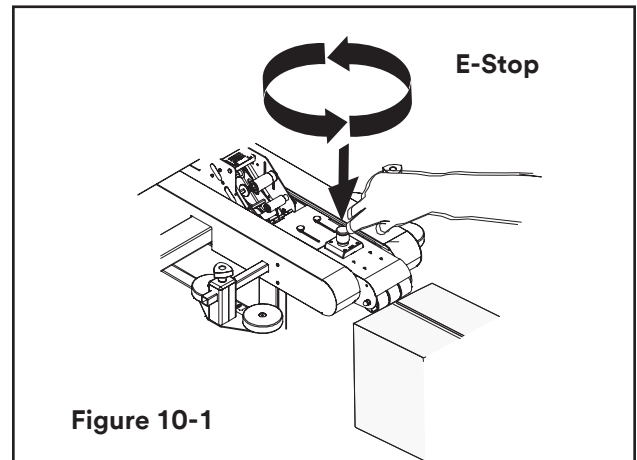


Figure 10-1

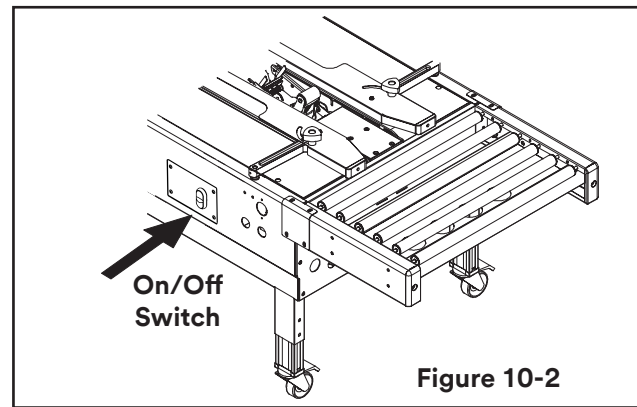


Figure 10-2



Warning

- To reduce the risk associated with sharp blade hazards:
 - Keep hands and fingers away from tape cut-off blades under orange blade guards. The blades are extremely sharp.



Warning

- To reduce the risk associated with hazardous voltage:
 - Position electrical cord away from foot and vehicle traffic.



Warning

- To reduce the risk associated with mechanical and electrical hazards:
 - Allow only properly trained and qualified personnel to operate and service this equipment.

11. Set-Up and Adjustments

11.1 Box Width Adjustment

Place box on infeed end of frame bed and align top flap center seam with arrows on front of upper frame. Move in and lock side by tightening appropriate knobs (Figure 11-1).

11.2 Box Height Adjustment

Lower top head by turning the height adjustment crank clockwise until it lightly presses the case (Figure 11-2).

11.3 Adjustment of Top Flap Compression Rollers

Run the box through the machine and press the EMERGENCY STOP BUTTON when the box is adjacent to the compression rollers. Move the compression rollers in to firmly press the top flaps together.

The standard position for the compression rollers is shown in Figure 11-3. In this position they accommodate boxes from 335 to 660mm [13.25 to 26 inches] wide. To accommodate narrower boxes from 170 to 520mm [6.75 to 20.5] wide.

1. Loosen hand knob and remove compression roller assembly from machine.
2. Move both rollers to alternate hole locations.
3. Install roller assembly on machine and tighten hand knob.
4. Repeat this procedure for both sets of compression rollers.
Release Emergency Stop Button and turn electrical switch ON (I) .

11.4 Changing the Tape Leg Length

Refer to applicable taping head manual for related set-up procedure.

Important! Turn off Electric Power

1. Remove tape from upper taping head, raise upper assembly to convenient working height.
2. Loosen the upper taping head clamp thumb screws. Move the clamp away from the taping head (Figure 11-4A)
3. Hold upper taping head applying and buffing arms from under upper assembly, slide head forward and down to remove (Figure 11-6).
4. Raise upper assembly to provide working room around lower taping head and remove tape from taping head.
5. Lift the lower taping head straight up to remove it from the case sealer bed (Figure 11-4B).
6. Refer to taping head manual for related set-up procedure.
7. Replace taping heads in the reverse order of disassembly.

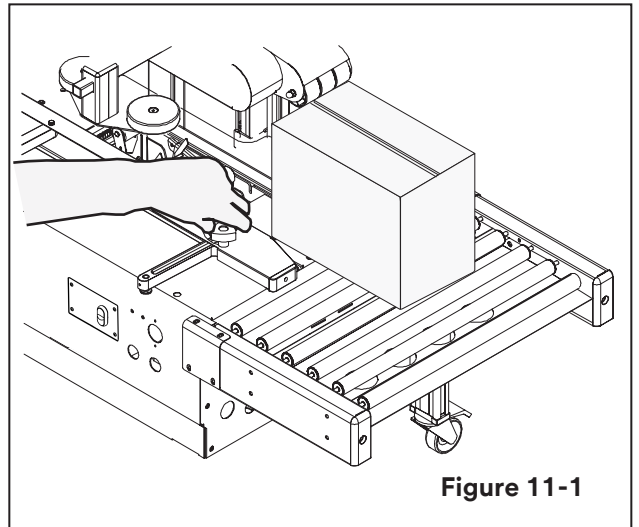


Figure 11-1

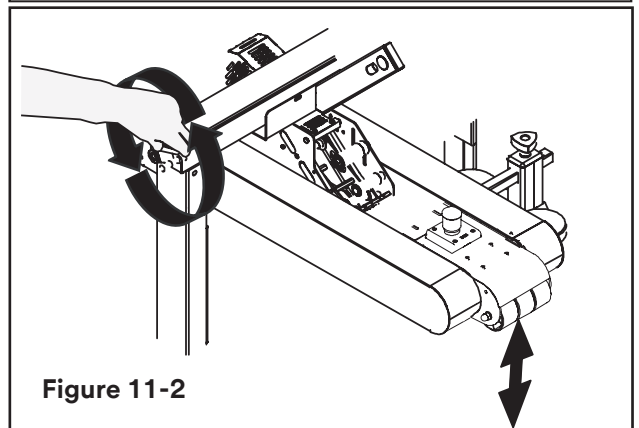


Figure 11-2

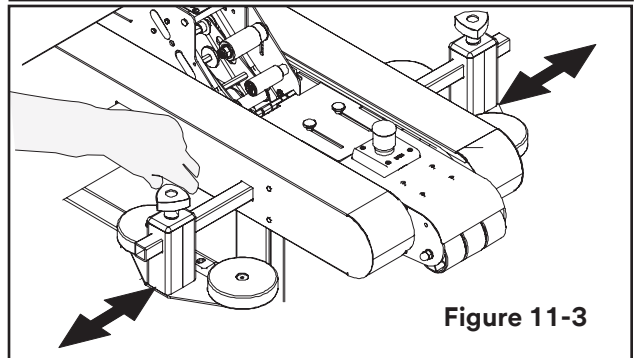


Figure 11-3

11. Set-Up and Adjustments *(continued)*

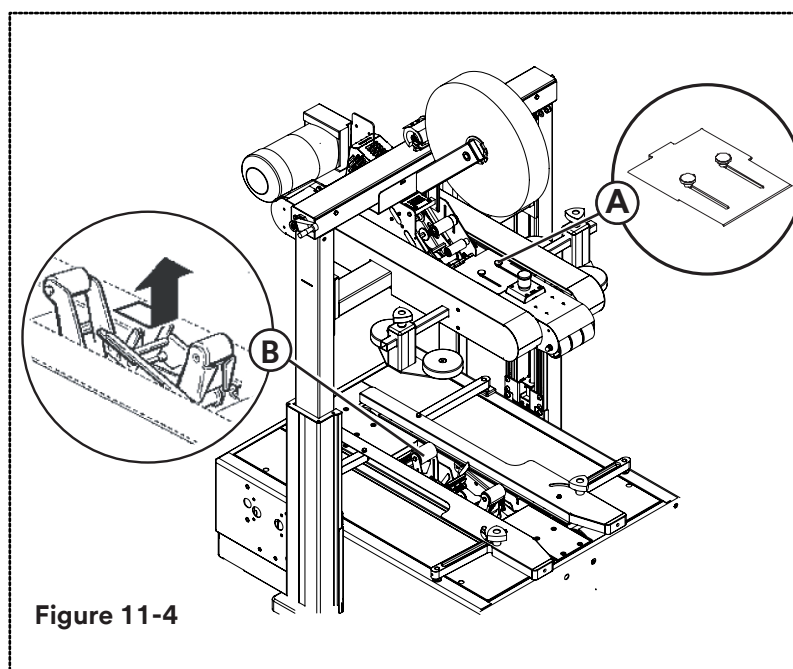


Figure 11-4

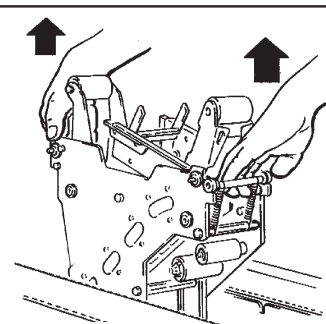


Figure 11-5

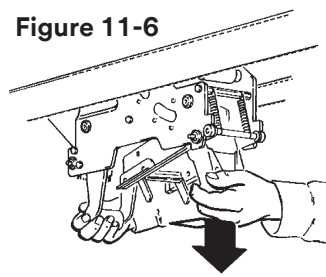


Figure 11-6

11.5 Special Set-Up Procedure for Outer Column Re-Positioning *(continued on next page)*

Moving the outer columns will increase/decrease the maximum box height capacity of the 7000a-7000a3 Pro case sealer.

1. Place solid blocks approximately 12" [305mm] high at front and rear of upper taping head assembly as shown in Figure 11-7A.
2. Crank the upper taping head assembly down until it touches these blocks.
3. Loosen (but do not remove) the four (4) screws and washers that fasten each column to the frame (Figure 11-7B).

Note: You may also need to loosen the two set screws in the nut plate bracket (located above bottom two column screws).

(continued on next page)

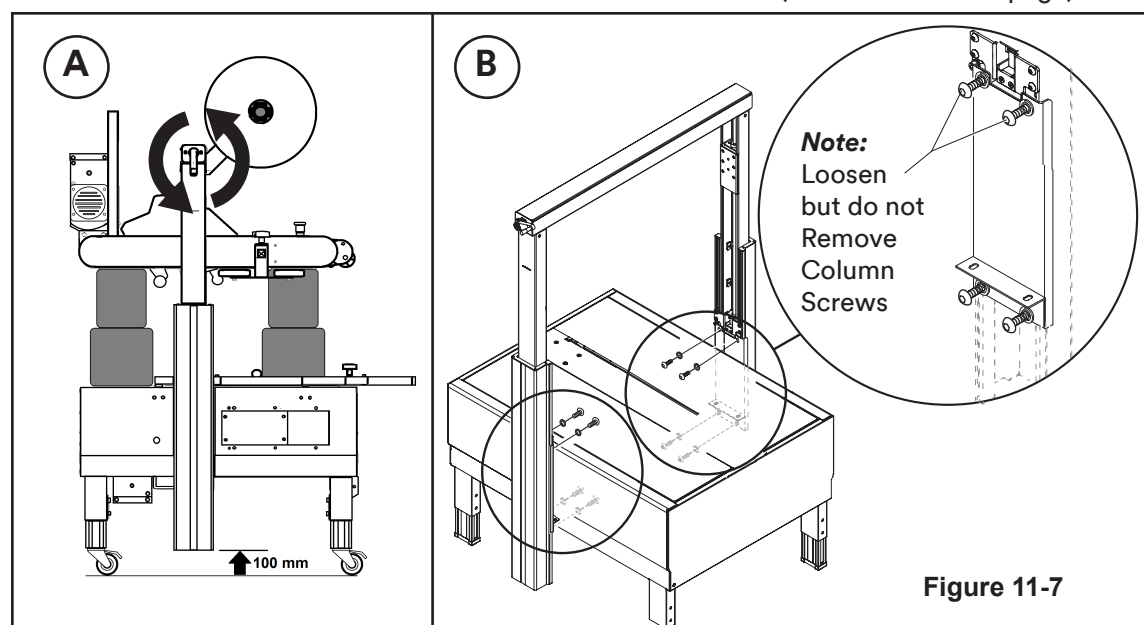


Figure 11-7

11. Set-Up and Adjustments *(continued)*

11.5 Special Set-Up Procedure for Outer Column Re-Positioning *(continued)*

4. Turn the height adjustment crank clockwise to raise the outer columns until they reach the stop.

Note: Instructions are indicated for the Standard Column Position (Also see specifications). If Alternate Column positions are needed, loosen and re-position the column stop.


5. Tighten the eight (8) screws and washers in each column. Also tighten two (2) Set Screws (if applicable). Crank upper taping head assembly up and remove blocks.

Moving the outer columns will increase or decrease the box height handled by the 7000a-7000a3 Pro case sealer.

Maximum Height:

An additional adjustment can be made to reach Maximum Height. This additional height adjustment can be made by moving the Upper Assembly Crossbar up to the top holes - (Figure 11-8).

Figure 11-8

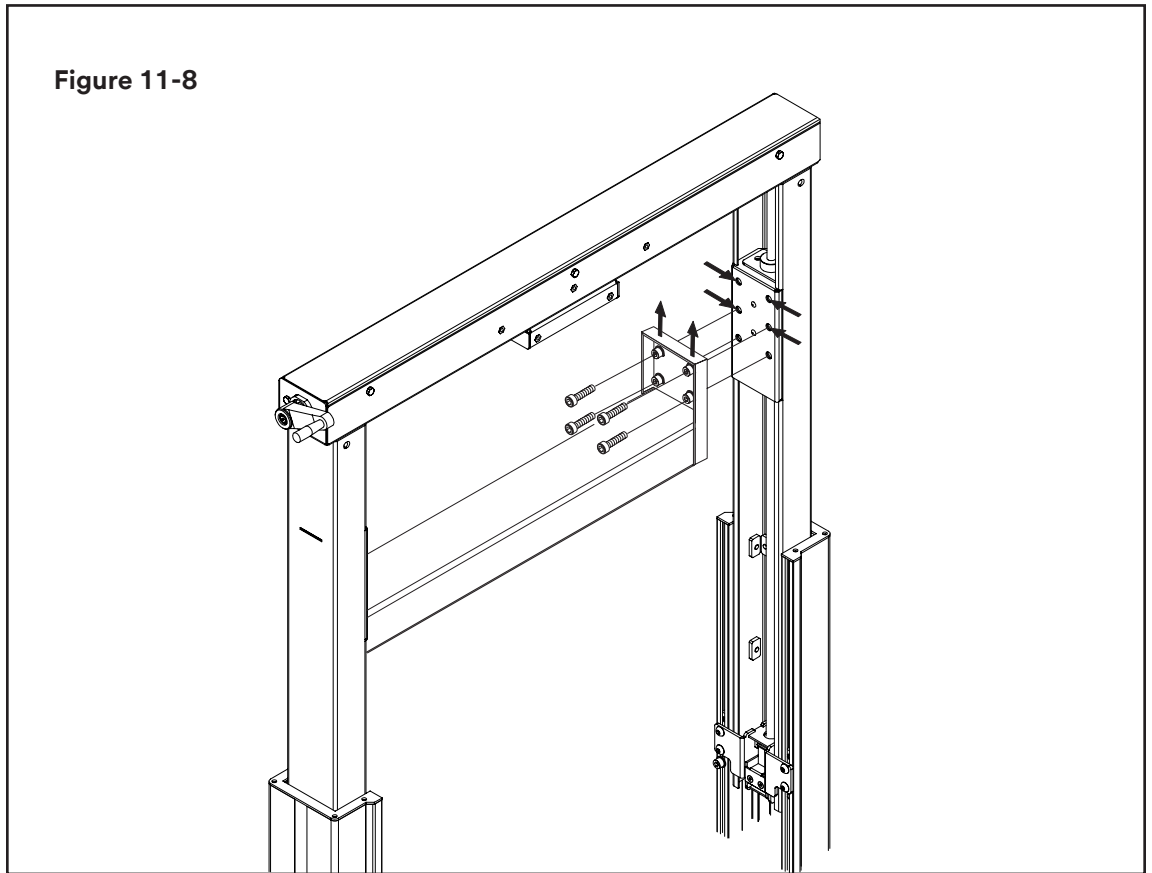

12. Operation

12.1 Operator's Correct Working Position and Operational Flow (Figure 12-1).

Once the box has been filled, close its top flaps and push it between the top and bottom drive belts. Always keep hands in position as shown in Figure 12-2.

The box will be automatically sealed with adhesive tape on the top and bottom box seams. Then the box will be expelled on the exit conveyor.

12.2 Starting the Machine

Important: Before starting the machine, verify that no tools or other objects are on conveyor bed.

Turn the main switch ON (I) after the EMERGENCY BUTTON is released (Figure 12-3).

12.3 Starting Production

After having adjusted the machine according to the box dimensions (height-width), let the machine run without cartons and check its safety devices. Then start the working cycle.

12.4 Tape Replacement and Threading

Skill 1 - Operator

See associated Taping Head manual.

Press the LATCHING EMERGENCY STOP BUTTON.

12.5 Box Size Adjustment

Repeat all operations shown in Section 11 - Set-Up and Adjustments.

12.6 Cleaning

Before carrying out any cleaning or maintenance operation, stop the machine by turning OFF (O) switch on the main and disconnect electric power (Figure 12-3).

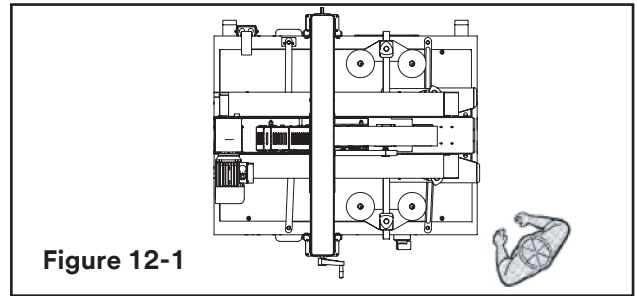


Figure 12-1

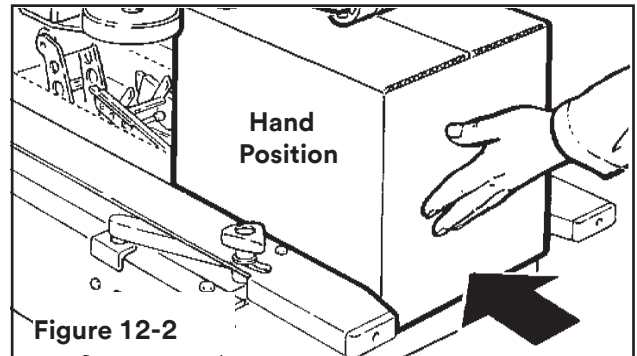


Figure 12-2

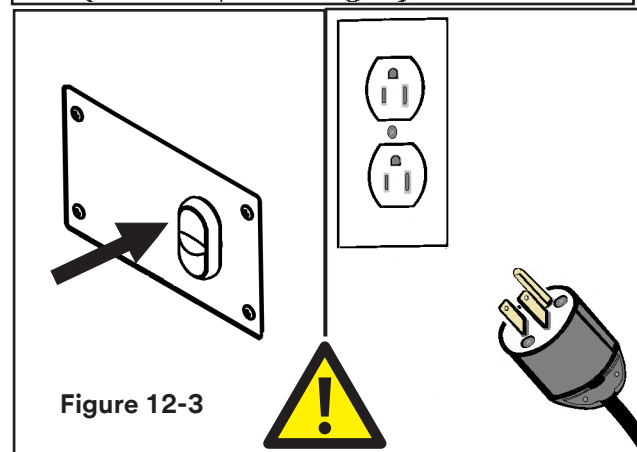


Figure 12-3

12.7 Table of Operation Adjustments - Operator Qualifications

1	Tape loading and threading	1
2	Tape web alignment	1
3	Adjustment of one way tension roller	1
4	Adjustment to box size (H and W)	1
5	Top flap compression rollers	1
6	Adjustment of tape applying spring	1
7	Conveyor bed height adjustment	1
8	Special Adjustment-Taping head	2
9	Special Adjustment-Column re-positioning	2

12.8 Safety Devices Inspection

1. Taping units blade guard
2. Latching emergency stop button
3. STOP (OFF) (O) main switch

12. Operation *(continued)*

12.9 Troubleshooting Guide

PROBLEM	CAUSE	CORRECTION
After turning the ON/OFF switch to the On position, machine does not start	The lockable emergency stop button is pressed	Release the emergency stop button Check the electrical system
The magnetothermic protection opens the main switch	Motor under stress Thermal cut-out not at correct amperage setting	Check that the drive belts are not blocked Set the correct amperage
Drive belts do not convey boxes	Narrow boxes Worn drive belts Taping head applying spring holder missing Taping head applying spring set too high	Check machine specifications Boxes are narrower than recommended, causing slippage and premature belt wear Replace drive belts Adjust the box height adjustment with the crank Reduce spring pressure
Drive belts do not turn	Worn or missing friction rings Drive belt tension too low Electrical disconnect Motor not turning	Replace friction rings Adjust belt tension Check power and electrical plug Evaluate problem and correct

(continued on next page)

12. Operation *(continued)*

12.9 Troubleshooting Guide *(continued)*

PROBLEM	CAUSE	CORRECTION
The blade does not cut tape or the tape end is jagged or shredded	The blade is dull and/or has broken teeth Tape tension is insufficient Adhesive has built up on the blade The blade is in backwards One or both cutter springs are missing or stretched	Replace the blade Increase tape tension by adjusting the one-way roller Clean and adjust the blade Lubricate the blade oiler pad on the blade guard Mount the blade so that the beveled edge is away from the entrance end of the head Make sure the blade is bottomed out against the mounting bolts Replace the defective spring(s)
Tape is tabbing on the trailing leg on the back of the box	There is excess tension on tape drum assembly and/or one-way tension roller assembly Rollers in the tape path do not rotate freely The blade is not cutting tape properly The tape is threaded incorrect Applying mechanism spring has too little tension	Adjust the one-way tension roller and/or tape drum assembly Clean adhesive deposits from the surface ends and shafts of the rollers. Remove all lubricant from roller surfaces Refer to tape cutting problems Rethread tape Move spring hook to next tighter hole

12. Operation *(continued)*

12.10 Operation Warnings



Warning

1. Turn electrical and air supply off and disconnect before servicing taping heads or performing any adjustments or maintenance on the machine. Turn electrical and air supplies off when machine is not in use.
2. Do not leave machine running unattended.
3. Before turning drive belts on, be sure no tools or other objects are on the machine bed.
4. Keep hands and loose clothing away from moving belts.
5. Never attempt to remove jammed boxes from the machine while machine is running.
6. Do not attempt to override safety devices.
7. Keep hands and clothing away from taping heads when machine is running. A box traveling through the machine causes taping head rollers to retract when box enters and extend as box leaves taping head.
8. Both the upper and lower taping heads utilize extremely sharp tape cut-off knives. The Blade is located under the orange Blade guard which has the "Warning – SHARP BLADE" label. Before loading tape, refer to to identify the Blade location. Keep hands out of these areas except as necessary to service the taping heads.
9. To provide continued protection against risk of electric shock, connect to properly grounded outlets only.
10. Failure to comply with these Warnings could result in severe personal injury and/or equipment damage.

13. Maintenance and Repairs

13.1 Safety Measures (see section 3)

Carrying out maintenance and repairs may imply the necessity to work in dangerous situations.

13.2 Tools and Spare Parts Supplied with the Machine

See Spare Parts Order Section.

13.3 Recommended Frequency of Inspection and Maintenance Operations

Operation	Frequency	Qualification	Sections
Inspection safety features	daily	1	13.4
Cleaning of machine	weekly	1	13.5
Cleaning of cutter blade	weekly	2	13.6
Oiling of felt pad	weekly	2	13.7
Lubrication	monthly	2	13.7-13.8
Blade replacement	when worn	2	See Manual 2 or 3
Drive belt replacement	when worn	2	13.10

13.4 Inspections to be Performed Before and after every Maintenance Operation

Before every maintenance operation, Turn the main switch OFF (O) and disconnect. During the maintenance operation, only properly trained and qualified personnel must work on the machine. At the end of every maintenance operation check the safety devices.

13.5 Check Efficiency of Safety Features

1. Blade guard assembly upper taping head
2. Blade guard assembly lower taping head
3. Latching Emergency stop button with mechanical lock (interrupt supply of electrical power)
4. Turn main switch STOP/OFF (O)
5. Safety guards top drive belts

13.6 Cleaning of Machine

Qualification 1

A weekly cleaning with dry rags or diluted detergents is necessary. Cardboard boxes produce a significant quantity of dust and paper chips when processed or handled in case sealing equipment. If this dust is allowed to build up on machine components, it can cause

component wear and over-heating of drive motors. The dust build up is best removed from the machine with a vacuum cleaner. Depending on the number of cartons processed, this cleaning should be done weekly. Excessive build-up that cannot be removed by vacuuming should be removed with a damp cloth.

13.7 Cleaning of Cutter Blade

Qualification 2

Should tape adhesive build-up occur, carefully wipe clean with oily cloth or brush. Oil prevents the build-up of tape adhesive

(See Manual 2 or 3)



Warning

- **To reduce the risk associated with mechanical and electrical hazards:**
 - Read, understand, and follow all safety and operating instructions before operating or servicing the case sealer.
 - Allow only properly trained and qualified personnel to operate and service this equipment.
- **To reduce the risk associated with pinches, entanglement and hazardous voltage:**
 - Turn electrical supply off and disconnect before performing any adjustments, maintenance or servicing the machine or taping heads.

13. Maintenance and Repairs *(continued)*

13.8 Box Drive Belt Replacement

Note – 3M recommends the replacement of drive belts in pairs, especially if belts are unevenly worn.

Lower Drive Belts (Figure 13-1)

1. Remove and retain center plate (A) and four (4) screws.
2. Loosen, but do not remove lock nut (B).
3. Loosen tension screw (C) until all belt tension is removed.
4. Pull belt splicing pin (D) out and remove belt.
5. Place new belt over pulleys with laced splice at top. Insert splicing pin.

Important – Pin must not extend beyond edge of belt.

6. Adjust belt tension as explained in “Adjustments - Box Drive Belt Tension.”
7. Replace side cover and center plate and secure with original fasteners.

Upper Drive Belts (Figure 13-2)

1. Remove and retain front cover (A) and four (4) screws.
2. Loosen, but do not remove lock nut (B).
3. Loosen tension screw (C) until all tension is removed from belt.
4. Move compression roller assembly out to full open position.
5. Remove 4 screws on side of belt guard (D) and slide belt guard out to expose belt.
6. Pull belt splicing pin (E) out and remove belt.
7. Place new belt over pulleys with laced splice at top. Insert splicing pin.

Important – Pin must not extend beyond edge of belt.

8. Adjust belt tension as explained in “Adjustments – Box Drive Belt Tension.”
9. Replace front cover and belt guard(s) and secure with original fasteners.

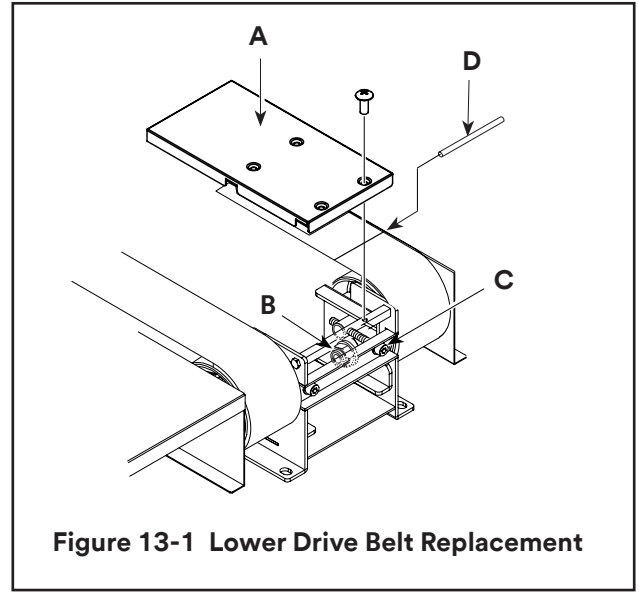


Figure 13-1 Lower Drive Belt Replacement

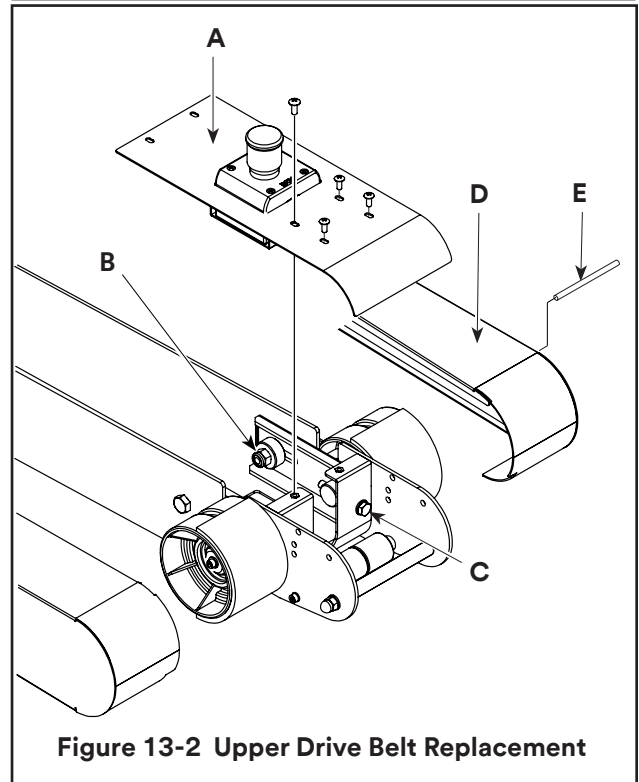


Figure 13-2 Upper Drive Belt Replacement



Warning

- To reduce the risk associated with mechanical and electrical hazards:
 - Turn electrical supply off and disconnect before performing any adjustments, maintenance, servicing the machine or taping heads.

13. Maintenance and Repairs *(continued)*

13.9 Box Drive Pulley Rings

Before installing a new belt, check the orange plastic drive pulley rings for wear. If torn, broken, or worn smooth, replace the rings (Figure 13-3).

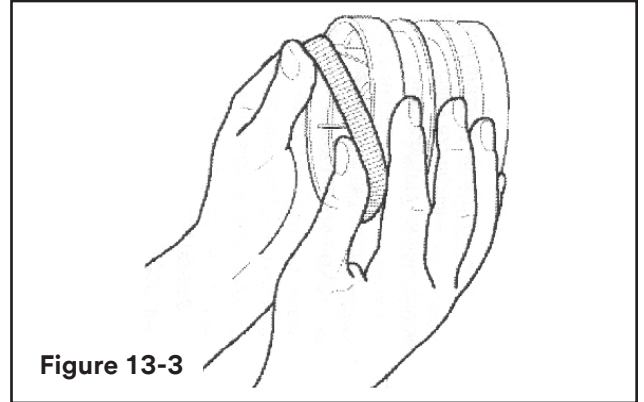


Figure 13-3

13.10 Box Drive Belt Tension

The four (4) continuously moving drive belts convey boxes through the tape applying mechanism. The box drive belts are powered by an electric gear motor.

Tension adjustment of these belts may be required during normal operation (for Belt Tension Adjustment - refer to Box Drive Belt Replacement). Belt tension must be adequate to positively move the box through the machine and the belts should run fully on the surface of the pulleys at each end of the frame. The idler pulleys on the infeed end are adjusted in or out to provide proper belt tension. Each belt is adjusted separately. Belt tension is obtained by tightening the adjustment screw so that a moderate pulling force of 3.5kg [7lbs.] applied at the mid span, as shown in Figure 13-4, will deflect the belt 25.4mm [1 inch]. This will provide positive contact between the belt and the drive pulley on the discharge end of the drive assembly.



Warning

- To reduce the risk associated with mechanical and electrical hazards:
 - Turn electrical supply off and disconnect before performing any adjustments, maintenance, servicing the machine or taping heads.



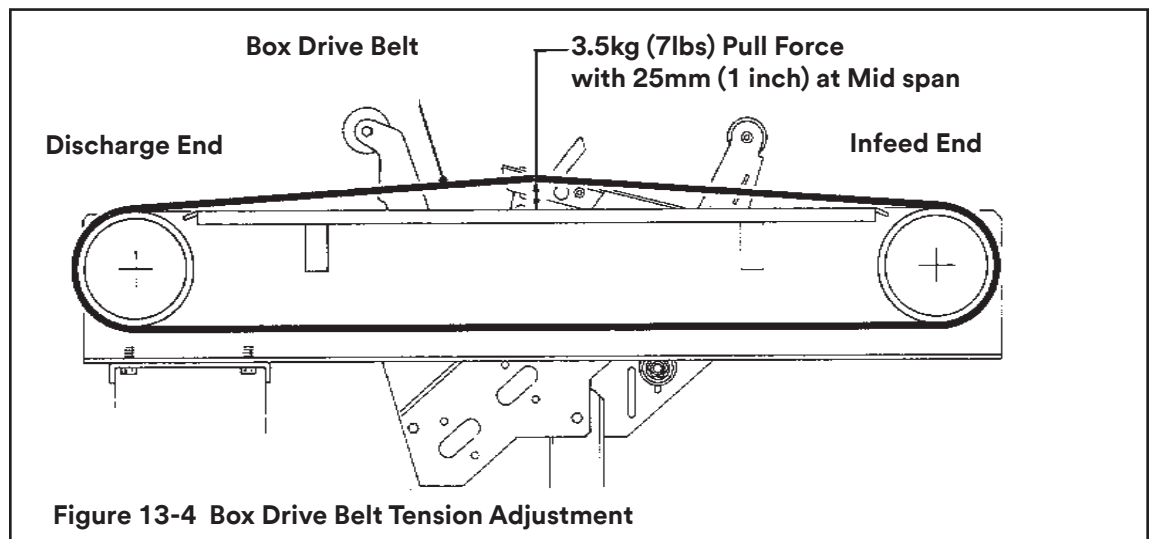


Figure 13-4 Box Drive Belt Tension Adjustment

13. Maintenance and Repairs *(continued)*

Refer to Figure 13-5 and 13-6 and adjust belt tension as follows:

1. Remove and retain center plate/ front cover and four (4) screws.
2. Loosen, but do not remove lock nut with an open end wrench.
3. Reset the tension on the drive belts as needed. Adjust the M8 tension screws in (clockwise) to increase tension or out (counter-clockwise) to decrease tension. Tighten lock nut to secure tension setting.
4. Replace center plate/front cover and secure with original screws.

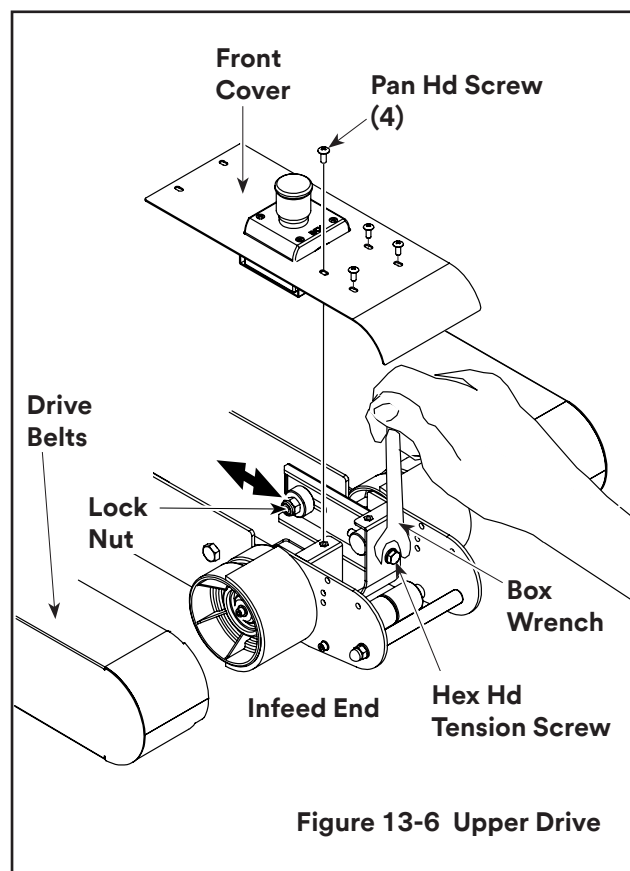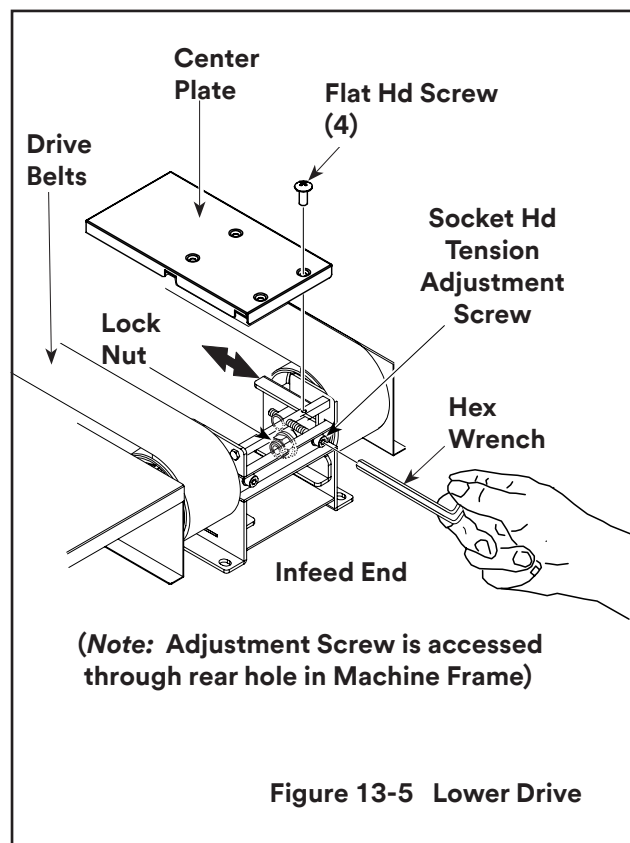

13. Maintenance and Repairs (continued)

13.11 List of the Maintenance Operations

Date:

Description of Operation

This image shows a blank sheet of white paper with horizontal blue ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

14. Additional Instructions

14.1 Information for Disposal of Machine (ELV)

The machine is composed of the following materials:

- Steel structure
- Nylon rollers
- Drive belts in PVC
- Nylon pulleys



For machine disposal, follow the regulations published in each country.

14.2 Emergency Procedures

In case of danger/fire:
Disconnect plug of power cable from power supply (Figure 14-1).

IN CASE OF FIRE

Use a fire extinguisher that is rated for electrical fires - (Figure 14-2).

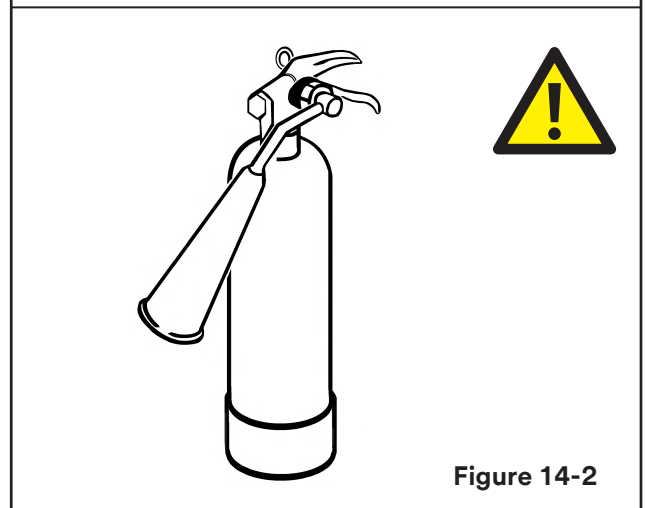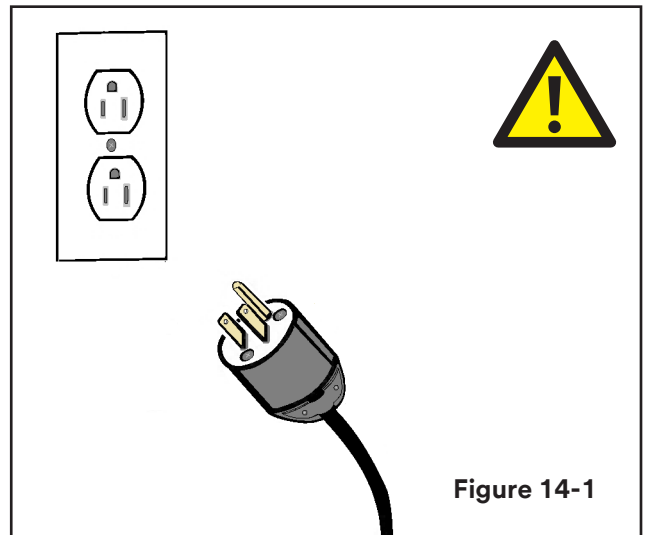

15. Additional Information

15.1 Statement of Conformity


N/A

15.2 Emission of Hazardous Substances

Nothing to report


16. Technical Documentation and Information

16.1 Electric Diagram

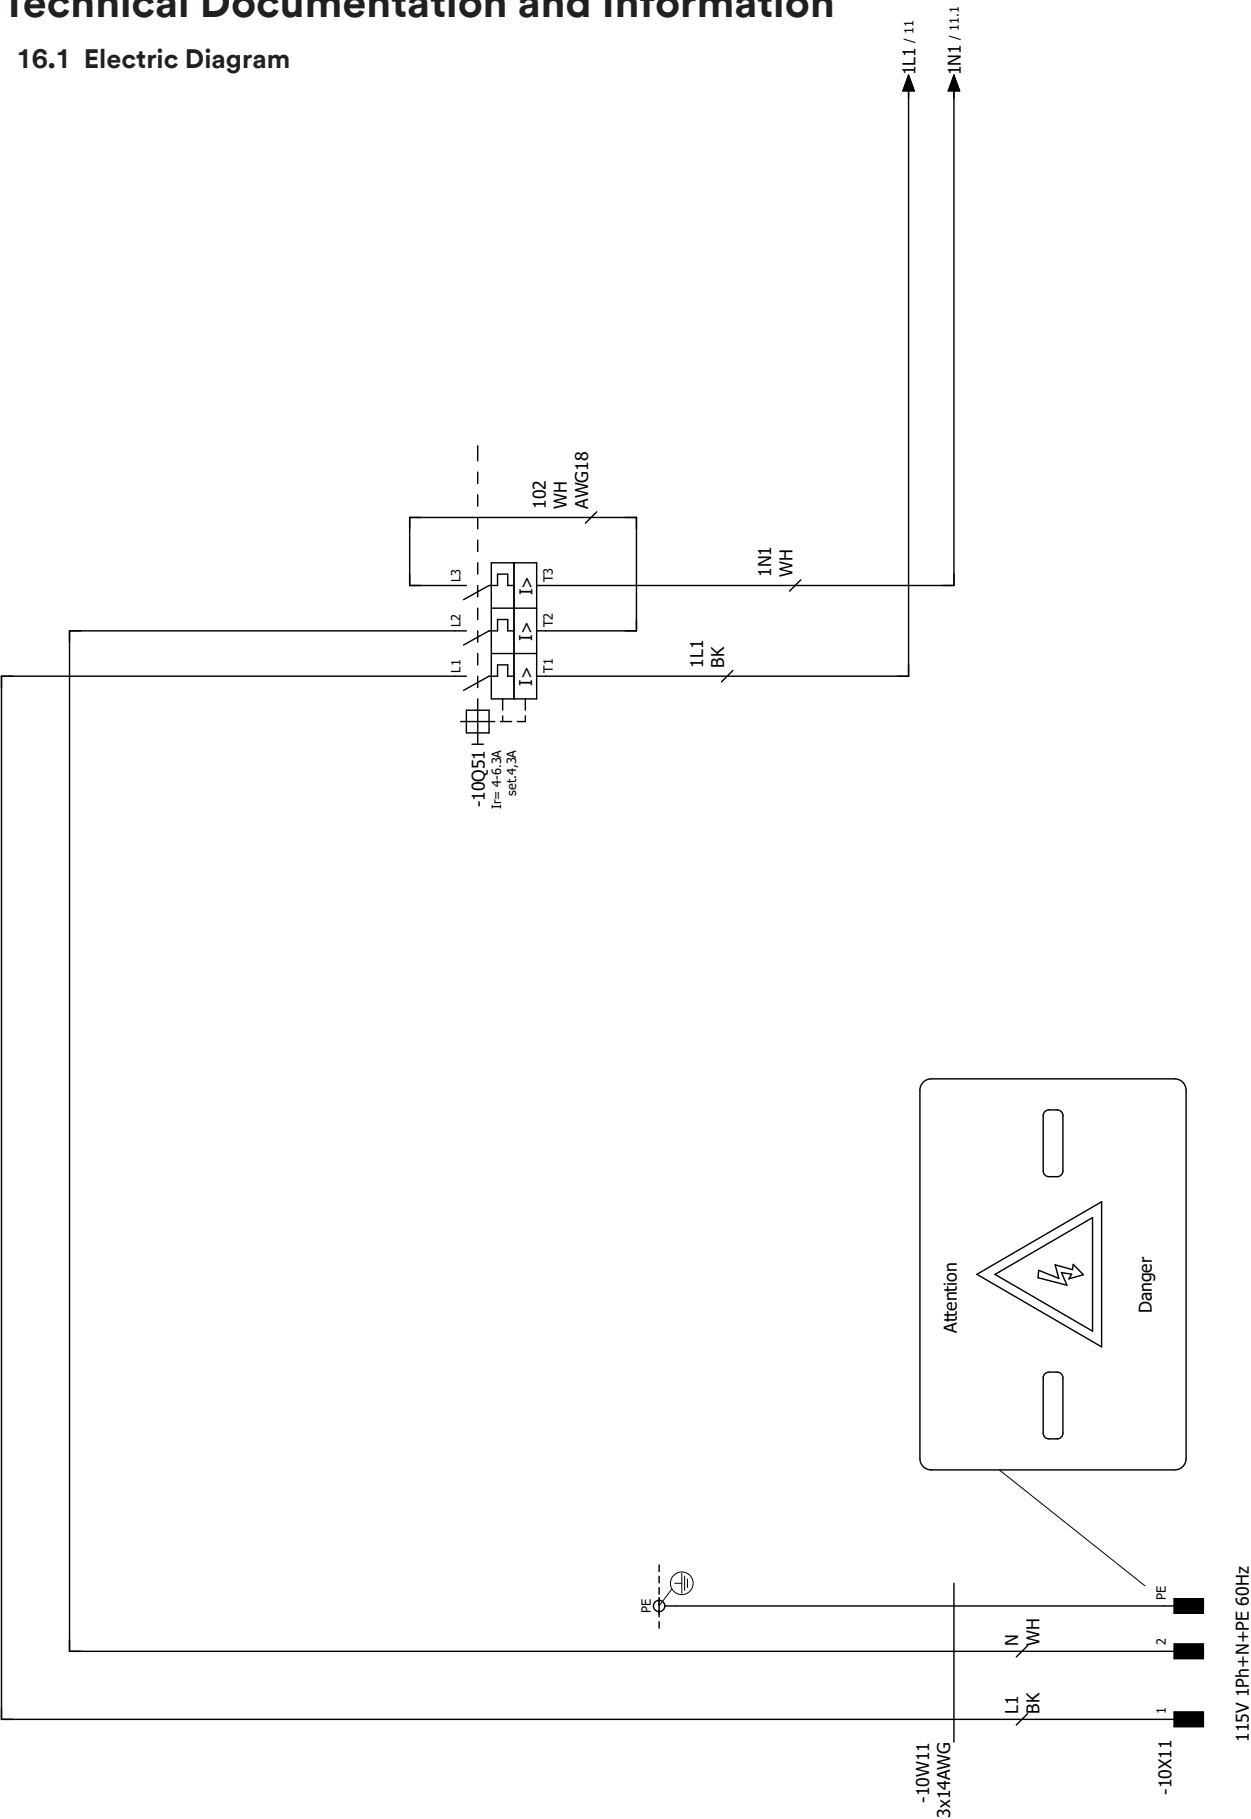


16. Technical Documentation and Information

16.1 Electric Diagram

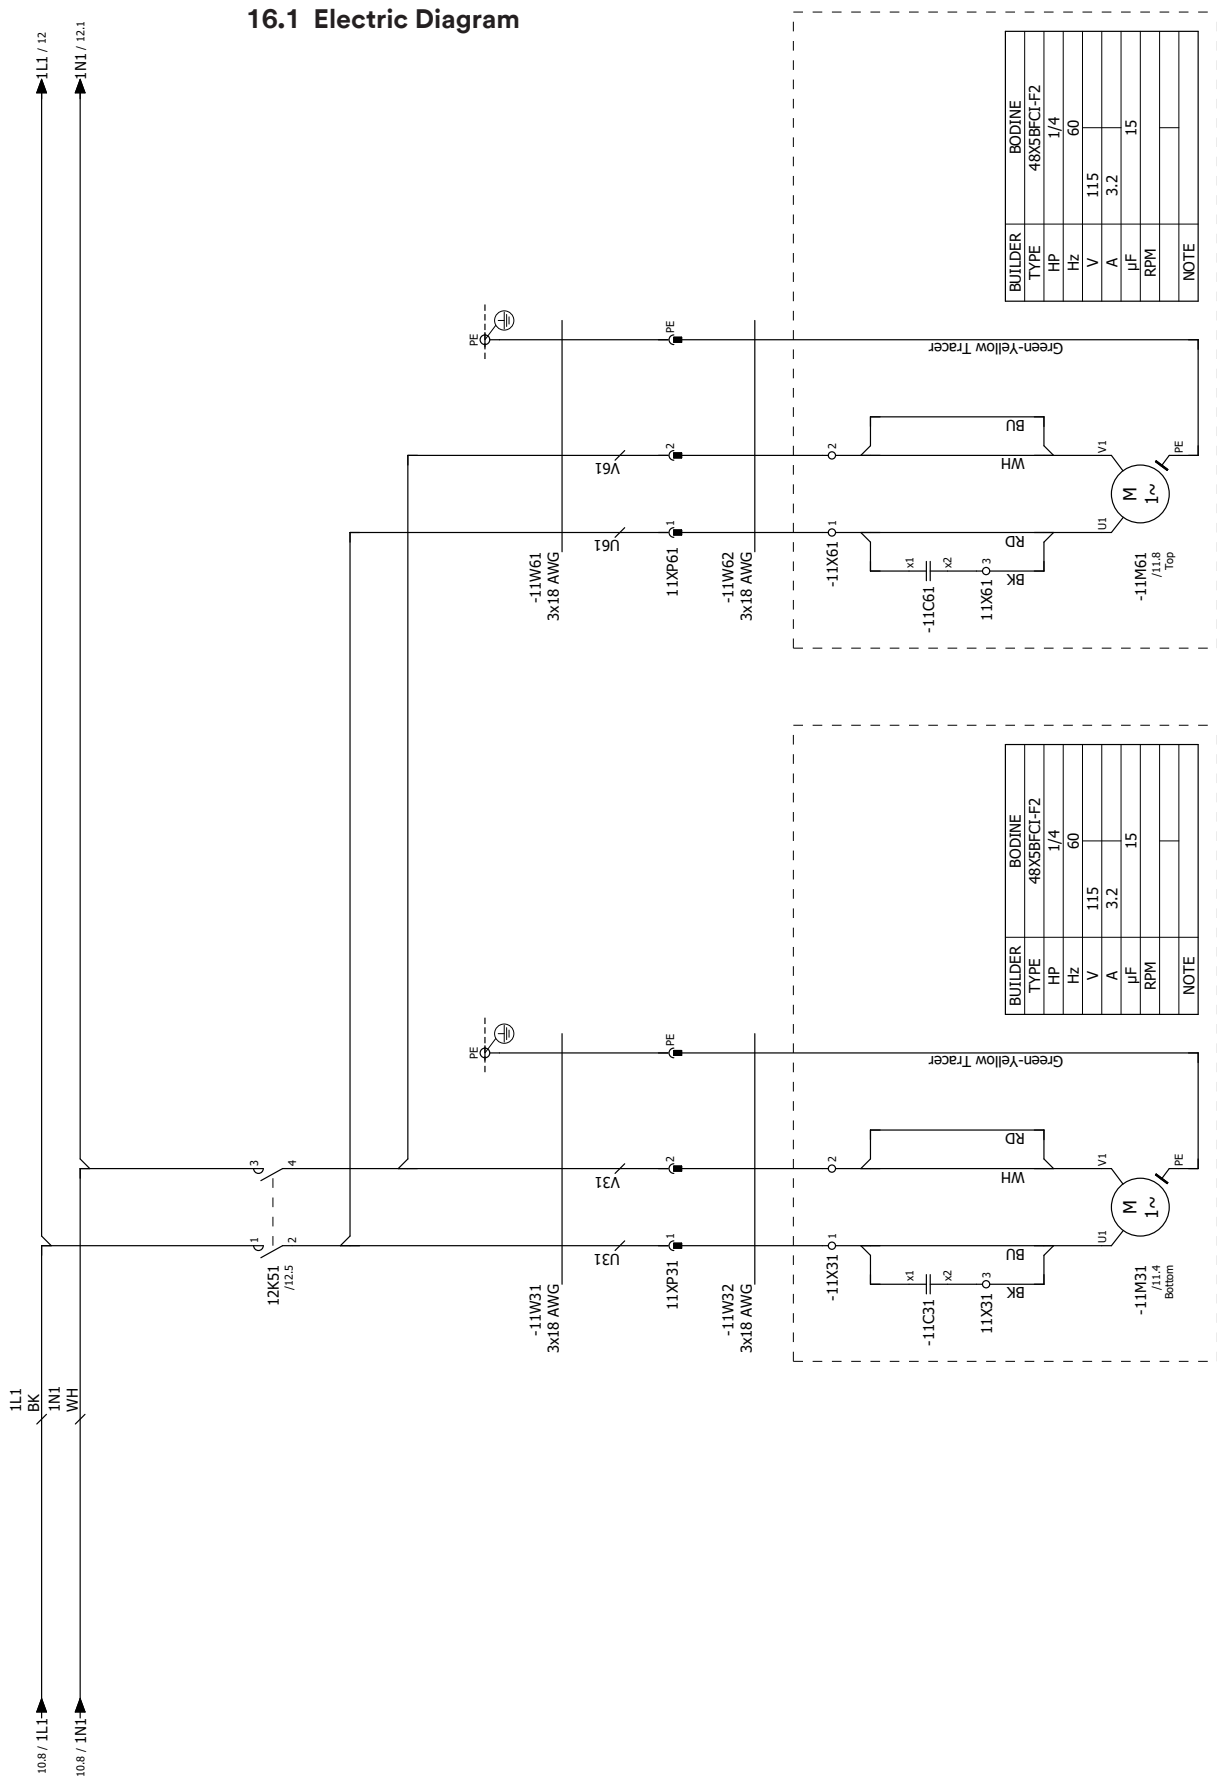

16. Technical Documentation and Information

16.1 Electric Diagram

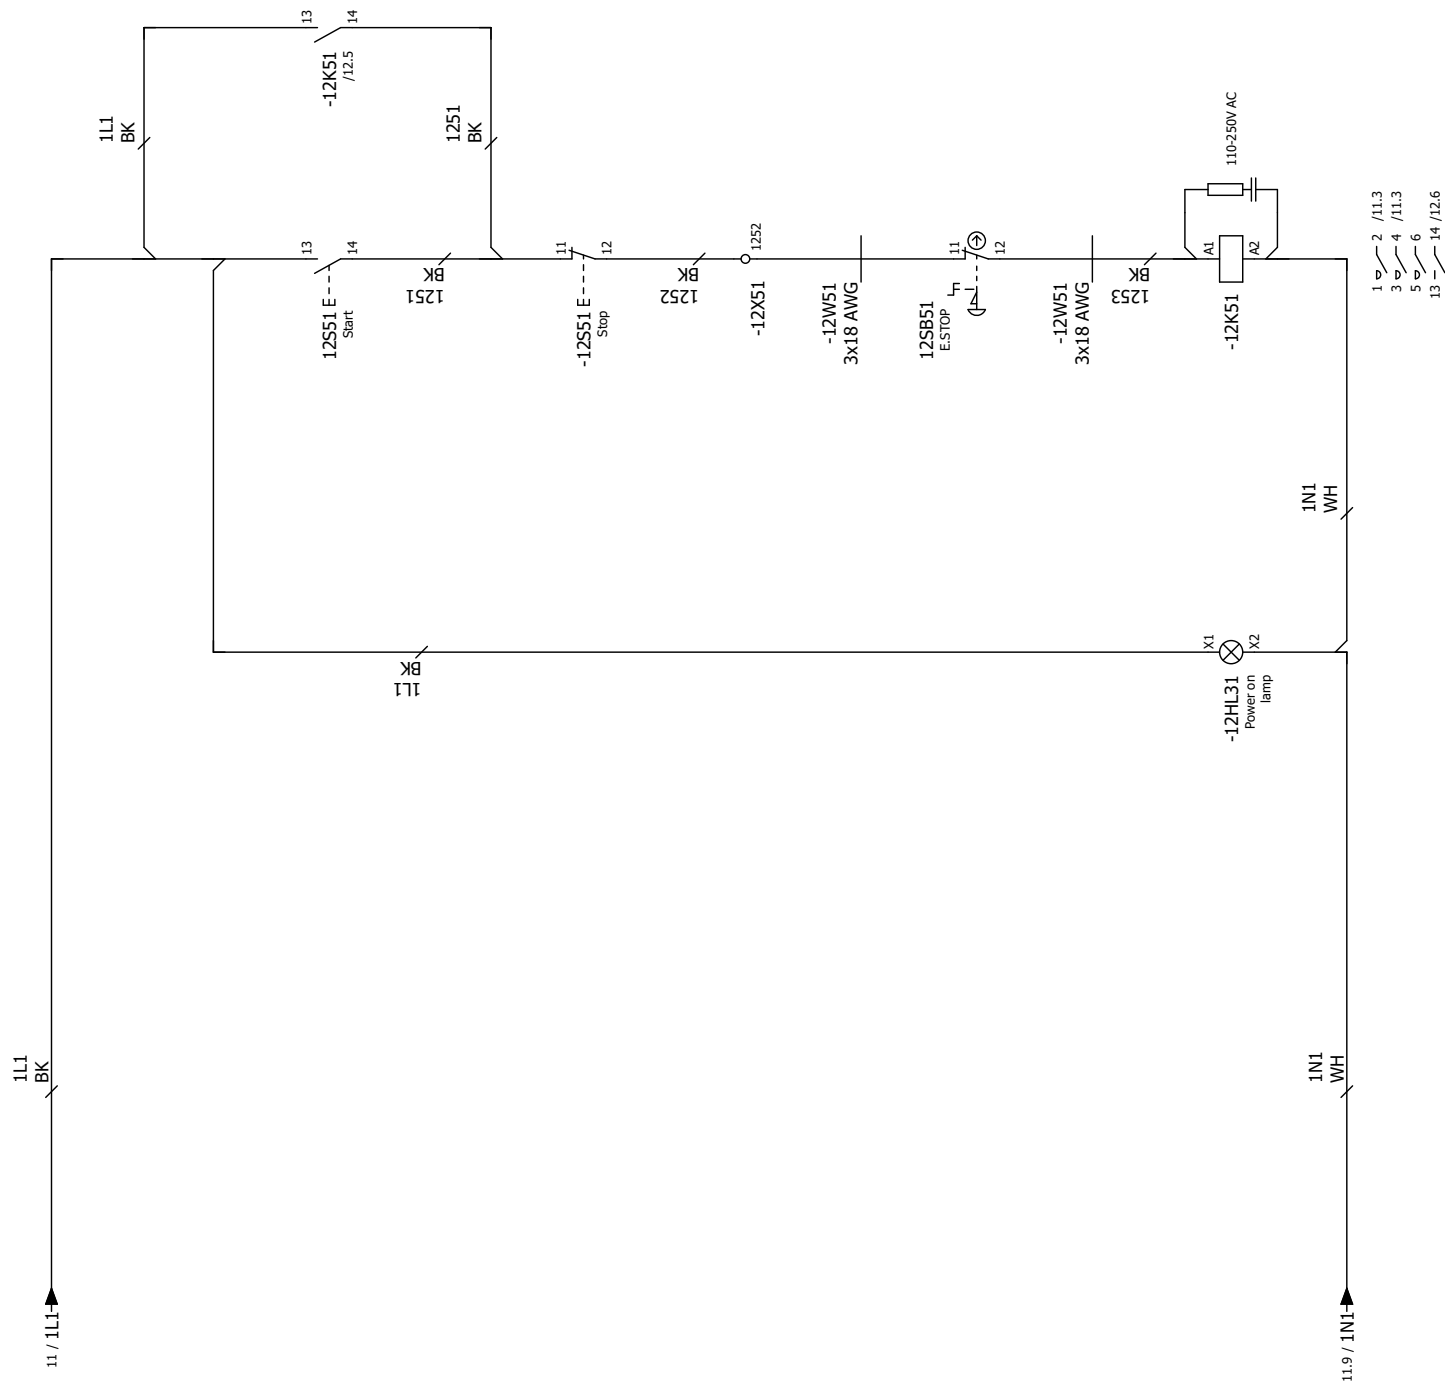

16. Technical Documentation and Information *(continued)*

16.2 Spare Parts Order

Replacement Parts Ordering Information and Service

Refer to the first page of this instruction manual “Replacement Parts and Service Information”.

Order parts by quoting the following information:

(Refer to the Identification Plate on the Machine)

- Machine Model
- Serial Number
- Figure Number
- Position
- 3M Part Number (11 Digits)
- Description
- Quantity

Refer to Manual 2 for recommended taping head spare parts.

Important!

The machine is constantly revised and improved by our designers. The spare parts catalogue is also periodically updated. It is very important that all the orders of spare parts make reference to the serial number of the machine (located on the identification plate on the machine).

The manufacturer reserves the right to modify the machine at any time without notice.

Spare Parts – 7000a-7000a3 Pro Adjustable Case Sealer

It is suggested that the following spare parts be ordered and kept on hand:

7000a-7000a3 Pro

Qty.	3M-Part Number	Description
2	78-8137-6303-0	Belt-Drive w/Hook

Spare Parts Kit

7000a - Part Number 78-8137-8728-6
7000a3 - Part Number 78-8137-8729-4

Label Kit

In the event that any labels are damaged or destroyed, they must be replaced to ensure operator safety. A label kit, part number 78-8137-7538-0, is available as a stock item. It contains all the safety labels used on the 7000a-7000a3 Pro Adjustable Case Sealer.

Tool Kit

A tool kit, part number 78-8137-7541-4, is supplied with the machine as a stock item. The kit contains the necessary open end and hex socket wrenches for use with the metric fasteners on the case sealer. The threading tool, part number 78-8076-4726-4 contained in above kit is also available as a replacement stock item.

Replacement Parts Ordering Information and Service

Refer to the first page of this instruction manual “Replacement Parts and Service Information”.

16. Technical Documentation and Information *(continued)*

7000a-7000a3 Pro Adjustable Case Sealer, Type 32600 Frame Assemblies

To Order Parts:

1. Refer to first illustration, Frame Assemblies, for the Figure Number that identifies a specific portion of the machine.
2. Refer to the appropriate Figure or Figures to determine the parts required and the parts reference number.
3. The Parts List that follows each illustration, includes the Reference Number, Part Number and Part Description for the parts on that illustration.
Note – The complete description has been included for standard fasteners and some commercially available components. This has been done to allow obtaining these standard parts locally, if desired.
4. Order parts by Part Number, Part Description and Quantity required. Also include the model/machine name, machine type, and serial number that are located on the identification plate.
5. Refer to the first page of this instruction manual “Replacement Parts and Service Information” for replacement parts ordering information.

Important – Not all the parts listed are normally stocked items. Some parts or assemblies shown are available only on special order.

Contact 3M/Tape
Dispenser Parts to
confirm item
availability

Options and Accessories

For additional information on the options and accessories listed below - contact your 3M Representative.

Part Number	Option / Accessory
78-8052-6553-1	Box Hold Down Attachment
70-0064-2998-2	Caster Kit Attachment
70-0067-5966-9	Conveyor Extension Attachment
78-8069-3926-6	Low Tape Sensor Kit
70-0064-1097-4	Tape Application Monitor (TAM)
78-8095-4854-4	2-Inch Tape Edge Fold Attachment, Upper Head
78-8095-4855-1	2-Inch Tape Edge Fold Attachment, Lower Head
70-0064-1104-8	Tape Application Monitor - Tape Outboard Kit
78-8114-0940-4	3 Flap Folder Kit
70-0067-3769-9	Filler Plate - Lower

