


Base-Coat Denibbing

1

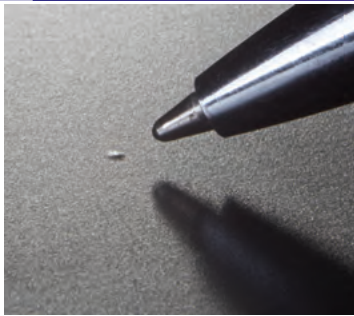

Identify Defects

Identify surface defects and dirt nibs between applications of base coat.

2



Remove Defects

Sand to remove defect using P1000 flexible abrasive sheet on foam pad.
Note: Sand in one direction when removing defect to prevent trapping defect.

3



Clean

Blow off surface with clean, dry air.

Visit www.3M.com.au/aad or www.3m.co.nz/aad for more SOPs and videos

Product List ANZ

3M™ Flexible Abrasive Hookit™ Sheet, 140mm x 170mm, P1000, PN 34340



3M™ Flexible Abrasive Hookit™ Foam Pad, PN 34349



Think About Your Health

3M™ E-A-R™ Skull Screws™ Ear Plug, PN P1300



3M™ Half Facepiece Respirator, PN 07502 with appropriate cartridge



3M™ Lexa™ Protective Eyewear, PN 15200 or 3M Secure Fit AF421SF-AS

