


Installation Instructions

3M™ Retrofit Kevlar 18" D-Ring with Connector

Field Remediation for Specific Arc Flash Harnesses with Integrated Nylon D-Ring Extension

Step 1:

Locate existing D-Ring Extension

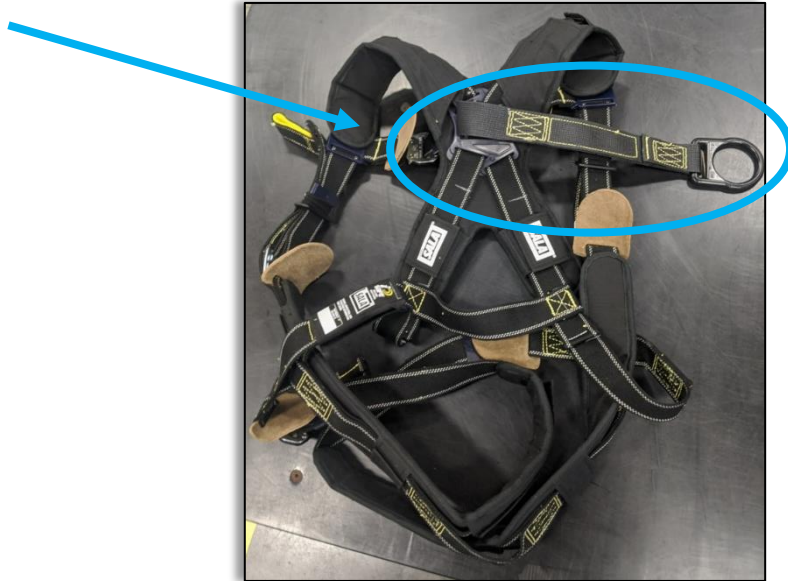

Step 2:

Carefully remove D-ring extension



Only cut the top extension webbing.

Do not touch the main harness webbing or the harness will be unfit for use

Be careful to not cut the main harness webbing

Installation Instructions


3M™ Retrofit Kevlar 18" D-Ring with Connector

Field Remediation for Specific Arc Flash Harnesses with Integrated Nylon D-Ring Extension

Step 3:

Install 3M™ Retrofit Kevlar 18" D-Ring

1: Open the connector by pushing both buttons at the same time and slide the post out

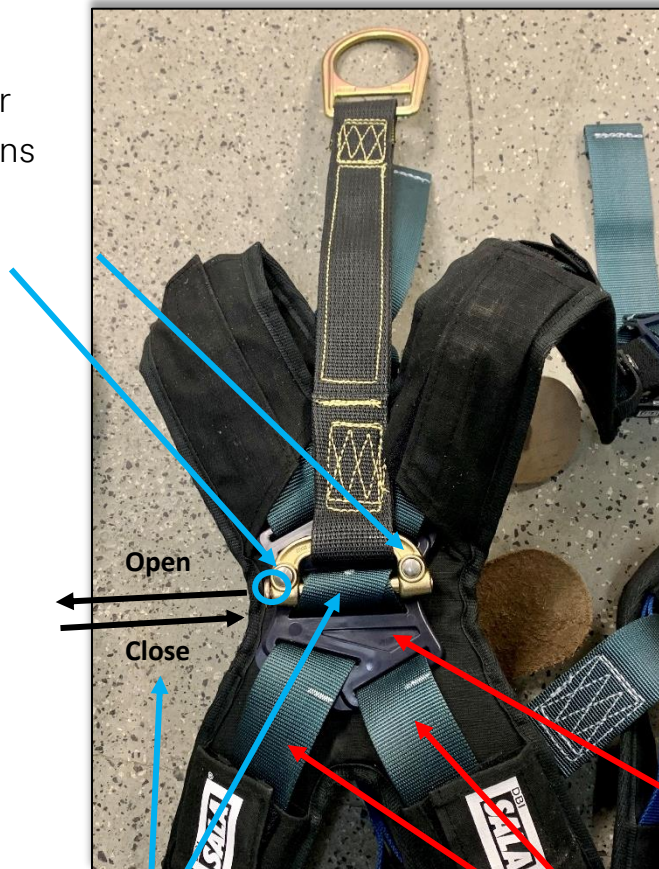

2: Lift the main harness webbing and create a loop for the connector post to slide through

**Ensure the connector is on top of the dorsal pad

3: Slide the connector post through the loop so the webbing goes over the post.

Push the post back into the connector ensuring there is a click sound and that the post is locked in the connector.

Dorsal Pad

Main Webbing