

Installation Instructions: 3M™ Retrofit Sternal D-Ring Sleeve Field Remediation for Specific Cross Over Style Harnesses




Step 1:

Locate the frontal d-ring attachment.



Step 2:

Loosen the webbing that's routed through the front d-ring, form a loop that's large enough to expose the D-Ring bars, and locate the middle bar on the D-Ring.

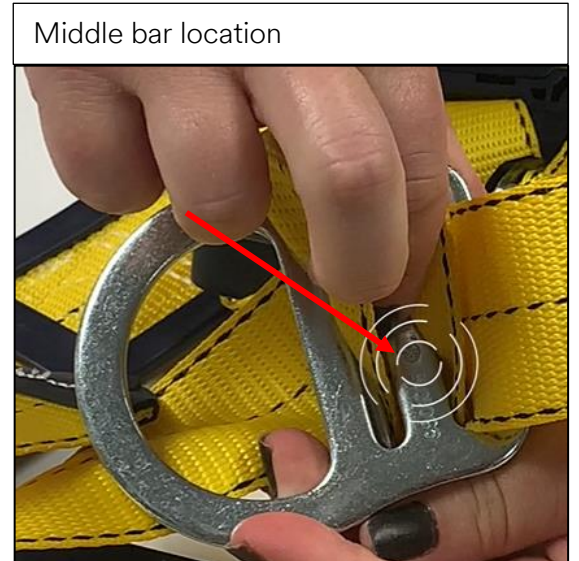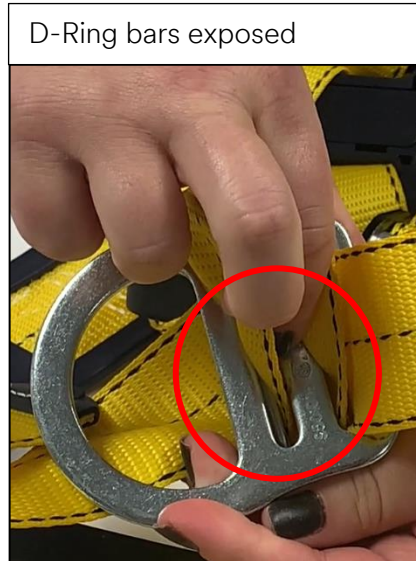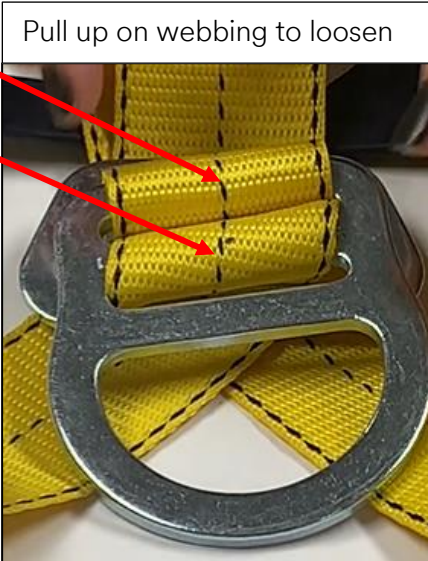

Installation Instructions: 3M™ Retrofit Sternal D-Ring Sleeve Field Remediation for Specific Cross Over Style Harnesses

Step 3:

Install plastic sleeve onto the middle bar by spreading the sleeve and placing it fully around the middle bar. Ensure the sleeve is fully surrounding the middle D-Ring bar and can rotate.

Spread the sleeve



Place fully around middle bar



Rotate sleeve



Step 4:

Pull the webbing snug to complete the process.

Pull webbing until snug



Completed and fully snug

