


Rework Instructions:
3M™ Rescue Snap Clip Removal
Field Remediation for Specific Arc Flash Harnesses with Integrated Snap Clips


Step 1:

Locate existing top snap clips

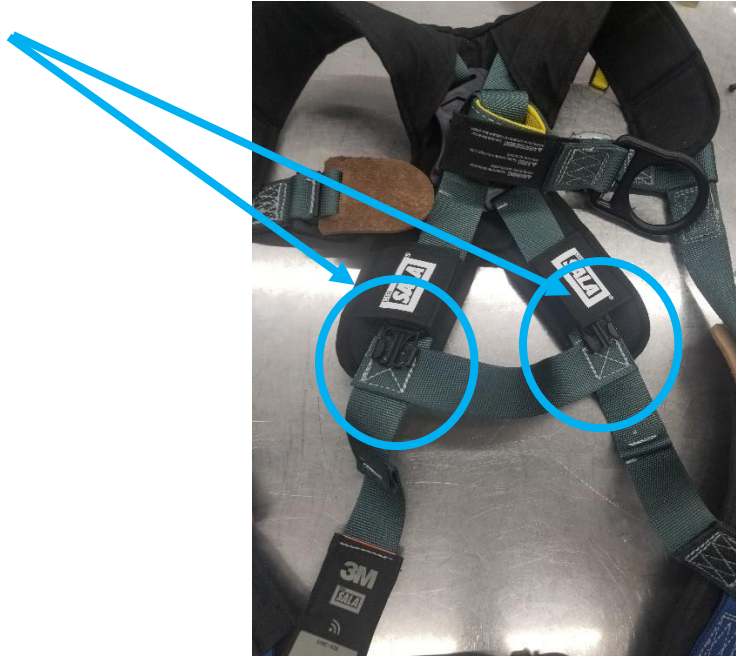


Step 2:

Disengage the padding hook and loop to better expose the snap clips

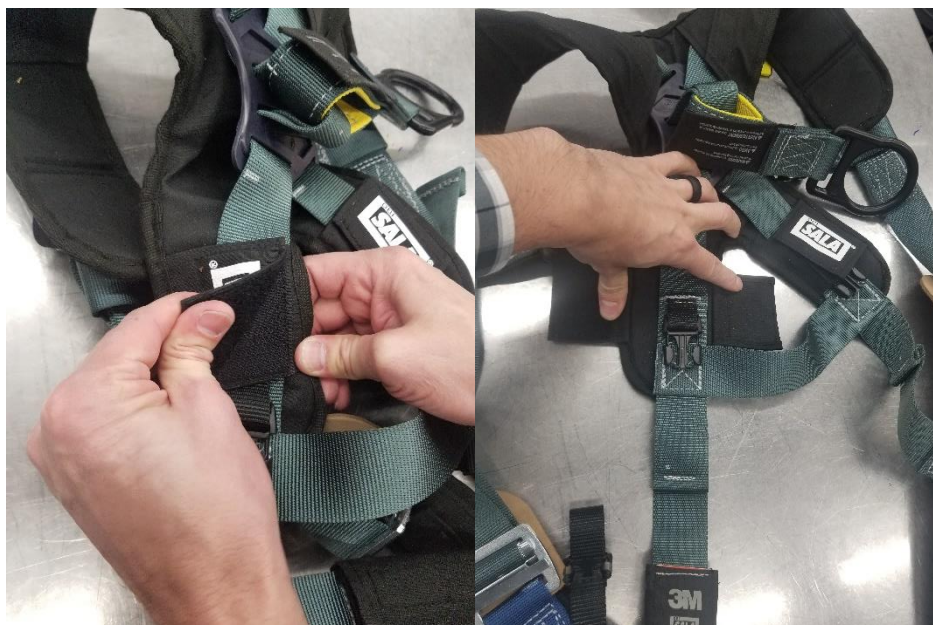

Rework Instructions:**3M™ Rescue Snap Clip Removal****Field Remediation for Specific Arc Flash Harnesses with Integrated Snap Clips****Step 3:**

Using scissors, cut the 1" black webbing securing the snap clip. Cut flush to the main harness webbing. **DO NOT CUT THE MAIN HARNESS WEBBING.** Repeat for both sides

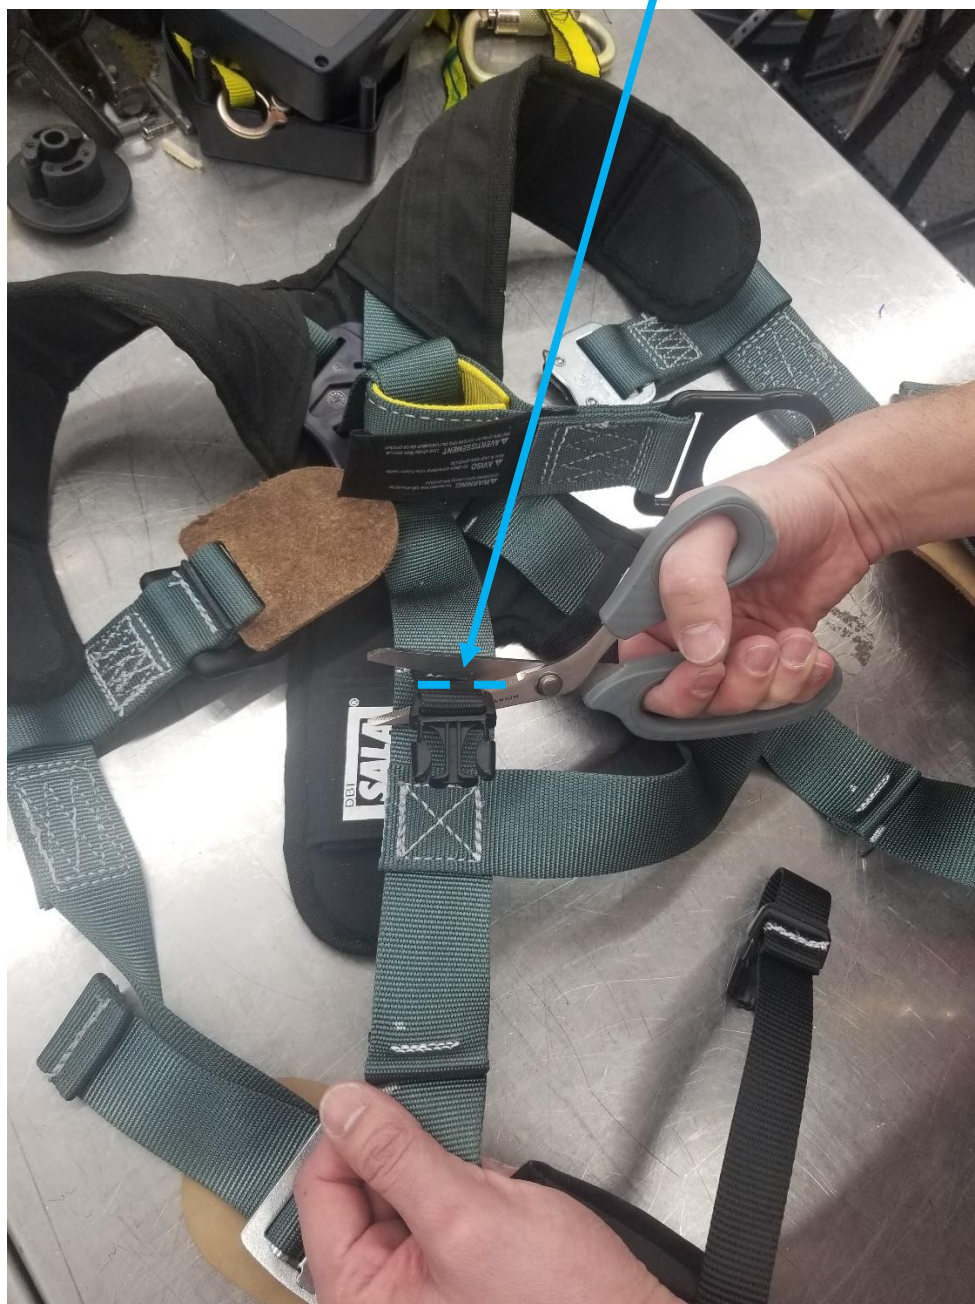

Rework Instructions:


3M™ Rescue Snap Clip Removal

Field Remediation for Specific Arc Flash Harnesses with Integrated Snap Clips



Only cut the 1" black clip webbing.

Do not touch the main harness webbing with a sharp edge to avoid rendering the harness unfit for use

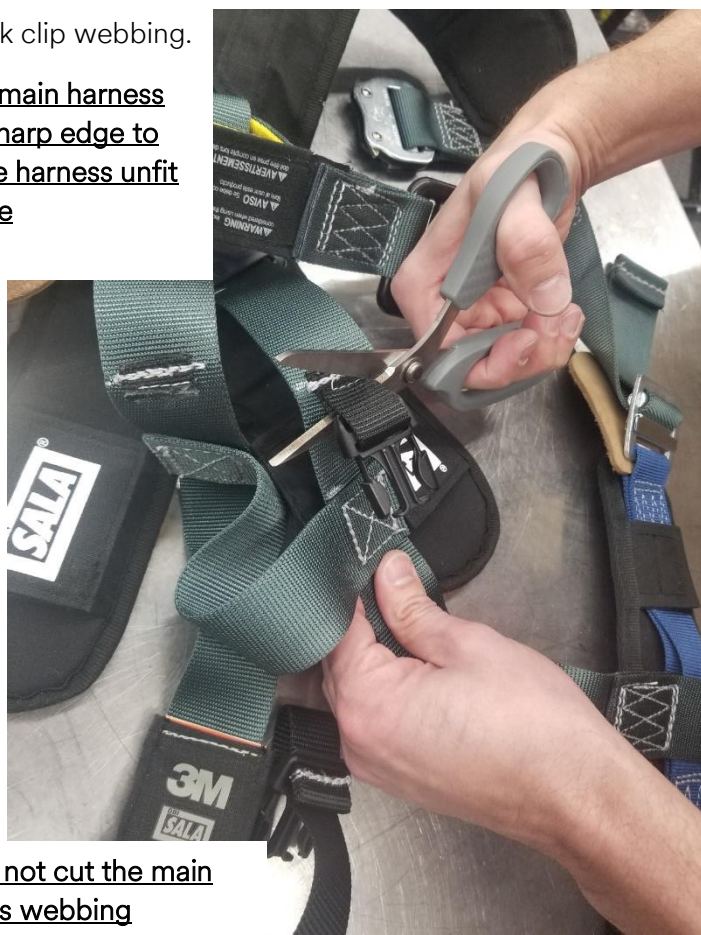

Be careful to not cut the main harness webbing

Rework Instructions:

3M™ Rescue Snap Clip Removal

Field Remediation for Specific Arc Flash Harnesses with Integrated Snap Clips

Step 4:

Locate existing bottom snap clips



Rework Instructions:**3M™ Rescue Snap Clip Removal**

Field Remediation for Specific Arc Flash Harnesses with Integrated Snap Clips

Step 5:

Using scissors, cut the 1" black webbing securing the snap clip. Cut flush to the main harness webbing. **DO NOT CUT THE MAIN HARNESS WEBBING.** Repeat for both sides

Only cut the 1" black clip webbing.

Do not touch the main harness webbing with a sharp edge to avoid rendering the harness unfit for use



Be careful to not cut the main harness webbing