

Bondo® All Purpose Putty

Bondo® All-Purpose Putty is a versatile, two-part repair filler made for a wide range of projects inside and outside the home. It is ideal for fixing damaged areas such as chips, cracks, gouges, and surface imperfections on many household materials. The formula is easy to mix and shape, cures quickly, and resists shrinking for reliable results. Use it to create tough, lasting repairs on metal, aluminum, masonry, concrete, and other common surfaces.

Additional Product Safety and Health Information Source: Safety Data Sheet (24-2445-5) or call 1-800-494-3552. For more content, training videos and product information, visit Bondo.com.

Project Ideas

- Repair masonry
- Dents in metal garage doors
- Repair shelves

Surfaces

Metal, aluminum, masonry, concrete, and wood.



Workable

3 to 4 min



Cure/Sand time

20 min



Waterproof

No



Stainable

No



Paintable

Yes



Type of Hardener

Blue cream (included)



Color when cured*


Gray

*if mixed properly



Safety


Use this product only with adequate ventilation and always wear appropriate personal protective equipment (eye, skin, respiratory and hands). Refer to Safety Data Sheet for more information. Make sure to read and understand all safety information on the product before using.

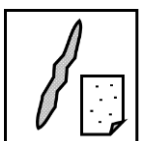

Surface preparation


Clean all surfaces with soap and water followed by a low VOC compliant cleaner. Allow to dry.

Sand the damaged area with 80 grit sandpaper to remove all paint, primer, and rust down to bare metal. Sand 1-2 inches beyond damaged area. Clean again with a low VOC compliant cleaner.

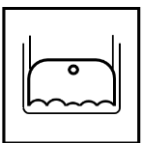

Mixing

Stir the filler before using. Knead the hardener tube. For a 3-inch diameter puddle of filler, squeeze out a 3" long strip of hardener. This is the maximum recommended amount to mix at any given time for optimal application. Mix thoroughly to a uniform color on a clean, non-porous surface. When product is mixed, the working time is 3-4 minutes. Do not add hardener directly into the filler container.

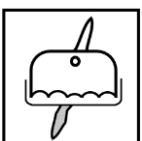

Application

Spread an initial thin layer of the mixed filler over the repair area using firm pressure to ensure maximum adhesion. Apply additional layers of filler as needed. Allow filler to cure for 20 minutes.

For best results apply at 45°F (7°C) or above.



Finishing

Rough shape the filler with 80 grit sandpaper. Finish sanding with 180 grit and finer. Featheredge the repair. Wait 45 minutes and apply 2-3 coats of primer to cover the repair area.

Apply Bondo® Glazing and Spot Putty to fill in small imperfections and re-prime with 2-3 coats. Follow paint manufacturer's recommendation for priming and final finishing.