


3M
Scotch-Weld™ Replacement Part

Installation Guide

Part Description:
WIRESTAND

Product ID/Stock No.:
62-9895-0033-5

For use on:
3M™ Scotch-Weld™ Polyurethane Reactive Adhesive Applicator

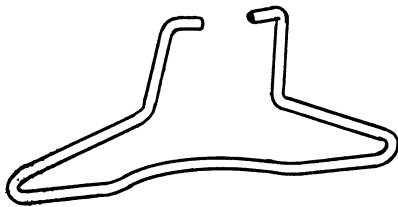

Important Safety Instructions

⚠ WARNING

Disconnect air and electrical power and make sure applicator has cooled to room temperature before servicing. Failure to follow the procedure may cause electrical shock or burns.


⚠ WARNING

Do not clean or remove 3M™ Scotch-Weld™ Polyurethane Reactive Adhesive with heat, flame, or solvent. May cause hazardous vapors or fire. For additional health and safety information see product label and Material Data Sheet for Scotch-Weld Adhesive used.

⚠ WARNING


Use only 3M specified replacement parts. Use of other replacement parts may cause hazardous conditions or damage the applicator.

Refer to 3M™ Scotch-Weld™ Polyurethane Reactive Adhesive Applicator User's Manual for more information.

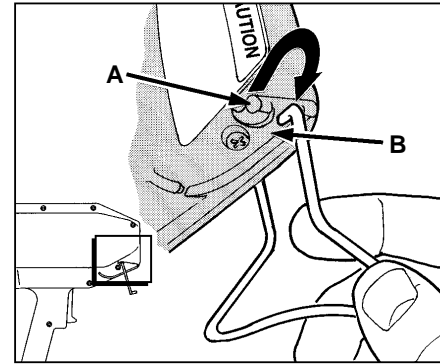

REMOVING OLD WIRESTAND:


1. Pull one side of the wirestand out of its pivot hole (A) and allow it to spring down into the recessed area (B).

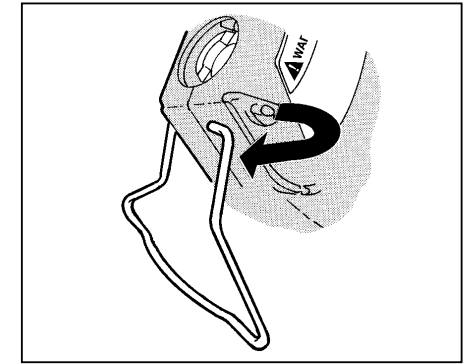

REMOVING OLD WIRESTAND:


2. Turn the applicator over and pull the other side of the wirestand out of the other pivot hole and over the edge of the applicator.
The wirestand should now be able to be removed entirely.

NOTE: If you attempt to pull the end completely out in Step 1, binding may occur on the other side. For best results, use this two-step procedure to reduce possible damage to wirestand or applicator.

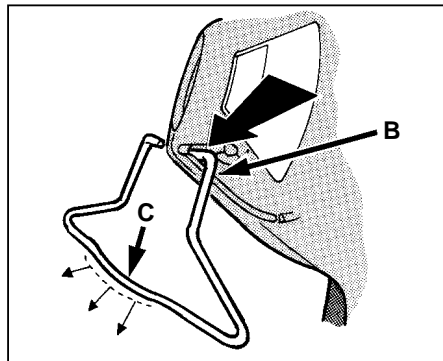


INSTALLING NEW WIRESTAND:

3. Hold the wirestand so the rounded part (C) curves away from the applicator and temporarily hook one end of the wirestand so the end rests down in the bottom of recess (B) as shown.

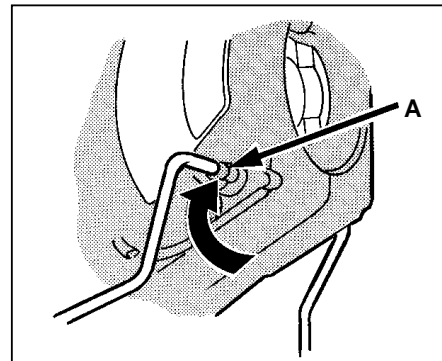

INSTALLING NEW WIRESTAND:

4. Pull the other end of the wirestand just enough to go over the edge of the applicator and position it into the pivot hole (A).
The spring action of the wirestand will pull itself down into place.

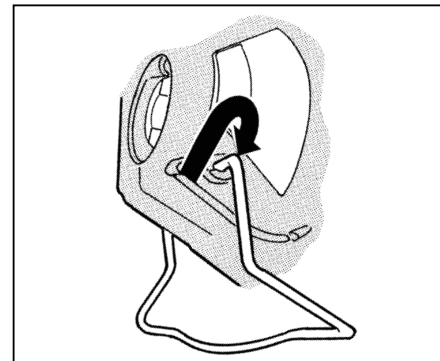

INSTALLING NEW WIRESTAND:

5. Pull the first end of the wirestand – from Step 3 – out of the recess and position it over its pivot hole.
The spring action of the wirestand will pull itself down into place.

IMPORTANT NOTICE: 3M MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. User is responsible for determining whether the 3M product is fit for a particular purpose and suitable for user's method of application.

LIMITATION OF REMEDIES AND LIABILITY: If the 3M product is proved to be defective, THE EXCLUSIVE REMEDY, AT 3M'S OPTION, SHALL BE TO REFUND THE PURCHASE PRICE OF OR TO REPAIR OR REPLACE THE DEFECTIVE 3M PRODUCT. 3M shall not otherwise be liable for loss or damages, whether direct, indirect, special, incidental, or consequential, regardless of the legal theory asserted, including, but not limited to, contract, negligence, warranty, or strict liability.



**Industrial Business
Industrial Adhesives and Tapes Division**

3M Center, Building 220-5E-06
St. Paul, MN 55144-1000