


# 3M™ Particulate Respirator 8825+ / 8835+ Fitting Instructions



## Fitting Instructions




- 1** Thread the top and bottom straps through their respective buckles. Ensure that they remain untwisted.

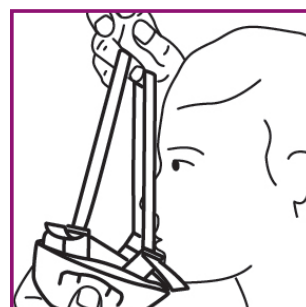


- 2a** With one hand, cup the respirator under your chin with the nosepiece facing upwards. Take both straps in your other hand.

- 2b** Place the respirator onto your face.

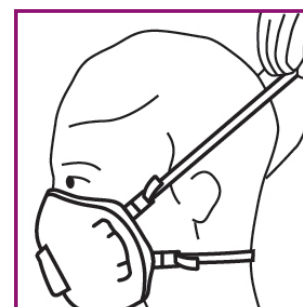


- 3** Locate the upper strap across the crown of the head and the lower strap below the ears. Straps must not be twisted.

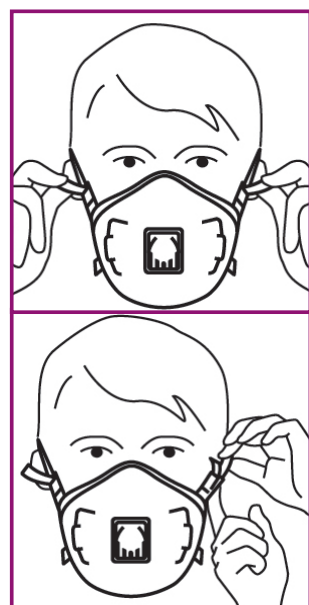


- 4** Tighten the straps to secure the respirator.  
To increase tension, pull evenly on both ends of the top and bottom straps.

To decrease tension, without removing respirator, push out on the back of the buckles.

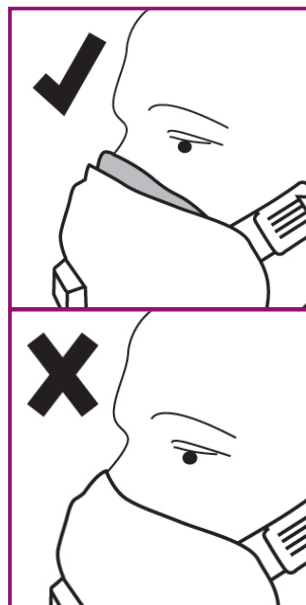

- 5a** Ensure face seal is properly formed around the nose.

- 5b** The face seal must not be folded in.

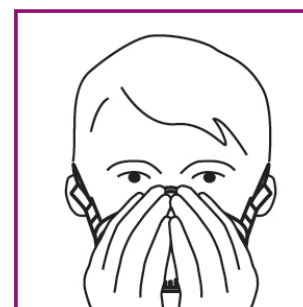

- 6** The seal of the respirator on the face should be fit-checked before entering the workplace.



### Note:

Before fitting your respirator, make sure that your face is clean shaven. Respirators must not be worn with stubble, beards or other facial hair under the area of the face seal as these can prevent a good seal to the face. Make sure that long hair is tied back and jewellery is removed so that it does not interfere with the seal to the face.

## Fit Check Procedure

- 1** Cover the front of the respirator with both hands being careful not to disturb the fit of the respirator.
- 2** INHALE sharply. You should feel the respirator collapse slightly onto your face. If it does not, and you detect air leaks at the seal, reposition the respirator upon the face and adjust headband tension to eliminate leakage. Repeat the fit check.

If you CANNOT achieve a proper fit DO NOT enter the hazardous area. See your supervisor.

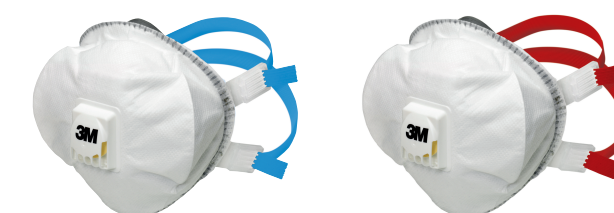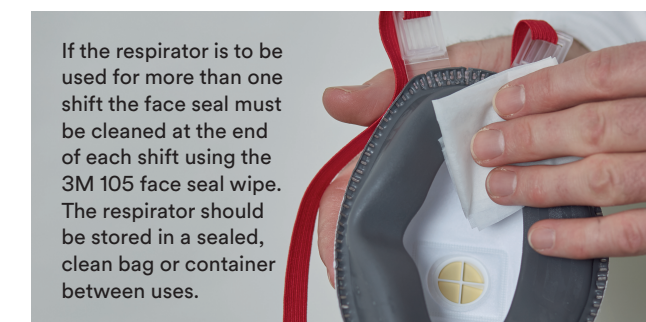

Respirator	Type	Maximum Usage Level
8825+	FFP2 R D	up to 12 × TLV
8835+	FFP3 R D	up to 50 × TLV

Classification: EN 149:2001+A1:2009

Protection: Dust/Mist/Metal Fume