



CSG USA
3833 Sala Way
Red Wing, MN 55066-5005
Toll Free: 800.328.6146
Phone: 651.388.8282
Fax: 651.388.5065
solutions@capitalsafety.com

CSG Canada Ltd.
260 Export Boulevard
Mississauga, Ontario L5S 1Y9
Toll Free: 800.387.7484
Phone: 905.795.9333
Fax: 905.795.8777
sales.ca@capitalsafety.com

www.capitalsafety.com

SUPPLEMENTAL INSTRUCTION USER INSTRUCTION MANUAL WRAPBAX™ TALON SRL

*Use this Supplemental Instruction with Talon SRL User Manual (5911858)
and Twin Talon SRL User Manual (5902332).*

This supplement includes additional information for the following sections: Description, Section 3.4 and Section 5 Inspection and Section 9 Labels.

DESCRIPTIONS


TALON 9.5 FT (2.9 M)

WRAPBAX™ SERIES SELF RETRACTING LIFELINE:
Includes 6 ft (1.8 m) nylon web lifeline and 3 ft (.9 m) wear sleeve.

100% TIE-OFF TALON 7.5 FT

(2.3 M) WRAPBAX™ SERIES SELF RETRACTING LIFELINE:
Includes 4 ft (1.2 m) nylon web lifeline and 3 ft (.9 m) wear sleeve.

Figure 1 - Talon WrapBax SRL

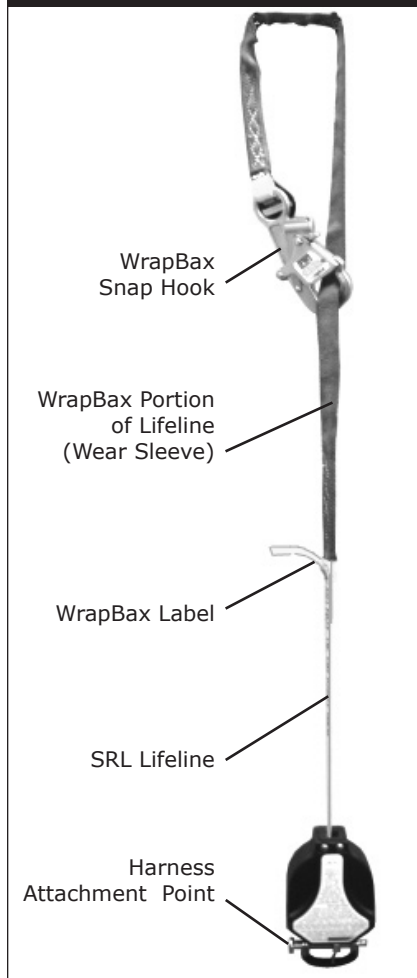


3.4 CONNECTING TO THE ANCHORAGE

D. WRAPBAX™ ATTACHMENT: Snap hooks and WrapBax hooks operate in the same manner. Grip the hook handle in one hand.

With your index finger, depress the locking mechanism in. With your thumb, pull back the gate latch. As the gate latch is pulled back, the gate will open. Release your grip and the gate will close. (See Figure 2.)

Figure 2 - WrapBax Hook Operation

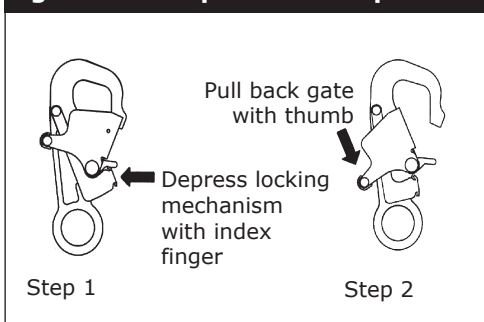

Wrap the WrapBax portion of the lifeline around an appropriate anchor (see section 2.4), then open the gate of the WrapBax snap hook and pass the lifeline through the hook. See Figure 1. The lifeline may only be passed through the WrapBax hook once. Make sure the Wrapbax portion of the lifeline is captured and the gate closes completely.

WARNING: Only the WrapBax hook may be used to snap back directly onto the WrapBax SRL Lifeline. When installed, the WrapBax hook must contact the wear sleeve (WrapBax portion of the lifeline). If the anchor structure is so large that the WrapBax hook contacts the lifeline webbing material, a different anchor structure must be used.

WARNING: Never connect the WrapBax snap hook of one SRL to the lifeline of another SRL or lanyard.

5.0 INSPECTION

Step 11. Check the WrapBax portion of the lifeline (wear sleeve) for excessive wear or holes or tears in the wear sleeve.

9.0 LABELING

9.1 At least one of the following labels must be attached to all WrapBax hook lanyards and be fully legible.

