

# Breathe easy, work comfortably

Introducing the new  
**3M™ Reusable  
Respirator Particulate  
Filter 5744/5744C**

Helps provide  
effective  
respiratory  
protection

Carbon-filter  
material for  
effective relief  
from nuisance  
odours\*\*


Comfort in  
breathing

Protection  
against solid  
particulates

Helps filter  
longer with  
comfort\*



**3M™ Reusable  
Respirator Particulate  
Filter 5744**

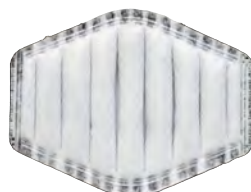


**3M™ Reusable  
Respirator Particulate  
Filter 5744C**




To be used with  
**3M™ Reusable  
Respirator Particulate  
Holder 5700**

## 3M™ Reusable Respirator Particulate Filter 5744

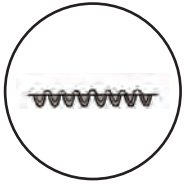

**Designed for comfort and breathability.**  
With channeled airflow, experience easy and comfortable breathing so you can work with ease and confidence.

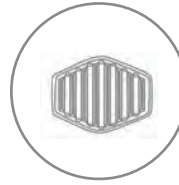

**Unique design with larger surface area to help filter for longer.**  
The corrugated design provides a larger surface area that provides more effective usage over time.\*




**Helps provide effective respiratory protection.**  
Offers respiratory protection against solid particulates in demanding work environments.



**Complies with industrial standards/approvals.**  
Complies with the rigorous industrial requirement of AZ/NZS 1716 P2 for respiratory protection.

## 3M™ Reusable Respirator Particulate Filter 5744C

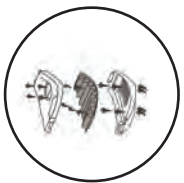

**Carbon-filter material for relief from nuisance odours.**  
For relief against nuisance levels\*\* of organic vapour.

## Designed for usage across industries



Heavy machinery



Transportation



Construction



Welding



Mining



Shipbuilding



Pharmaceutical



Automotive


\*70% of initial field participants reported filter service life is longer than existing 3M filter 1744/1744C/3753 (Thailand/China 52 users)

\*\*Nuisance level refers to concentrations not exceeding OSHA PEL or applicable occupational exposure limit whichever is lower.


Source <https://multimedia.3m.com/mws/media/5400040/3m-disposable-respirator.pdf>

## Easy set-up for immediate use\*


### Step-by-step guide to using the 3M™ Reusable Respirator Particulate Filter 5744/5744C

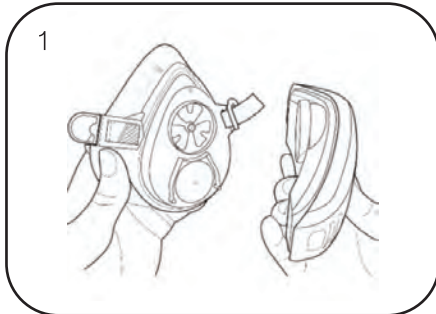


1  
Align opening of filter holder and the inhalation port on facepiece and push together.

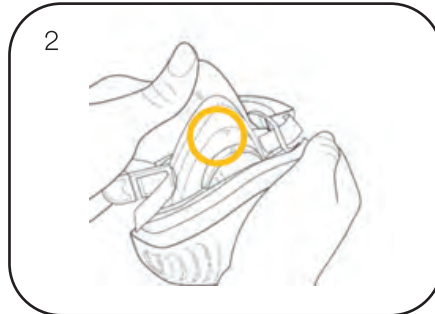

2  
A snapping sound will ensure filter holder is securely assembled. Ensure that marks are aligned for facepiece and holder.

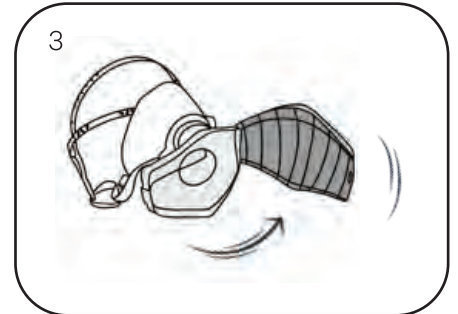

3  
Open the holder cover and place the filter on the cover side with printed side in view.

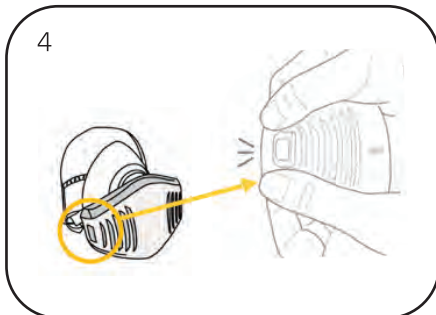

4  
Close the base over the filter cover with a click sound after pushing the latch side of filter cover.



5  
Your filter is ready to use.

\*This supplements but does not replace, User Instructions. Always read and follow User Instructions.

## Choosing the right respirator

Our 3M™ Reusable Respirator Particulate Filter 5744/5744C is compatible with the following respirators.



**3M™ Single Half Facepiece Respirator 3000 series**



**3M™ Single Half Facepiece Respirator HF-50 series**

# Technical specifications

Typical Properties	Product details
Cartridge or filter type	Particulate
Standards/ Approval	AZ/NZS 1716:2012
Cartridge or filter rating	P2
Connection type	Snap Fit
Nuisance odour relief*	5744C * 3M recommended for relief against nuisance levels of organic vapour. Nuisance level organic vapour refers to concentrations less than the OSHA PEL or applicable government occupational exposure limits, whichever is lower.
Case quantity	30 EA/Box, 15 Box/Case

Product
3M™ Particulate Filter 5744, P2, 450 EA/Case
3M™ Particulate Filter 5744C, P2, 450 EA/Case
3M™ Filter Holder 5700, 10EA/Case
3M™ Particulate Filter Kit 3200/5700/5744(5ea)
3M™ Particulate Filter Kit 3200/5700/5744C(5ea)

For more information on the 3M™ Reusable Respirator Particulate Filter 5744/5744C

**CONTACT A 3M REPRESENTATIVE**