




## Instructions

### Fibrlok™ 250µm Fiber Splice 2540G


**⚠ CAUTION:** *The gel inside the splice may cause minimal eye irritation. Avoid eye contact. Wash hands before eating or smoking. Carefully follow safety, health and environmental information given the product label or the MSDS sheet for the 2540G Fibrlok Splice.*

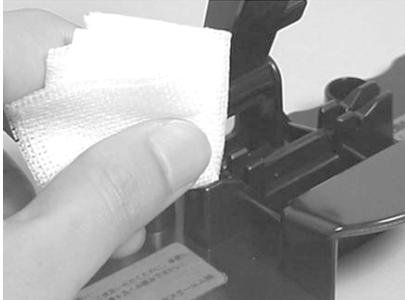


1. Clean both edges of the area where the splice is set in the tool with a lint free wipe and alcohol.




2. Put Fibrlok splice in the tool with the Fibrlok cap up. Strip 30–40mm of fiber buffer and clean the fiber with lint free wipe and alcohol.

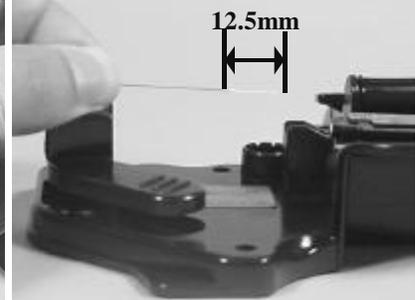

3. Use the cleaver to cut the fiber to a length of 12–13mm. Put the fiber into the fiber guide in the tool.

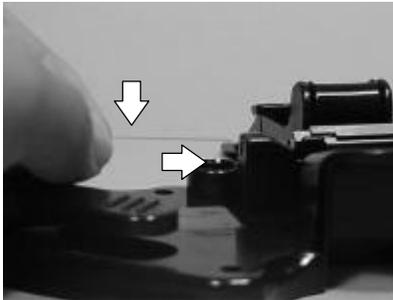


4. Insert the fiber into the splice until it stops.

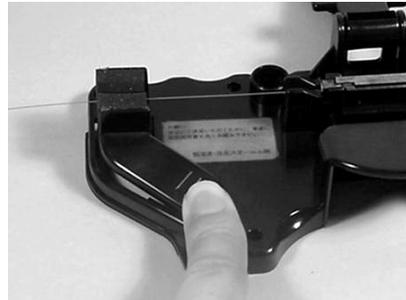

5. Press arm down and place fiber into open foam holder. Release arm so that the foam holder retains the fiber.

6. Repeat steps 1 through 4 for the second fiber.

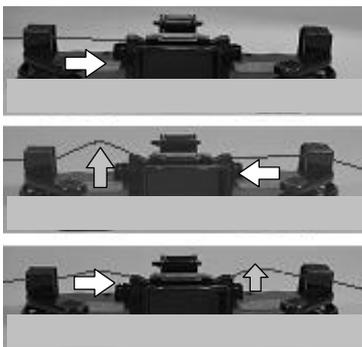

7. Hold down the arm where the second fiber will be inserted. Insert the second fiber until the first fiber bows as shown. Release the arm and push the first fiber to equalize the fiber bows as shown.



8. Press lever down to actuate splice. Remove the fiber from the foam holders first. Then remove the Fibrlok splice by pulling at the center of the splice

# Fibrlok™ 250µm Fiber Splice 2540G

**CAUTION:** Safety glasses should be worn while working around optical fibers. Do not view fiber ends if they are illuminated with a laser. Carefully follow safety, health and environmental information on the label or MSDS for isopropyl alcohol. Store use and dispose of isopropyl alcohol per your company policy.

## Hand-held Installation



The Fibrlok splice can be installed without a work surface because the actuation tool can be held in one hand and actuated with the other.



### 3M™ Fibrlok™ Splice Kit 2559-C Contents

2504G	Fibrlok 250um Assembly Tool
6365-ST	Stripping Tool
6365-KS	Kevlar Snips
2540G	Fibrlok 250um (5/pkg)
2529	Fibrlok II Universal Optical Fiber Splice (6/pkg)
2501	Fibrlok II Assembly Tool
2539	Fibrlok II Splice/ Holder (2/ea.)
2534	Fiber Cleaver ( not included in 2559 Kit)
	Cleaning Alcohol Bottle
	Lint-free Cloths (100/pkg)

3M and Fibrlok are trademarks of 3M Company.

### Important Notice

All statements, technical information, and recommendations related to 3M's products are based on information believed to be reliable, but the accuracy or completeness is not guaranteed. Before using this product, you must evaluate it and determine if it is suitable for your intended application. You assume all risks and liability associated with such use. Any statements related to the product which are not contained in 3M's current publications, or any contrary statements contained on your purchase order shall have no force or effect unless expressly agreed upon, in writing, by an authorized officer of 3M.

### Warranty; Limited Remedy; Limited Liability.

This product will be free from defects in material and manufacture for a period of 12 months from the time of purchase. **3M MAKES NO OTHER WARRANTIES INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.** If this product is defective within the warranty period stated above, your exclusive remedy shall be, at 3M's option, to replace or repair the 3M product or refund the purchase price of the 3M product. **Except where prohibited by law, 3M will not be liable for any loss or damage arising from this 3M product, whether indirect, special, incidental or consequential regardless of the legal theory asserted.**



Communication Markets Division  
3M Telecommunications

6801 River Place Blvd.  
Austin, TX 78726-9000  
800/426 8688  
Fax 800/626 0329

www.3MTelecommunications.com

Please Recycle

© 3M 2007 78-8140-0035-8 Rev. A