



STI- PA test tone: downloading to digital music player (MP3/Apple iPOD)




For Speech Intelligibility measurements, the STI-PA test tone is used to broadcast the signal through a building's voice system (Public Address/Mass Notification Systems). Outlined below are the steps to download the test tone to either an iPod shuffle (see A) or a MP3 player (see B).

A. Downloading STI-PA test tone to an iPod shuffle




1. Dock the shuffle and connect it to the pc using the USB cable.
2. From your pc, navigate to Quest Technologies', a 3M company, website and select the STI-PA Male Wav File. (See below)
 - [STI-PA Male Wav File \(Right Click to Download\)](#)
 - (Noting website page: <http://www.questtechnologies.com/Library.aspx>)
3. Once downloaded, right-click the file and select **Copy**. (Navigate to the directory/folder where it was saved.)
 - **NOTE:** You can also copy the file by dragging the downloaded file into the iPod library window.
5. Open the iTunes window and select **Edit>Paste** (or click Control C when in the iTunes library window).
 - It should automatically add the file (test tone) to the CD library and sync to your iPod. For further iPod sync instructions, please see Manuals at <http://www.apple.com/support>.

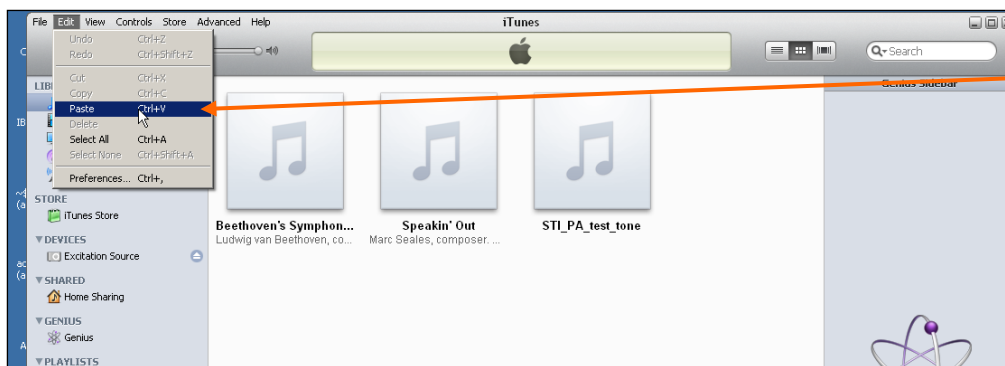

Edit menu
*Select Paste

6. It will now be saved on your iPod. To undock, first click on the “**Safely Remove Hardware**” icon on your pc's system tray and click on the **Remove** statement. Undock after a safely remove prompt appears.



Safely Remove Hardware icon
Click and select “Safely remove USB Mass Storage Device.”

7. Please see the user manual for additional details to conduct a Speech intelligibility test. (e.g., “Guideline to setting up a STI-PA test”).





B. Downloading STI-PA test tone to an MP3 (Sansa player)


1. Connect the MP3 (or Sansa) media player to the computer.
2. From your pc, navigate to Quest Technologies', a 3M company, website and select the STI-PA Male Wav File. (See below)
 - [STI-PA Male Wav File \(Right Click to Download\)](#)
 - (Noting website page: <http://www.questtechnologies.com/Library.aspx>)
3. Click and drag the file to the **Windows Media Player**.
4. Select Sync menu and copy the file to your MP3 media player. (Below is an example of the Sansa media player's windows library.)



STI-PA test tone

- Drag STI-PA test tone file to windows media player
- Click on the Sync menu and copy/sync to the MP3 player

6. It will now be saved on your MP3 player. Undock by clicking on the “**Safely Remove Hardware**” icon in your system tray.
 - To undock, first click on the “**Safely Remove Hardware**” icon on your pc’s system tray and click on the **Remove** statement. Undock after a safely remove prompt appears.



Safely Remove Hardware icon

Click and select “Safely remove USB Mass Storage Device”

7. Please see the user manual for additional details Speech intelligibility test (e.g., “Guideline to setting up a STI-PA test”).