

# 3M™ Betafine™ PEG Series

## Pleated Polypropylene Graded Porosity Filter Cartridges

3M™ Betafine™ PEG Series Filter Cartridges were designed to provide high dirt-holding capacity and flow rates with relatively low pressure drop for a wide array of applications for electronics manufacturing and chemical production. These are absolute rated, graded porosity, 100% polypropylene pleated filter cartridges. 3M Betafine PEG Series Filter Cartridges utilize 3M's Advanced Pleat Technology (APT) that increases the usable filtration surface area while maintaining standard cartridge dimensions. PEG series cartridges are ideally suited for applications requiring filtration efficiencies from 10.0 µm down to 0.2 µm filter rating.

### Features & Benefits

#### Polypropylene Cartridge Components

- Free of adhesives and surfactants
- Very low extractable levels for optimum filtrate purity
- Broad chemical compatibility for most process applications

#### Advanced Pleat Technology Construction

- High surface area as compared to conventional pleated filters
- High product throughputs for prolonged service life
- High flow rates with relatively low pressure drop

#### Graded Porosity Multi-layer Filter Media


- Capture of contaminant throughout the filter media to help maximize filter life
- High contaminant holding capacity



### Applications

3M™ Betafine™ PEG Series Filter Cartridges are ideal for a wide array of applications for electronics manufacturing and chemical production.

- Plating solutions
- Cleaning baths
- High purity chemicals
- Acids
- Bases
- Solvents
- Polymer solutions
- CMP slurry filtration for LPC reduction
- High purity water

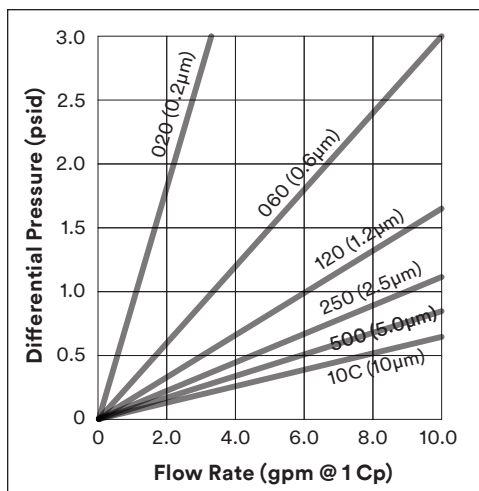

Graph 2: Clean Water Flow per 10 in.  
3M™ Betafine™ PEG Series Filter Cartridge  
at Ambient Temperature (20°C).

## Materials of Construction

3M™ Betafine™ PEG Series Filter Cartridges are constructed of high efficiency, graded porosity pleated polypropylene. The outer cage, inner core, end cap adapters and membrane support layers are made of polypropylene. No adhesives, binders, or surfactants are used in the manufacturing process. Filter cartridges are manufactured and bagged in a clean environment under an ISO quality system to provide filter integrity and excellent downstream cleanliness.

## Operating Parameters & Specifications

Materials of Construction		
Filter Media	Graded Porosity Pleated Polypropylene	
Media Support Layers	Polypropylene	
Inner Core, Outer Cage, End Cap Adapters	Polypropylene	
Gasket & O-ring Options	Silicone, Clear Silicone, EPR, PTFE Encapsulated Silicone, PTFE Encapsulated Fluorocarbon	
Nominal Length	10 in., 20 in., 30 in., 40 in.	
Filtration Surface Area	Grade 0.20	8.1 ft. <sup>2</sup> (0.75 m <sup>2</sup> )
	Grades 0.60, 1.20, 2.50	8.8 ft. <sup>2</sup> (0.82 m <sup>2</sup> )
	Grade 5.0	8.6 ft. <sup>2</sup> (0.80 m <sup>2</sup> )
	Grade 10	5.5 ft. <sup>2</sup> (0.51 m <sup>2</sup> )
Outer Diameter	2.75 in. (7.1 cm)	
Maximum Operating Temperature	130°F (60°C) continuous, 175°F (80°C) short term	
Maximum Forward Pressure Differential	60 psid at 77°F (4 bar at 25°C)	

**Intended Use(s):** 3M™ Betafine™ PEG Series Filter Cartridges are intended for use in industrial filtration applications of aqueous fluids in accordance with the applicable product instructions and specifications. 3M Betafine PEG Series Filter Cartridges are also intended for use with non-aqueous fluids where materials of construction are compatible. Since there are many factors that can affect a product's use, the customer and user remain responsible for determining whether the 3M product is suitable and appropriate for the user's specific application, including user conducting an appropriate risk assessment and evaluating the 3M product in user's application.

**Restrictions on Use:** 3M advises against the use of these 3M products in any application other than the stated intended use(s), since other applications have not been evaluated by 3M and may result in an unsafe or unintended condition. Do not use the 3M product, in a medical device, drug, or cosmetic application; or in applications involving life-sustaining medical applications or prolonged contact with internal bodily fluids or tissues. If you are considering using this 3M product for a restricted use, you must first contact 3M with information about your proposed application to request prior written authorization for supply for such use. 3M Betafine PEG Series Filter Cartridges are not for use in food contact applications.

## 3M™ Betafine™ PEG Series Filter Cartridge Ordering Guide

Model Number	3M ID	Global ID	Description		
			Length	Grade	End Treatments
PEG020B01CX	70-0202-5050-5	7000051322	10 in.	0.2 µm	222 O-ring/Spear PTFE Encapsulated Silicone
PEG020B01FA	70-0200-7313-9	7010410989	10 in.	0.2 µm	222 O-ring/Flat Cap Silicone
PEG020B01FC	70-0200-7314-7	7100079635	10 in.	0.2 µm	222 O-ring/Flat Cap EPR
PEG020B01FK	70-0200-7315-4	7000001724	10 in.	0.2 µm	222 O-ring/Flat Cap PTFE Encapsulated Fluorocarbon
PEG020B02BA	70-0200-7316-2	7000050667	20 in.	0.2 µm	226 O-ring/Spear Silicone
PEG020B02DA	70-0201-0749-9	7000050753	20 in.	0.2 µm	Double Open End Silicone
PEG020B02FK	70-0203-4869-7	7100180236	20 in.	0.2 µm	222 O-ring/Flat Cap PTFE Encapsulated Fluorocarbon
PEG020B03BA	70-0200-7322-0	7000050669	30 in.	0.2 µm	226 O-ring/Spear Silicone
PEG060B01BA	70-0200-7325-3	7000050670	10 in.	0.6 µm	226 O-ring/Spear Silicone
PEG060B01EA	70-0200-7328-7	7000050672	10 in.	0.6 µm	Double Open End Silicone
PEG060B01FK	70-0200-6846-9	7000001711	10 in.	0.6 µm	222 O-ring/Flat Cap PTFE Encapsulated Fluorocarbon
PEG060B02BA	70-0200-7330-3	7000050674	20 in.	0.6 µm	226 O-ring/Spear Silicone
PEG060B02BB	70-0200-7331-1	7000027565	20 in.	0.6 µm	226 O-ring/Spear Fluorocarbon
PEG060B02EA	70-0200-7334-5	7000050676	20 in.	0.6 µm	Double Open End Silicone
PEG060B02FA	70-0200-7335-2	7000050677	20 in.	0.6 µm	222 O-ring/Flat Cap Silicone
PEG060B02FK	70-0202-1889-0	7000001821	20 in.	0.6 µm	222 O-ring/Flat Cap PTFE Encapsulated Fluorocarbon
PEG060B03BK	70-0200-7336-0	7100111882	30 in.	0.6 µm	226 O-ring/Spear PTFE Encapsulated Fluorocarbon
PEG120B01BX	70-0202-5529-8	7000051345	10 in.	1.2 µm	226 O-ring/Spear PTFE Encapsulated Silicone
PEG120B01EB	70-0201-6306-2	7000051062	10 in.	1.2 µm	Double Open End Fluorocarbon
PEG120B01FK	70-0203-4868-9	7100180237	10 in.	1.2 µm	222 O-ring/Flat Cap PTFE Encapsulated Fluorocarbon
PEG120B01FX	70-0202-7553-6	7000051421	10 in.	1.2 µm	222 O-ring/Flat Cap PTFE Encapsulated Silicone
PEG120B02BA	70-0200-6848-5	7000050616	20 in.	1.2 µm	226 O-ring/Spear Silicone
PEG120B02BC	70-0201-1696-1	7000050831	20 in.	1.2 µm	226 O-ring/Spear EPR
PEG120B02CH	70-0201-6182-7	7010413430	20 in.	1.2 µm	222 O-ring/Spear Clear Silicone
PEG120B02EA	70-0200-7345-1	7000050682	20 in.	1.2 µm	Double Open End Silicone
PEG120B02FK	70-0202-1890-8	7000001822	20 in.	1.2 µm	222 O-ring/Flat Cap PTFE Encapsulated Fluorocarbon
PEG120B03CC	70-0200-7347-7	7000029320	30 in.	1.2 µm	222 O-ring/Spear EPR
PEG120B03FA	70-0200-6850-1	7000050617	30 in.	1.2 µm	222 O-ring/Flat Cap Silicone
PEG120B04BB	70-0200-7348-5	7000050684	40 in.	1.2 µm	226 O-ring/Spear Fluorocarbon
PEG250B01BA	70-0200-7349-3	7000050685	10 in.	2.5 µm	226 O-ring/Spear Silicone
PEG250B01FK	70-0203-4791-3	7100182153	10 in.	2.5 µm	222 O-ring/Flat Cap PTFE Encapsulated Fluorocarbon
PEG250B02CH	70-0200-7353-5	7010415616	20 in.	2.5 µm	222 O-ring/Spear Silicone
PEG250B02DN	70-0202-1440-2	7000051175	20 in.	2.5 µm	Double Open End
PEG250B03FA	70-0201-1699-5	7000050832	30 in.	2.5 µm	222 O-ring/Flat Cap Silicone

### 3M™ Betafine™ PEG Series Filter Cartridge Ordering Guide (cont.)

Model Number	3M ID	Global ID	Description		
			Length	Grade	End Treatments
PEG500B01FK	70-0203-4792-1	7100181967	10 in.	5.0 µm	222 O-ring/Flat Cap PTFE Encapsulated Fluorocarbon
PEG500B02BA	70-0201-2212-6	7000050893	20 in.	5.0 µm	226 O-ring/Spear Silicone
PEG500B02BX	70-0202-6859-8	7000051411	20 in.	5.0 µm	226 O-ring/Spear PTFE Encapsulated Silicone
PEG500B02FA	70-0200-7359-2	7000050687	20 in.	5.0 µm	222 O-ring/Flat Cap Silicone
PEG500B02FK	70-0202-6908-3	7000001856	20 in.	5.0 µm	222 O-ring/Flat Cap PTFE Encapsulated Fluorocarbon
PEG500B04BC	70-0203-1764-3	7100028834	40 in.	5.0 µm	Single Open End EPR
PEG10CB01BA	70-0202-3162-0	7000051224	10 in.	10.0 µm	226 O-ring/Spear Silicone
PEG10CB01CC	70-0200-7337-8	7010379646	10 in.	10.0 µm	222 O-ring/Spear EPR
PEG10CB01FK	70-0202-3431-9	7000001835	10 in.	10.0 µm	222 O-ring/Flat Cap PTFE Encapsulated Fluorocarbon
PEG10CB02CC	70-0201-7025-7	7010338509	20 in.	10.0 µm	222 O-ring/Spear EPR
PEG10CB02FK	70-0203-5049-5	7100199166	20 in.	10.0 µm	222 O-ring/Flat Cap PTFE Encapsulated Fluorocarbon
PEG10CB03CC	70-0201-7102-4	7010380397	30 in.	10.0 µm	222 O-ring/Spear EPR
PEG10CB04CA	70-0200-7339-4	7000050678	40 in.	10.0 µm	222 O-ring/Spear Silicone

#### Product Selection and Use

Many factors beyond 3M's control and uniquely within user's knowledge and control can affect the use and performance of a 3M product in a particular application. As a result, customer is solely responsible for evaluating the product and determining whether it is appropriate and suitable for customer's application, including conducting a workplace hazard assessment and reviewing all applicable regulations and standards (e.g., OSHA, ANSI, etc.). Failure to properly evaluate, select, and use a 3M product and appropriate safety products, or to meet all applicable safety regulations, may result in injury, sickness, death, and/or harm to property.

#### Warranty, Limited Remedy, and Disclaimer

Unless a different warranty is specifically stated on the applicable 3M product packaging or product literature (in which case such warranty governs), 3M warrants that each 3M product meets the applicable 3M product specification at the time 3M ships the product. 3M MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ARISING OUT OF A COURSE OF DEALING, CUSTOM, OR USAGE OF TRADE. If a 3M product does not conform to this warranty, then the sole and exclusive remedy is, at 3M's option, replacement of the 3M product or refund of the purchase price.

#### Limitation of Liability

Except for the limited remedy stated above, and except to the extent prohibited by law, 3M will not be liable for any loss or damage arising from or related to the 3M product, whether direct, indirect, special, incidental, or consequential (including, but not limited to, lost profits or business opportunity), regardless of the legal or equitable theory asserted, including, but not limited to, warranty, contract, negligence, or strict liability.



Your local distributor:

3M Purification Inc.  
 3M Separation and Purification Sciences Division  
 400 Research Parkway  
 Meriden, CT 06450 USA

Phone 1-800-243-6894  
 1-203-237-5541  
 Web 3MPurification.com

3M and Betafine are trademarks of 3M Company.  
 ©2019 3M Company. All rights reserved. Please recycle. Printed in U.S.A.  
 70020187897 REV 1019