

Care and Maintenance

3M[™] Versaflo[™]S-655 Hood

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance.

▶ Before Use

- Inspect Comfort Band.
 Remove and replace if necessary.
- Inspect hood.

Ensure hood fabric and neck seal are free from splits or tears and visor is undamaged

If required remove head harness and connector - Discard and replace hood

(Ensure head harness and connector are correctly installed into new hood)

• Replace Visor Peel-Off (if used).

Monthly

 Carry out all the 'Before Use' inspections and create record of this monthly check for the hood.

After Use


- Clean with cloth dampened with a mild solution of water and liquid household soap
- Disinfect with 3M 105 Wipes.
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents.


Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.

Further Information and Advice

If you require additional guidance on the Care and Maintenance of your 3M Powered and Supplied Air Equipment, please contact the Helpline or your local 3M representative.

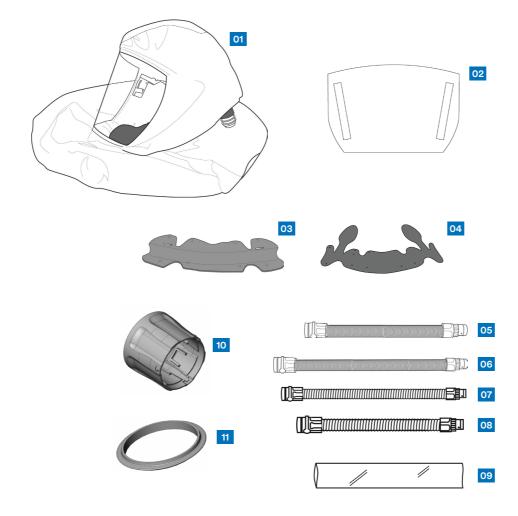

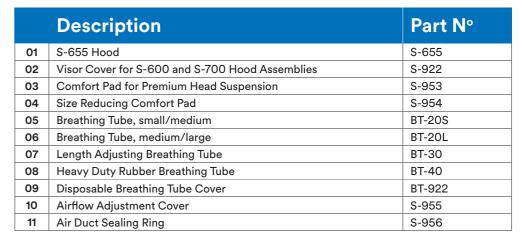

Premium hoods can be a cost-effective choice for some high disposal rate environments. The hood can be replaced, whilst still reusing the head harness. Combines face (low energy impact and liquid splash), neck, shoulder and respiratory protection.

Replace all damaged parts immediately to ensure correct levels of protection.



To download this poster please visit: www.3M.co.uk/maintenancepack or scan the QR code.



0870 60 800 60 - UK 1800 320 500 - IRELAND