



## Instructions and Parts List

**3M-Matic™ 8000r-8000r3**

**Type 223487**

**Random Case Sealer with  
AccuGlide™ V Taping Heads**

**Serial #:** \_\_\_\_\_  
*For reference, record machine serial number here.*

### Important Safety Information

BEFORE INSTALLING OR OPERATING THIS EQUIPMENT

Read, understand and follow all safety and operating instructions.

### Spare Parts

It is recommended you immediately order the spare parts listed in the “Spare Parts/Service Information” section. These parts are expected to wear through normal use, and should be kept on hand to minimize production delays.



---

This instruction manual covers safety aspects, handling and transport, storage, unpacking, preparation, installation, operation, adjustments, maintenance, troubleshooting, repair work and servicing plus parts list of the **3M-Matic™ 8000r-8000r3 Random case sealer**.

**Industrial Specialties Division  
3M Center  
St. Paul, MN 55144-1000**

Edition December 2023

Copyright 3M - December 2023  
All rights reserved

The manufacturer reserves the right to change the product at any time without notice.

# Replacement Parts and Service Information

## To Our Customers:

This is the 3M-Matic™/AccuGlide™/Scotch® equipment you ordered. It has been set up and tested in the factory with Scotch® Tapes.

Included with each machine is an Instructions and Parts List Manual.

## Technical Assistance / Replacement Parts and Additional Manuals:

For technical assistance, contact our help line at 1-800-328-1390.

Provide the customer support coordinator with the model/machine name, machine type, and serial number that are located on the identification plate  
(For example: Model 8000r-8000r3 - Type 22300 - Serial Number 13282).

## To order replacement parts, contact us:

CSPD division of Combi Packaging Systems LLC. 1-800-344-9883

6299 Dressler Road NW e-mail: CSPD-csr@combi.com

North Canton, OH 44720 <https://store.combi.com/CSPD/PublicStore/>

## Identification Plate

3M 3M Company St Paul, MN 55144 USA		Electrical Drawing		3M-Matic™ Indoor Industrial use only		ETL US 4000683
Model	Part Number	SCCR	Volt	Hertz	Air Supply	IP
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Type	Serial Number	Ampere	Phase	Watt	Air Consumption	Year
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

# **Replacement Parts and Service Information**

## **To Our Customers:**

This is the 3M-Matic™/AccuGlide™/Scotch® equipment you ordered. It has been set up and tested in the factory with Scotch® tapes. If any problems occur when operating this equipment and you desire a service call or phone consultation, call, write, or fax the appropriate number listed below.

Included with each machine is an Instructions and Parts List Manual.

**Service, replacement parts, and additional manuals available direct from:**

Order parts by part number, part description, and quantity required.  
Also, when ordering parts or additional manuals, include model/machine name, machine type, and serial number that are located on the identification plate.

# Table of Contents — Manual 1:

## 8000r-8000r3 Random Case Sealer

(For Taping Head information, see Manual 2: AccuGlide™ V Taping Heads)

8000r-8000r3 Random Case Sealer	Page
Cover Page	
Replacement Parts and Service Information .....	3-4
Table of Contents .....	5-7
Acronyms and Abbreviations .....	8
<b>1. Introduction</b>	
1.1 Manufacturing Specifications / Description / Intended Use .....	9 - 10
1.2 How to Read and Use the Manual .....	10
1.2.1 Importance of the Manual .....	10
1.2.2 Manual Maintenance .....	10
1.2.3 Consulting the Manual .....	10
1.2.4 How to Update the Manual in Case of Modifications .....	10
<b>2. General Information</b>	
2.1 Identification Data .....	11
2.2 Warranty / Contents .....	12
<b>3. Safety</b>	
3.1 General Safety Information .....	13
3.2 Signal Words Explanation .....	13
3.3 Table of Warnings .....	14 - 15
3.4 Operator's Qualifications Definition .....	16
3.5 Number of Operators .....	16
3.6 Safe Use of the Machine Instructions .....	16
3.7 Residual Hazards .....	16
3.8 Prevent Other Hazards - Recommendations and Measures .....	16
3.9 Personal Safety Measures .....	16
3.10 Incorrect / Predictable Actions Not Allowed .....	16
3.11 Operator's Required Skill Levels .....	17
3.12 Component Locations .....	18
3.13 Table of Warnings and Replacement Labels .....	19 - 20
<b>4. Technical Specifications</b>	
4.1 Power Requirements .....	21
4.2 Operating Rate .....	21
4.3 Operating Conditions .....	21
4.4 Tape .....	21
4.5 Tape Width .....	21
4.6 Tape Roll Diameter .....	22
4.7 Tape Application Leg Length - Standard .....	22
Tape Application Leg Length - Optional .....	22
4.8 Box Board .....	22
4.9 Box Weight and Size Capacities .....	22
4.10 Machine Noise Levels .....	23
4.11 Machine Dimensions .....	23
4.12 Setup Recommendations .....	23

## **Table of Contents — Manual 1: *(continued)***

<b>5. Shipment, Handling, and Storage</b>	
5.1 Packed Machine Shipment and Handling .....	24
5.2 Overseas Shipment Packaging (Optional) .....	24
5.3 Handling and Transportation of Uncrated Machine .....	24
5.4 Machine Storage .....	24
<b>6. Unpacking</b>	
6.1 Uncrating .....	25
6.2 Packaging Materials Disposal .....	25
<b>7. Installation</b>	
7.1 Operating Conditions .....	26
7.2 Space Requirements for Machine Operation and Maintenance .....	26
7.3 Tool Kit Supplied with the Machine .....	26
7.4 Machine Positioning / Machine Setup .....	26
7.5 Plastic Ties Removal .....	27
7.6 Assembly Completion .....	27
7.7 Taping Heads Completion .....	28
7.8 Outboard Tape Roll Holder .....	28
7.9 Preliminary Electric Inspection .....	28
7.10 Main Power Machine Connection and Inspection .....	28
7.11 Phases Inspection .....	28
<b>8. Theory of Operation</b>	
8.1 Working Cycle Description .....	29
8.2 Running Modes Definitions .....	29
8.3.1 Normal Stop Procedure .....	29
8.3.2 Emergency Stop .....	29
<b>9. Controls</b>	
9.1 Start / Stop Main Switch .....	30
9.2 Emergency Stop Button (Latching) .....	30
<b>10. Safety devices</b>	
10.1 Blade Guards .....	31
10.2 Emergency Stop Button .....	31
10.3 Electric System / Circuit Breaker .....	31
<b>11. Special Setup Procedure</b>	
11.1 Changing Tape Leg Length .....	32
11.2 Box Height Range .....	33

# **Table of Contents — Manual 1: (continued)**

## **12. Operation**

12.1	Operator's Correct Working Position .....	34
12.2	Starting the Machine .....	34
12.3	Starting Production .....	34
12.4	Tape Replacement .....	34
12.5	Box Size Adjustment .....	34
12.6	Cleaning .....	34
12.7	Table of Adjustments .....	34
12.8	Safety Devices Inspection .....	34
12.9	Troubleshooting .....	35 - 36

## **13. Maintenance**

13.1	Safety Measures (see section 3) .....	37
13.2	Tools and Spare Parts Supplied with Machine .....	37
13.3	Maintenance Operations - Recommended Inspections and Frequency .....	37
13.4	Inspections to be Performed Before and After Every Maintenance Operation .....	37
13.5	Safety Features (Inspection Efficiency) .....	37
13.6	Machine Cleaning .....	37
13.7	Cutter Blade Cleaning .....	37
13.8	Drive Belt Replacement .....	38
13.9	Drive Pulley Ring .....	39
13.10	Drive Belt Tension .....	40
13.11	Special Setup Procedures .....	40 - 43
13.11.1	Case Sealer Frame .....	40
13.11.2	Taping Heads .....	41
13.12	Maintenance Work Log .....	42

## **14. Additional Instructions**

14.1	Machine Disposal Information .....	43
14.2	Fire emergency .....	43

## **15. Enclosures and Special Information**

15.1	Statement of Conformity .....	43
15.2	Hazardous Substances Emission .....	43

## **16. Technical Documentation and Information**

16.1	Electric / Pneumatic Diagrams .....	44 - 61
16.2	Spare Parts / Ordering .....	62 - 63

Drawings and Parts Lists .....	64 - End of Manual
--------------------------------	--------------------

# Abbreviations and Acronyms


## List of Abbreviations/Acronyms

3M-Matic .....	Trademark of 3M St. Paul, MN 55144-1000
AccuGlide .....	Trademark of 3M St. Paul, MN 55144-1000
Scotch .....	Trademark of 3M St. Paul, MN 55144-1000
Drw. ....	Drawing
Ex.....	For Example
Fig. ....	Exploded View Figure no. (spare parts)
Figure.....	Illustration
Max. ....	Maximum
Min.....	Minimum
Nr.....	Number
N/A.....	Not Applicable
OFF.....	Machine Not Operating
ON .....	Machine Operating
PLC.....	Programmable Logic Control
PP .....	Polypropylene
PU/PU Foam ....	Polyurethane Foam
PTFE.....	Polytetrafluoroethylene
PVC.....	Polyvinyl Chloride
W .....	Width
H .....	Height
L .....	Length

# 1. Introduction

## 1.1 Manufacturing Specifications / Description / Intended Use

The **3M-Matic™ 8000r-8000r3 Random Case Sealer** with **AccuGlide™ V Taping Heads** is designed to apply a "C" clip of Scotch® pressure-sensitive film box sealing tape to the top and bottom center seam of regular slotted containers. The **8000r-8000r3** automatically adjusts to a wide range of box sizes (see "Specifications Section – Box Weight and Size Capacities"). The **3M-Matic™** case sealing machines have been designed and manufactured in compliance with the legal requirements at the date of inception.

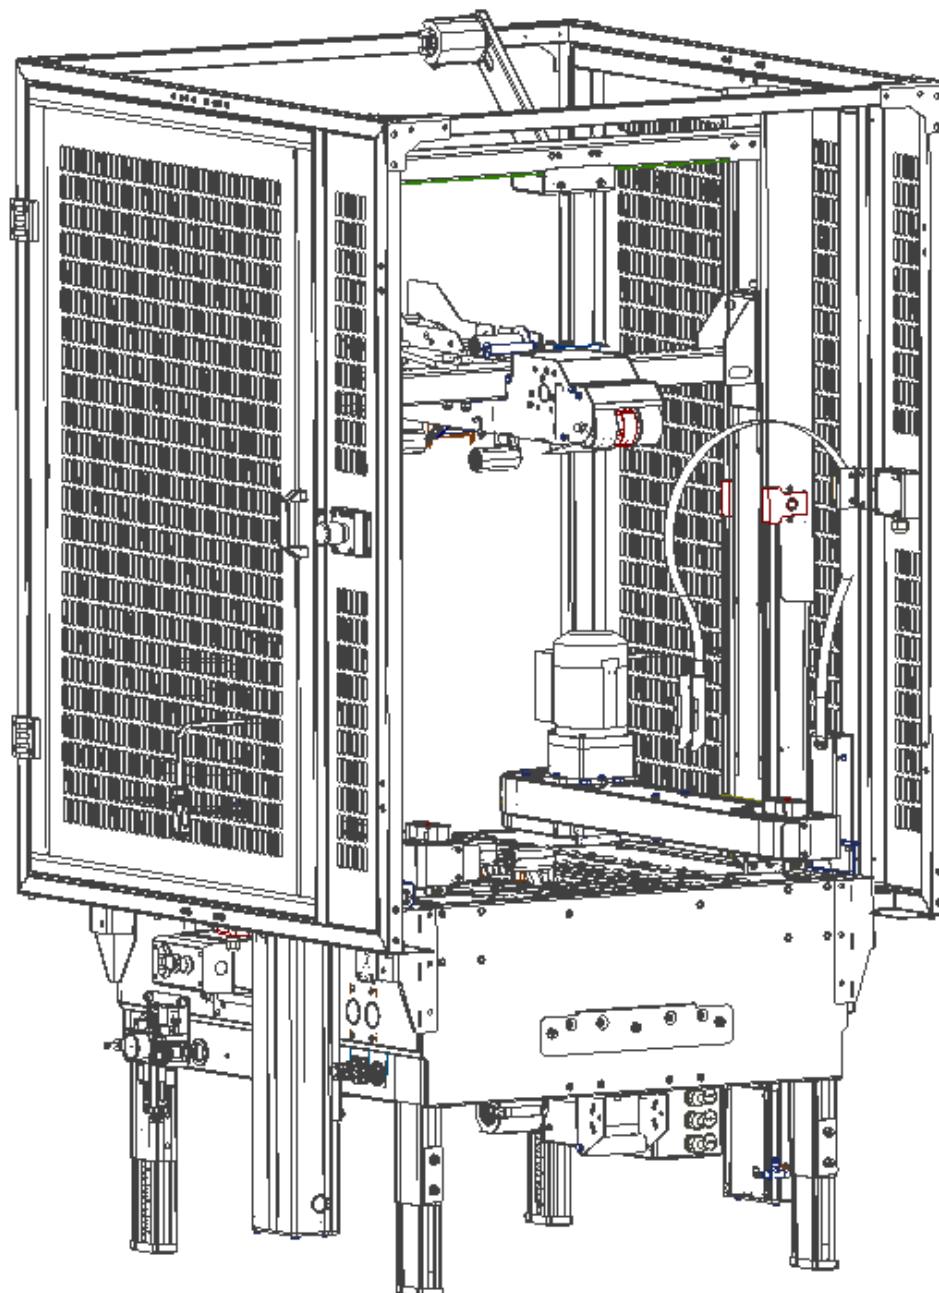

**3M-Matic™ 8000r-8000r3 Random Case Sealer, Type 22300**

# 1. Introduction *(continued)*

## 1.2 How to Read and Use the Instruction Manual

This instruction manual covers safety aspects, handling and transport, storage, unpacking, preparation, installation, operation, set-up and adjustments, technical and manufacturing specifications, maintenance, troubleshooting, repair work and servicing, electric diagrams, warranty information, disposal (ELV), a definition of symbols, plus a parts list of the 3M-Matic™ 8000r-8000r3 Random Case Sealer.

**3M Industrial Specialties Division**

**3M Center**

**St. Paul, MN 55144-1000 (USA)**

Edition December © 3M 2023. All rights reserved.

The manufacturer reserves the right to change the product at any time without notice.

Publication © 3M 2023 44-0009-2171-6

### 1.2.1 Importance of the Manual

The manual is an important part of the machine; all information contained herein is intended to enable the equipment to be maintained in perfect condition and operated safely. Ensure that the manual is available to all operators of this equipment and is kept up to date with all subsequent amendments. Should the equipment be sold or disposed of, please ensure that the manual is passed on. Electrical and pneumatic diagrams are included in the manual. Equipment using PLC controls and/or electronic components will include relevant schematics or programs in the enclosure and in addition, the relevant documentation will be delivered separately.

### 1.2.2 Manual Maintenance

Keep the manual in a clean and dry place near the machine. Do not remove, tear, or rewrite parts of the manual for any reason. Use the manual without damaging it. In case the manual has been lost or damaged, ask your after sale service for a new copy.

### 1.2.3 Consulting the Manual

The manual is composed of:

- Pages which identify the document and the machine
- Index of the subjects
- Instructions and notes on the machine
- Enclosures, drawings and diagrams
- Spare parts (last section)

All pages and diagrams are numbered. The spare parts lists are identified by the figure identification number. All the notes on safety measures or possible dangers are identified by the symbol:




### 1.2.4 How to Update the Manual in Case of Modifications to the Machine

Modifications to the machine are subject to manufacturer's internal procedures. The user receives a complete and up-to-date copy of the manual together with the machine. Afterwards the user may receive pages or parts of the manual which contain amendments or improvements made after its first publication. The user must use them to update this manual.

## 2. General Information

### 2.1 Data Identifying Manufacturer and Machine

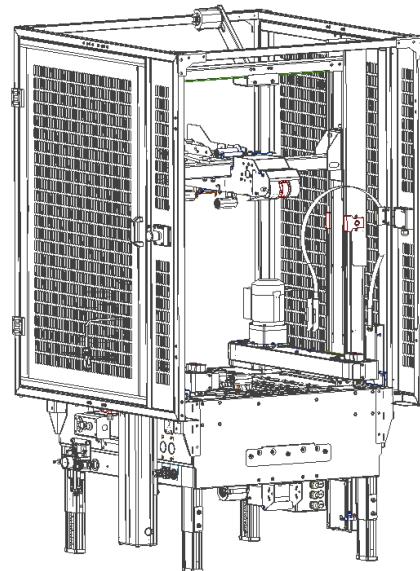

Identification Plate

3M 3M Company St Paul, MN 55144 USA		Electrical Drawing	3M-Matic™ Indoor Industrial use only		ETL US 4000563	
Model	Part Number	SCCR	Volt	Hertz	Air Supply	IP
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Type	Serial Number	Ampere	Phase	Watt	Air Consumption	Year
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

## **2. General Information** *(continued)*

### **2.2 Warranty**

**Equipment Warranty and Limited Remedy:** THE FOLLOWING WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND ANY IMPLIED WARRANTY ARISING OUT OF A COURSE OF DEALING, A CUSTOM OR USAGE OF TRADE:

3M sells its **3M-Matic™ 8000r-8000r3 Random Case Sealer, Type 22300** with the following warranties:

1. The drive belts and the taping head knives, springs and rollers will be free from all defects for ninety (90) days after delivery.
2. All other taping head parts will be free from all defects for three (3) years after delivery.
3. All other parts will be free from all defects for two (2) years after delivery.

If any part is proved to be defective within its warranty period, then the exclusive remedy and 3M's and seller's sole obligation shall be, at 3M's option, to repair or replace the part, provided the defective part is returned immediately to 3M's factory or an authorized service station designated by 3M. A part will be presumed to have become defective after its warranty period unless the part is received or 3M is notified of the problem no later than five (5) calendar days after the warranty period. If 3M is unable to repair or replace the part within a reasonable time, then 3M at its option, will replace the equipment or refund the purchase price. 3M shall have no obligation to provide or pay for the labor required to install the repaired or replacement part. 3M shall have no obligation to repair or replace (1) those parts failing due to operator misuse, carelessness, or due to any accidental cause other than equipment failure, or (2) parts failing due to non-lubrication, inadequate cleaning, improper operating environment, improper utilities or operator error.

**Limitation of Liability:** 3M and seller shall not be liable for direct, indirect, special, incidental or consequential damages based upon breach of warranty, breach of contract, negligence, strict liability or any other legal theory.

The foregoing Equipment Warranty and Limited Remedy and Limitation of Liability may be changed only by a written agreement signed by authorized officers of 3M and seller.

#### **Contents: 8000r-8000r3 Random Case Sealer**

- (1) 8000r-8000r3 Random Case Sealer, Type 22300
- (1) Tool and Spare Parts Kit
- (1) Instruction and Parts Manual

**Scotch™, AccuGlide™, and 3M-Matic™** are Trademarks of 3M, St. Paul, Minnesota 55144-1000


## 3. Safety

### 3.1 General Safety Information

Read all the instructions carefully before starting work with the machine; please pay particular attention to sections marked by the symbol:



Figure 3-1

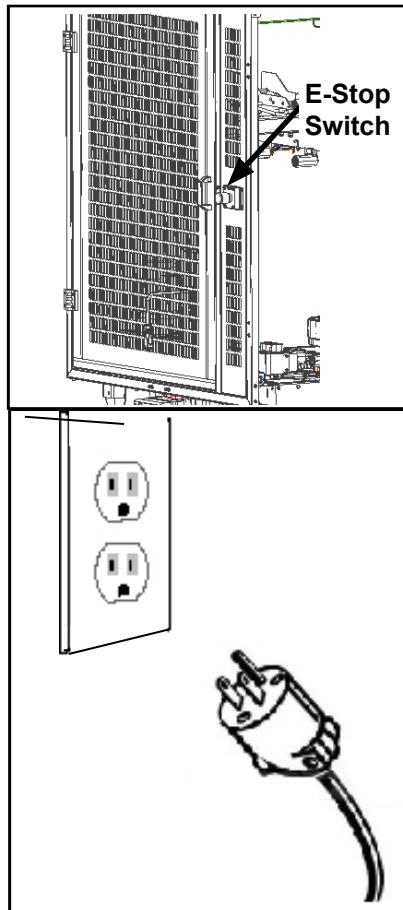

The machine is provided with a LATCHING EMERGENCY STOP BUTTON (**Figure 3-1**); when this button is pressed, it stops the machine at any point in the working cycle. Maintain clear access to power cord while machine is operating. Disconnect plug from power source before machine maintenance (**Figure 3-1**). Also disconnect air if the machine has a pneumatic system.

Keep this manual in a handy place near the machine. This manual contains information that will help you to maintain the machine in a good and safe working condition.

### 3.2 Explanation of Signal Word and Possible Consequences



This safety alert symbol identifies important messages in this manual. **READ AND UNDERSTAND THEM BEFORE INSTALLING OR OPERATING THIS EQUIPMENT.**



#### Caution

Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury and/or property damage.










#### Warning

Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury and/or property damage.

### 3. Safety (continued)

#### 3.3 Table of Warnings

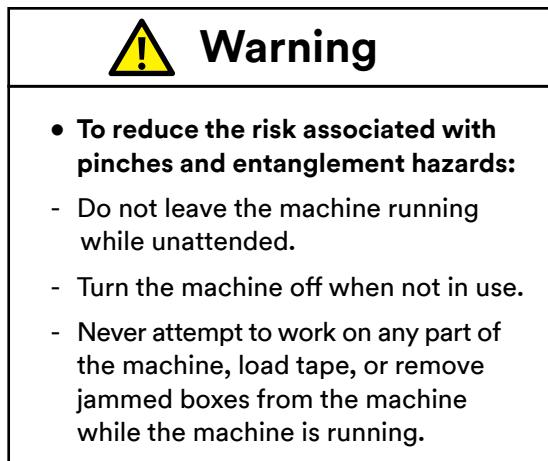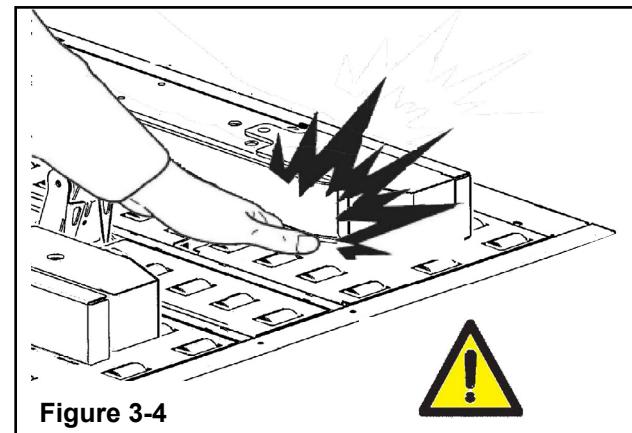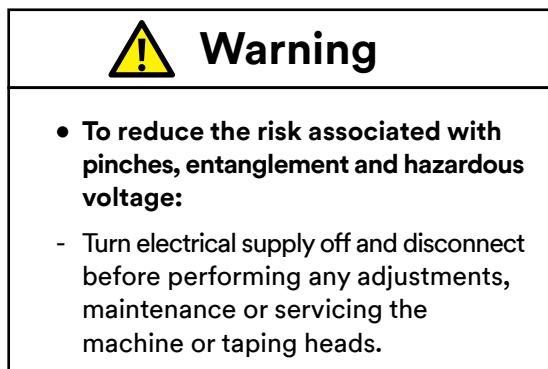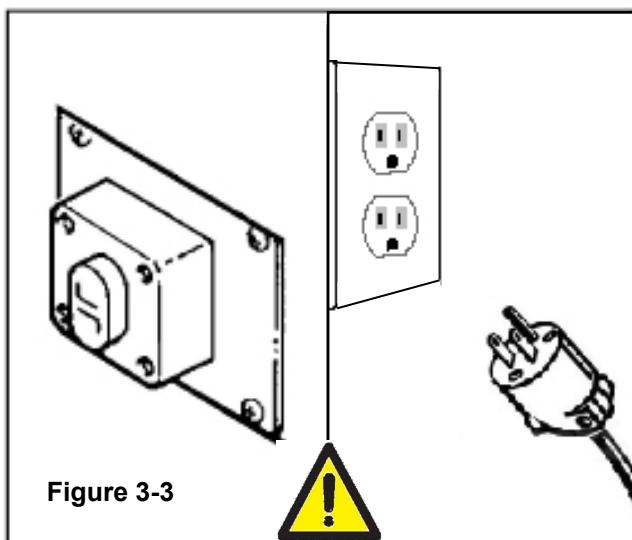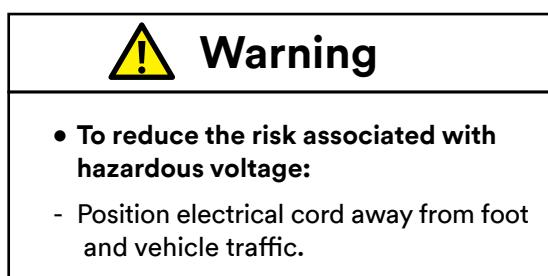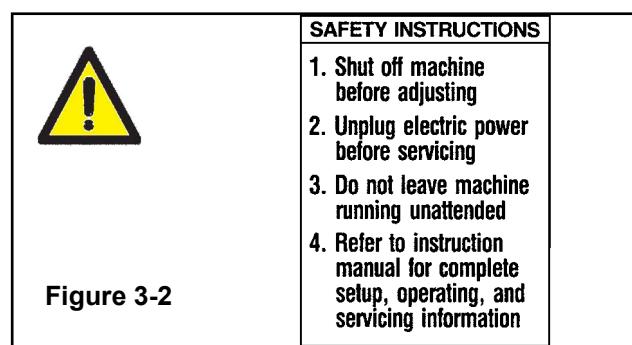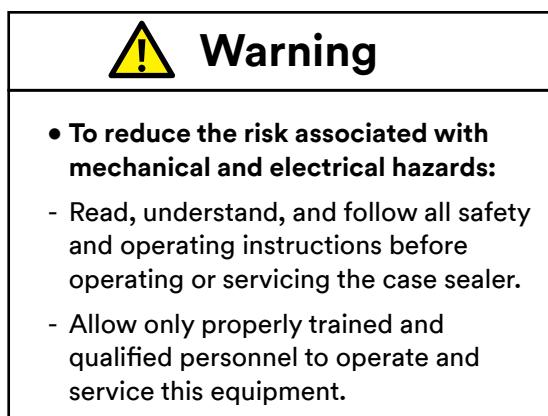

**Important:** Cavity in the conveyor bed.  
Never put your hands inside any part of the machine while it is working.  
Serious injury may occur (Figure 3-4).

### 3. Safety (continued)

#### **Warning**

- To reduce the risk associated with sharp blade hazards:
  - Keep hands and fingers away from tape cutoff blades under orange blade guards. The blades are extremely sharp.

**Important!** Tape cutting blade. Never remove safety device which covers blade on top and bottom taping units. Blades are extremely sharp. Any error may cause serious injuries (Figure 3-5).

#### **Warning**

- To reduce the risk associated with fire and explosion hazards:
  - Do not operate this equipment in potentially flammable / explosive environments.

#### **Warning**

- To reduce the risk associated with muscle strain:
  - Use appropriate rigging and material handling equipment when lifting or repositioning this equipment.
  - Use proper body mechanics when removing or installing taping heads that are moderately heavy or may be considered awkward to lift.

#### **Caution**

- To reduce the risk associated with pinch and entanglement hazards:
  - Keep hands clear of the upper head support assembly as boxes are transported through the machine.
  - Keep hands, hair, loose clothing, and jewelry away from box compression rollers and all moving parts.
  - Always feed boxes into the machine by pushing only from the end of box.

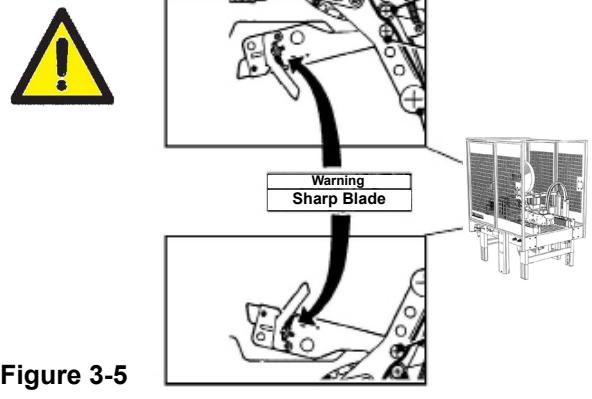


Figure 3-5

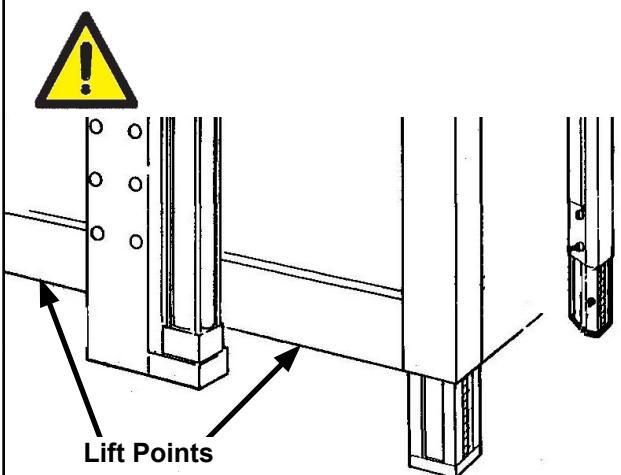


Figure 3-6

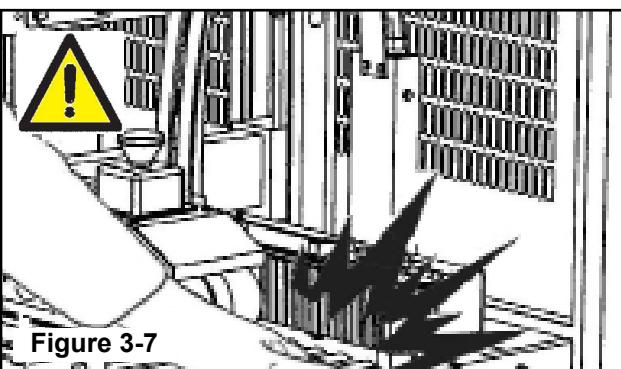


Figure 3-7

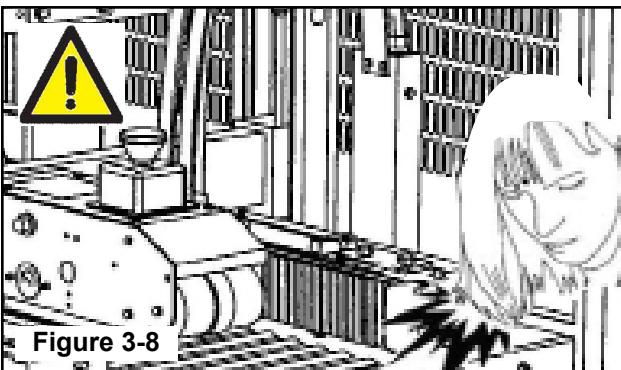


Figure 3-8

### 3. Safety (continued)

#### 3.4 Operator's Qualifications

- Machine Operator
- Mechanical Maintenance Technician
- Electrical Maintenance Technician
- Manufacturer's Technician/Specialist  
**(See Section 3.11)**

#### 3.5 Number of Operators

The operations described below have been analyzed by the manufacturer; the recommended number of operators for each operation provides the best and safest work performance.

**Note:** A smaller or greater number of operators could be unsafe.

#### 3.6 Instructions for a Safe Use of the Machine / Definition of Operator's Qualifications

Only persons who have the skills described in the skill levels section should be allowed to work on the machine. It is the responsibility of the user to appoint the operators having the appropriate skill level and the appropriate training for each category of job.

#### 3.7 Residual Hazards

The case sealer **8000r-8000r3** incorporates various safety protections which should never be removed or disabled. It is essential that the operator and service personnel be warned that hazards exist which cannot be eliminated:

#### 3.8 Recommendations and Measures to Prevent Other Hazards which Cannot be Eliminated

- The operator must stay on the working position shown in the Operation Section. They must never touch the running driving belts or put his hands inside any cavity.
- The operator must pay attention to the blades during the tape replacement.

#### 3.9 Personal Safety Measures

Safety glasses, safety gloves, safety helmet, safety shoes, air filters, ear muffs - None is required except when recommended by the user.

#### 3.10 Predictable Actions which are Incorrect and Not Allowed

- Never try to stop/hold the box while being driven by the belts.
- Never remove or disable the safety devices.
- Only authorized personnel should be allowed to carry out the adjustments, repairs or maintenance which require operation with reduced safety protections.  
During such operations, access to the machine must be restricted.  
When the work is finished, the safety protections must immediately be reactivated.
- The cleaning and maintenance operations must be performed after disconnecting the electric power.
- Do not modify the machine or any part of it.
- Clean the machine using only dry cloths or light detergents. Do not use solvents, petrols, etc.
- Install the machine following the suggested layouts and drawings.



#### Warning

- To reduce the risk associated with mechanical and electrical hazards:
  - Read, understand, and follow all safety and operating instructions before operating or servicing the case sealer.
  - Allow only properly trained and qualified personnel to operate and service this equipment.

### 3. Safety (continued)

#### 3.11 Operator's Skill Levels Required to Perform the Main Operations on the Machine

The Table shows the minimum operator's skill for each machine operation.

**Important!** The factory manager must ensure that the operator has been properly trained on all the machine functions before starting work.

##### Skill 1: Machine Operator

This operator is trained to use the machine with the machine controls, to feed cases into the machine, make adjustments for different case sizes, to change the tape and to start, stop and restart production.

##### Skill 2: Mechanical Maintenance Technician

This operator is trained to use the machine as the MACHINE OPERATOR and in addition is able to:

- Work with the safety protection disconnected
- Check and adjust mechanical parts
- Carry out machine maintenance operations/repairs they are not allowed to work on live electrical components

##### Skill 2a: Electrical Maintenance Technician

This operator is trained to use the machine as the MACHINE OPERATOR and in addition is able to:

- Work with the safety protection disconnected
- Check and adjust mechanical parts
- Carry out machine maintenance operations / repairs / adjustments / repair electrical components

They are allowed to work on live electrical panels, connector blocks, control equipment, etc.

##### Skill 3: Specialist from the Manufacturer

Skilled operator sent by the manufacturer or its agent to perform complex repairs or modifications (on agreement with the customer).


#### Operator's Skill Levels Required to Perform the Main Operations on Machine

Operation	Machine Status	Required Operator Skill	Number of Operators
Machine installation and setup	Running with safety protections disabled	2 and 2a	2
Extraordinary mechanical maintenance		3	1
Extraordinary electrical maintenance		2a	1
Adjusting box size	Stopped by pressing the EMERGENCY STOP button	1	1
Tape replacement		1	1
Blade replacement	Electric power disconnected	2	1
Drive belt replacement		2	1
Ordinary maintenance		2	1

### 3. Safety (continued)


#### 3.12 Component Locations

Refer to **Figure 3-9** below to acquaint yourself with the various components and controls of the case sealer. Also refer to Manual 2 or 3 for taping head components.

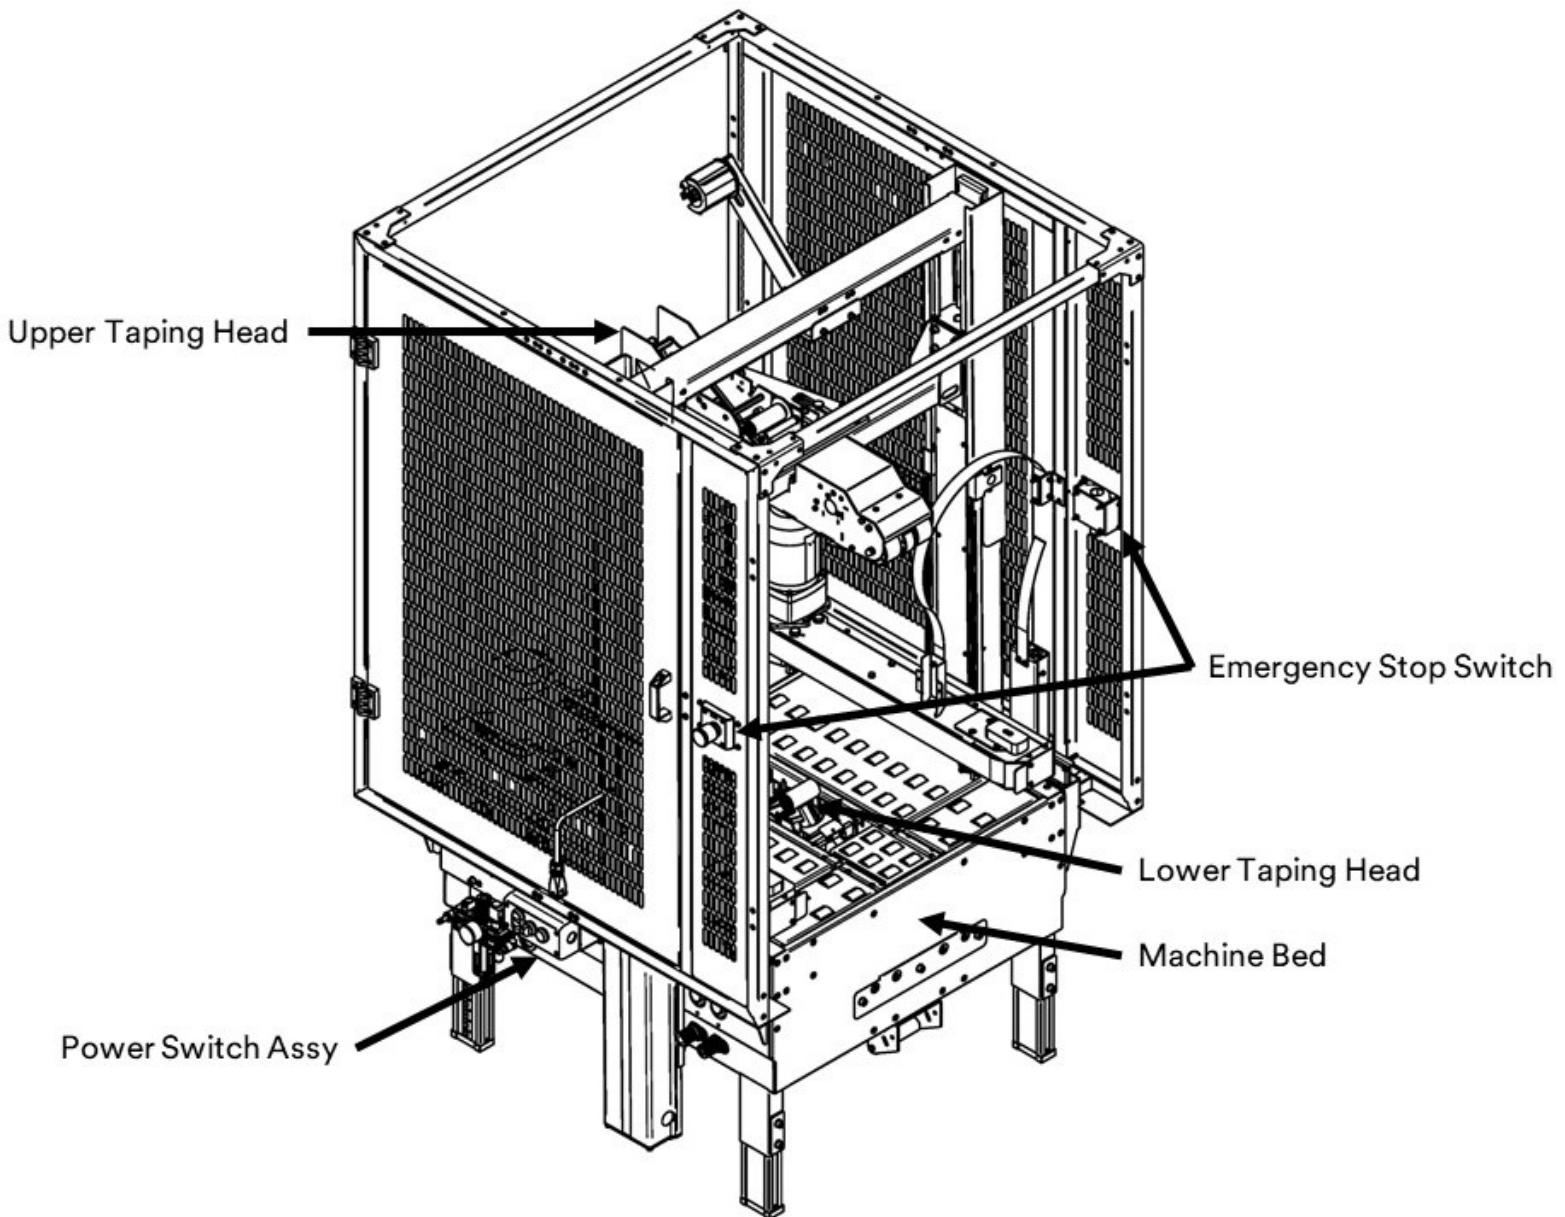


**Figure 3-9 8000r-8000r3 Case Sealer Components (Left Front)**

### 3. Safety (continued)    3.13 Table of Warnings and Replacements Labels

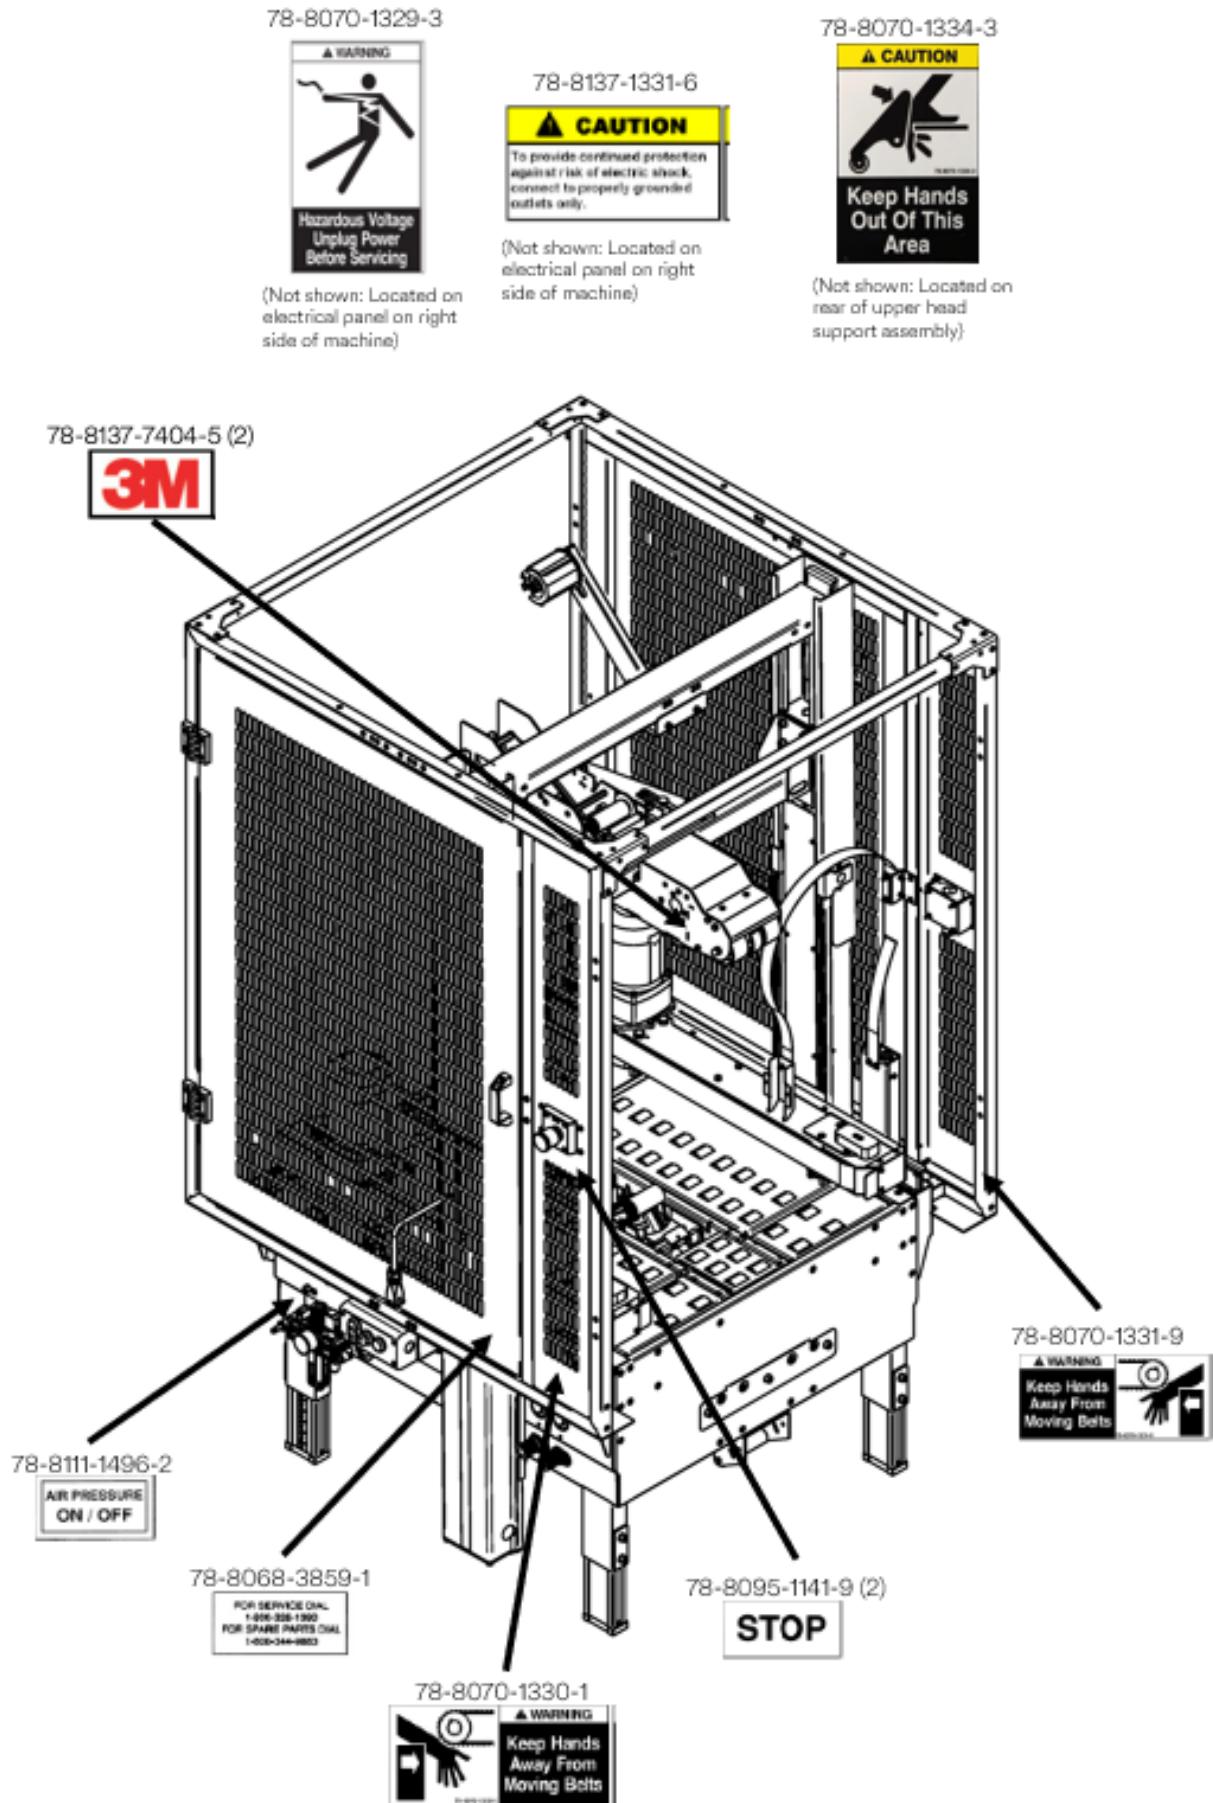

### 3. Safety (continued)

(Guarding removed for illustrative purposes)

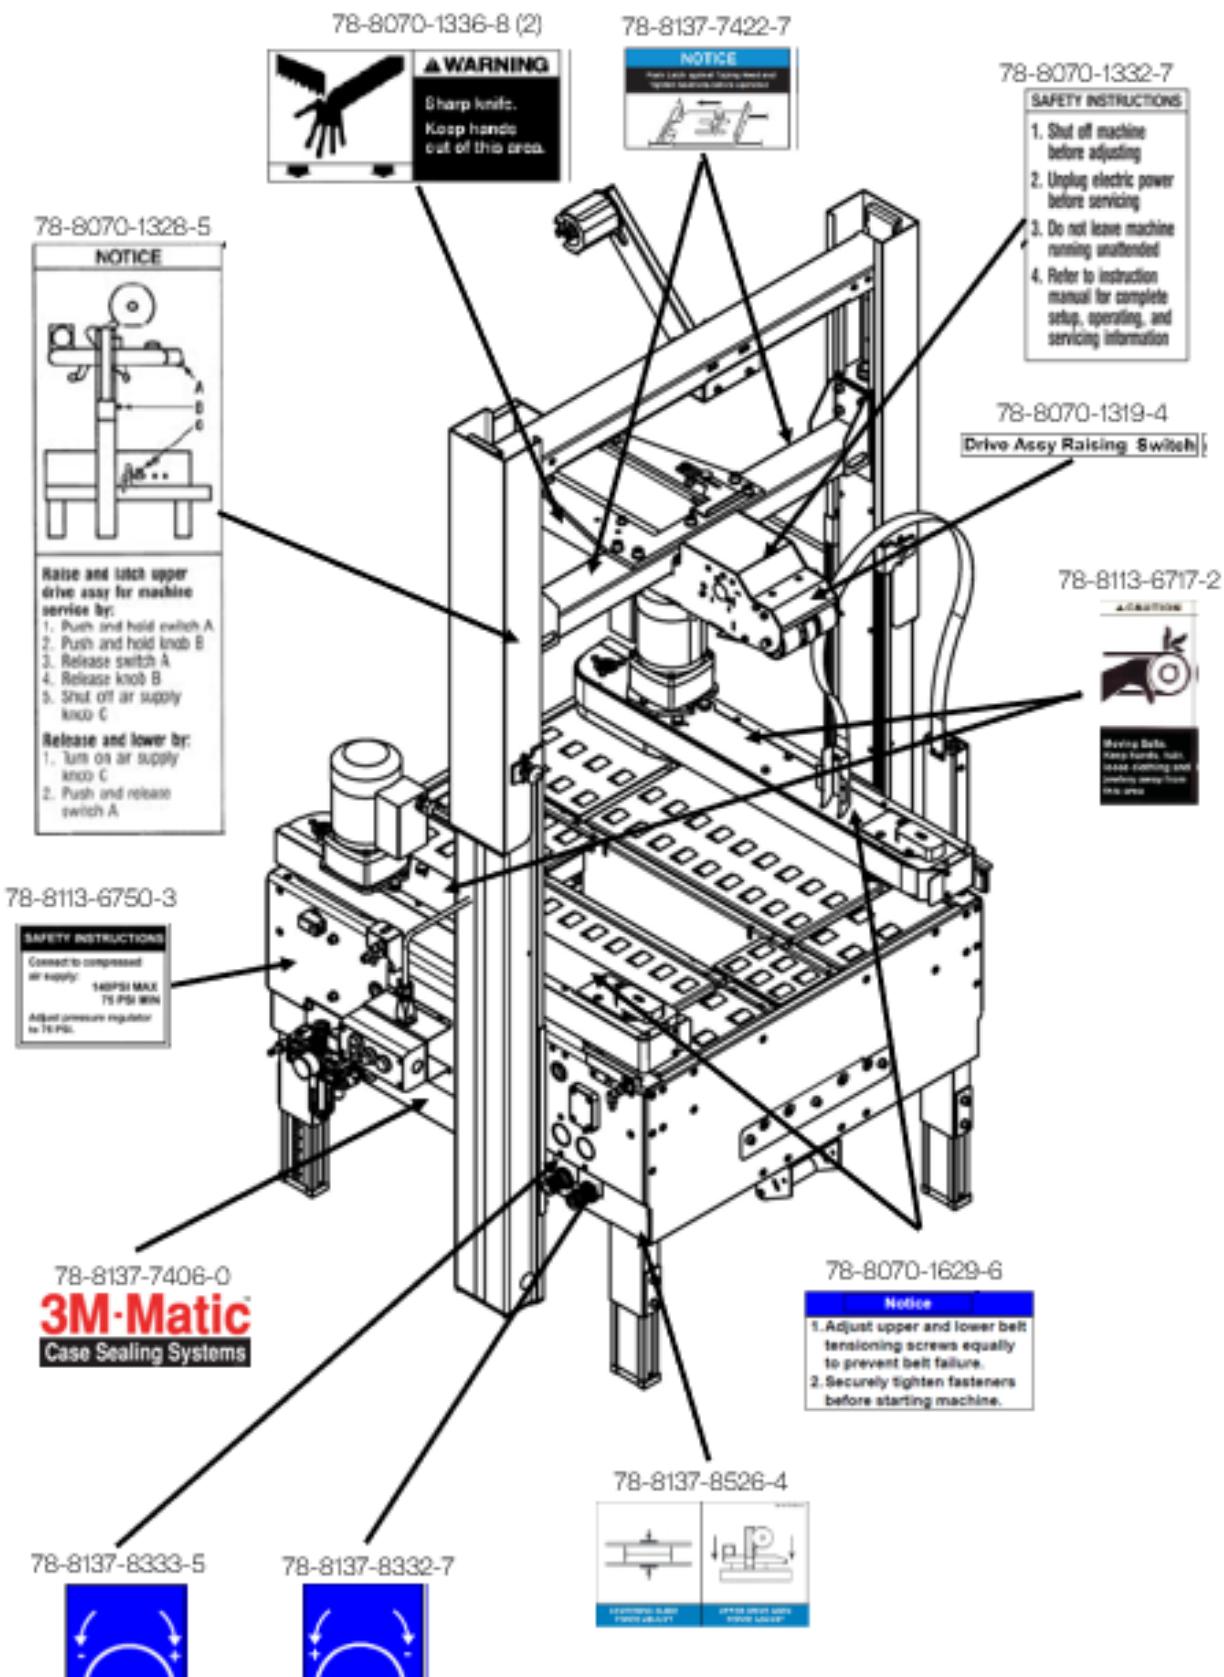

## 4. Specifications

### 4.1 Power Requirements

Electrical: - 120 Volt, 60Hz, 4.35A (522 watts)

Pneumatic - 6.25 bar gauge pressure [90 PSIG] 126 litre/min @ 21 C, 1.06 bar [4.46 SCFM]  
A pressure regulator is included.

The machine is equipped with a 2.4m [8 foot] standard neoprene covered power cord and a grounded plug. Contact your 3M Representative for power requirements not listed above.

### 4.2 Operating Rate

Box drive belt speed is approximately 0.5 m/s [100 feet per minute]. Up to 20 boxes per minute.

**Note:** Actual production rate is dependent on box height/length, box size mix, and operator dexterity.

### 4.3 Operating Conditions

Use in dry, relatively clean environments at 5° C to 50° C [40° F to 120° F] with clean, dry boxes.

**Note:** Machine should not be washed or subjected to conditions causing moisture condensation on components.



### 4.4 Tape

Scotch® pressure-sensitive film box sealing tapes.

### 4.5 Tape Width

36mm [1 1/2 inch] minimum to 50mm [2 inch] maximum (2" taping Heads)

50mm [2 inch] minimum to 72mm [3 inch] maximum (3" taping Heads)

## 4. Specifications (continued)

### Specifications

#### 4.6 Tape Roll Diameter

Up to 405mm [16 inch] maximum on a 76mm [3 inch] diameter core.

(Accommodates all system roll lengths of Scotch® film tapes.)

#### 4.7 Tape Application Leg Length – Standard

70mm ± 6mm [2 3/4 inch ±1/4 inch]

#### Tape Application Leg Length – Optional

50mm ± 6mm [2 inch ± 1/4 inch]

(See "Removing Taping Heads Procedure – Changing the Tape Leg Length")

#### 4.8 Box Board

Style – regular slotted containers – RSC

125 to 275 P.S.I. bursting test, single wall or double wall B or C flute.

23-44 lbs. per inch of width Edge Crush Test (ECT)

#### 4.9 Box Weight and Size Capacities

A. Box Weight, filled: 5 lbs.– 85 lbs. [2.3 kg–38.6 kg]. Contents must support flaps.

Box Size:	Minimum	Maximum
Length –	205mm [8.0 inch]	Unlimited
Width –	114mm [4.5 inch]	572mm [22.5 inch]
Height –	139mm [5.5 inch]	689mm [27.0 inch]


**Note:** For boxes outside of these dimensions please contact your 3M Sales Representative for possible modifications to the case sealer to meet your individual needs.

**Note:** The case sealer can accommodate most boxes within the size range listed above. However, if the box length (in direction of seal) to box height ratio is 0.6 or less, test run several boxes to ensure proper machine performance.

**DETERMINE THE BOX LIMITATIONS BY COMPLETING THIS FORMULA:**  
**BOX LENGTH IN DIRECTION OF SEAL = SHOULD BE GREATER THAN 0.6**  
**BOX HEIGHT**

Any box ratio approaching this limitation should be test run to ensure performance.

## 4. Specifications (continued)

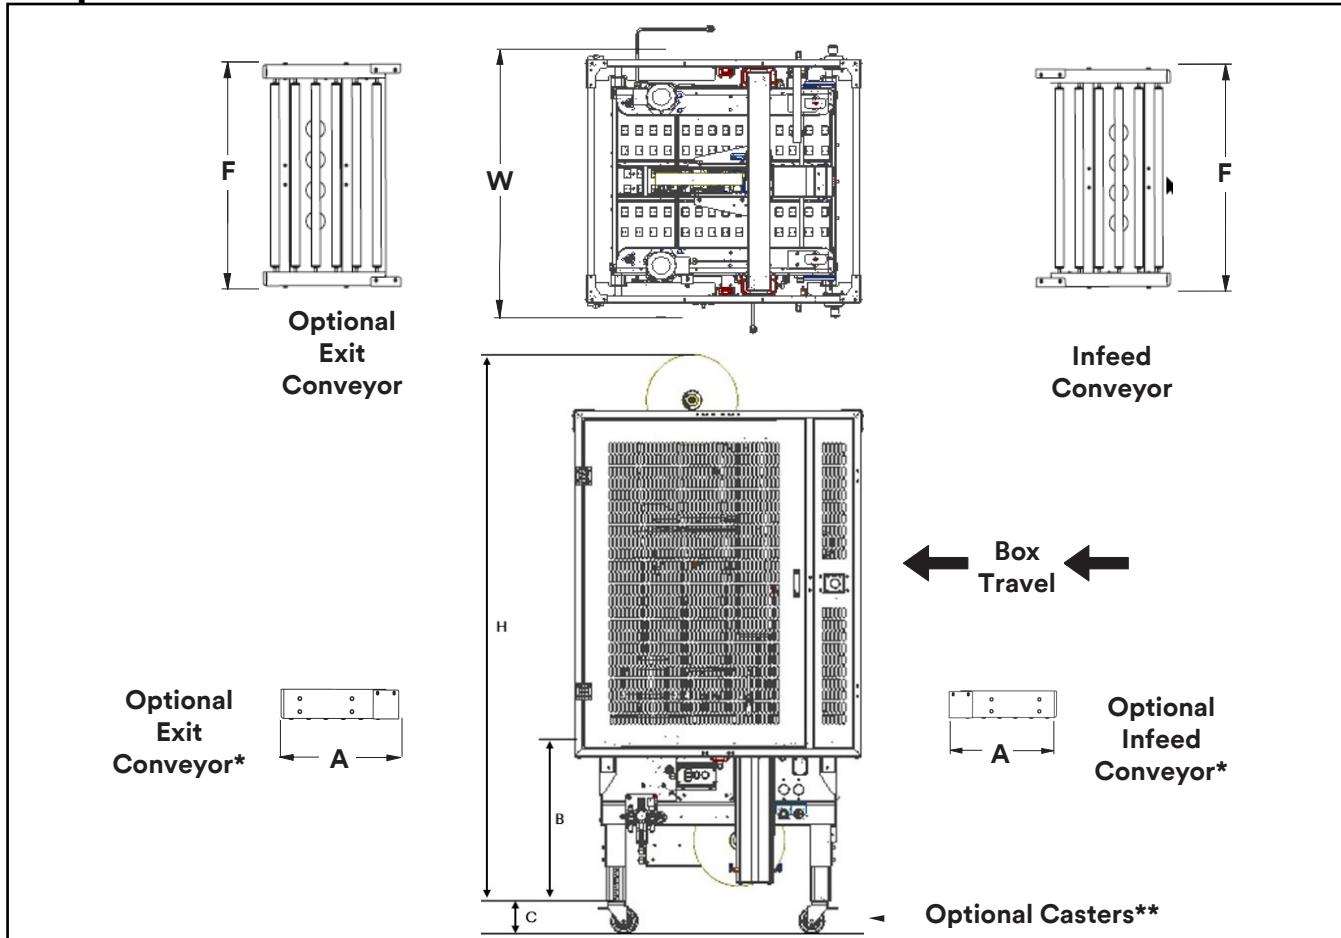

### 4.10 Machine Dimensions:

	<b>W</b>	<b>L</b>	<b>H</b>	<b>A*</b>	<b>B</b>	<b>C**</b>	<b>F</b>
<b>Minimum</b>							
mm [Inches]	1194 [47]	920 [44.75]	1395 [75.5]	460* [18]	610 [24]*	105** [4 3/16]	825.5 [32 1/2]
<b>Maximum</b>							
mm [Inches]	--	--	2172 [85.5]*	--	890 [35]*	--	--

\* Exit conveyor is optional

\*\* Casters are optional

\*\*\* When columns are adjusted to upper position, "H" maximum dimension is 2062mm [81.19 inches].  
(See "Special Setup Procedure – Outer Column Re-Positioning")

Weight – 281kg [620 pounds] crated (approximate)  
263kg [580 pounds] uncrated (approximate)

**4.11 Machine Noise Level:** Acoustic pressure measured at a distance of 1m. from machine with Scotch PVC adhesive tape in operation; 78dB Acoustic radiation pressure at 1.6m. height with Scotch PVC adhesive tape in operation; 73dB Measurement taken with appropriate instrument: (Type SPYRI-MICROPHON 11).

### 4.12 Setup Recommendations:


- Machine must be level.
- Customer supplied infeed and exit conveyors (if used) should provide straight and level box entry and exit.
- Exit conveyors (powered or gravity) must convey sealed boxes away from machine.

## 5. Shipment-Handling-Storage-Transport

### 5.1 Shipment and Handling of Packed Machine

- The machine is fixed on the pallet with four (4) bolts and can be lifted by using a fork truck.
- The package is suitable to travel by land and by air.
- Optional sea freight package is available.

**Packaging Overall Dimensions (Figure 5-1)**

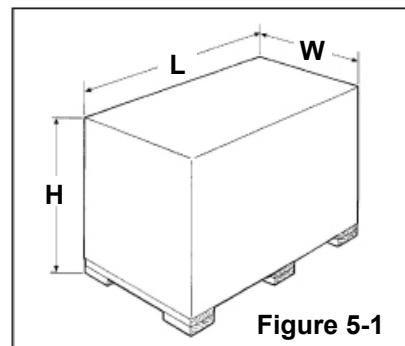


**Figure 5-1**

See Specifications.

During the shipment it is possible to stack a maximum of 2 machines (Figure 5-2).

### 5.2 Packaging for Overseas Shipment (Optional - Figure 5-3)

The machines shipped by sea freight are covered by an aluminum/polyester/polythene bag which contains dehydrating salts.

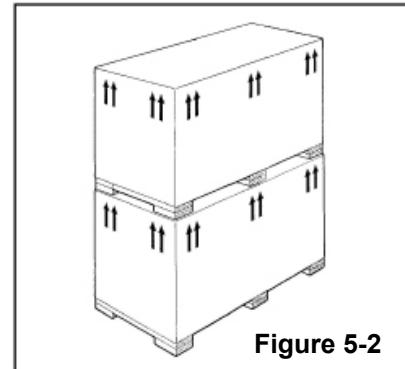


**Figure 5-2**

### 5.3 Handling and Transportation of Uncrated Machine

The uncrated machine should not be moved except for short distances and indoors ONLY. Without the supporting pallet, the machine is exposed to damage and may cause injuries.

To move the machine use belts or ropes, paying attention to place them in the points indicated using care to not interfere with the lower taping head (Figure 5-4).

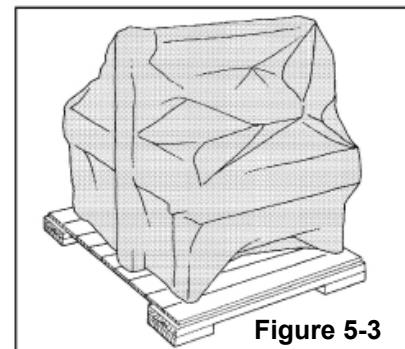


**Figure 5-3**

### 5.4 Storage of the Packed or Unpacked Machine

If the machine is not used for a long period, please take the following precautions:

- Store the machine in a dry and clean place.
- If the machine is unpacked it is necessary to protect it from dust.
- Do not stack anything over the machine.
- It is possible to stack a maximum of 2 machines (if they are in their original packing).

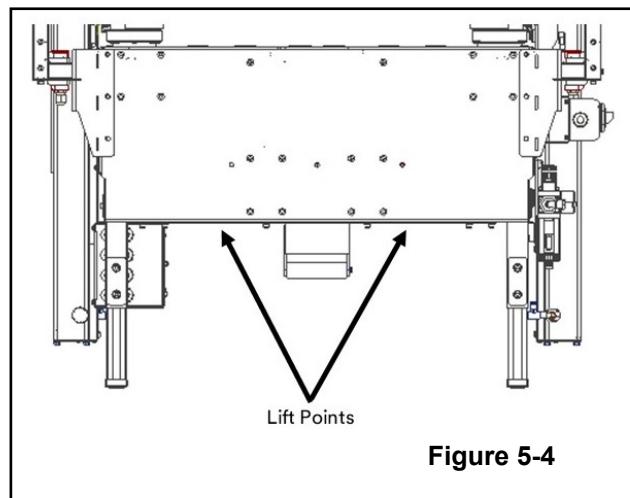

**Figure 5-4**

## 6. Unpacking

### 6.1 Uncrating

The envelope attached to shipping box contains the uncrating instructions of the machine (**Figure 6-1**).


Cut straps. Cut out staple positions along the bottom of the shipping box (or remove staples with an appropriate tool - **Figure 6-2**). After cutting out or removing the staples, lift the shipping box in order to clear the machine (two persons required).

Transport the machine with a forklift truck to the operating position. Lift the pallet at the point indicated in **Figure 6-3** (weight of machine + pallet = See Specifications).


#### Removal of Pallet

Loosen and remove nuts and brackets using the open end spanner supplied in the tool box (**Figure 6-4**).


A cardboard box is located under the machine body. Retrieve instruction manual for additional set-up procedures. The box also contains parts removed for shipping, spare parts and tools (**Figure 6-5**)

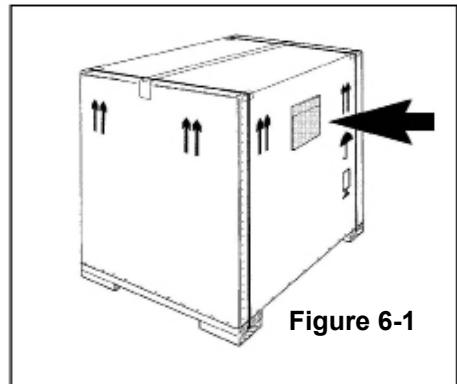

**Figure 6-1**

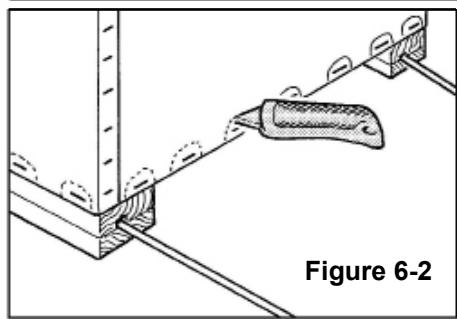

**Figure 6-2**

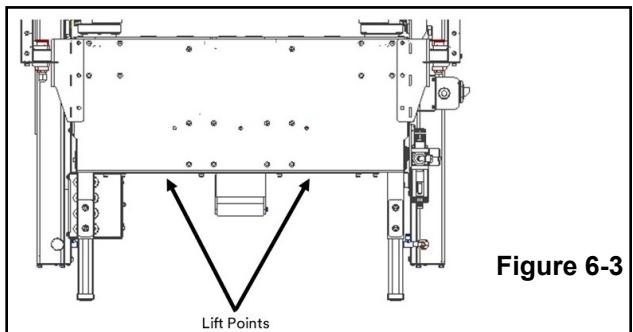


**Figure 6-3**

### 6.2 Disposal of Packaging Materials


The 8000r-8000r3 package is composed of:

- Wooden pallet
- Cardboard shipping box
- Wooden supports
- Metal fixing brackets
- PU foam protection
- PP plastic straps
- Dehydrating salts in bag
- Special bag of laminated polyester/aluminium/Polyethylene (sea freight package only)
- Polyethylene protective material

For the disposal of the above materials, please follow the environmental directives or the law in your country..

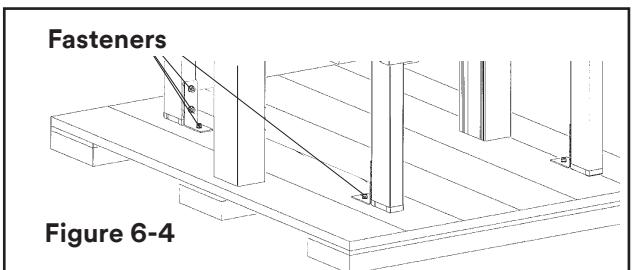

**Figure 6-4**

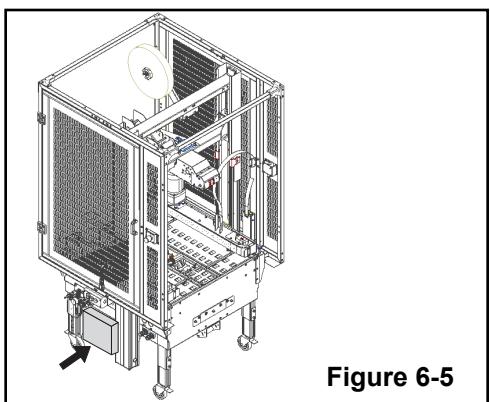

**Figure 6-5**

## 7. Installation

### 7.1 Operating Conditions

The machine should operate in a dry and relatively clean environment (See Specifications).

### 7.2 Space Requirements for Machine Operation and Maintenance Work

Minimum distance from wall (Figure 7-1):

A = 1000mm.

B = 700mm.

Minimum height = 2700mm.

### 7.3 Tool Kit Supplied with Machine

A tool kit containing some tools are supplied with the machine. These tools should be adequate to set-up the machine, however, other tools supplied by the customer will be required for machine maintenance.

### 7.4 Machine Positioning / Bed Height



1. Lift the machine with belts or ropes paying attention to place the belts in the points (Figure 7-2). To set the machine bed height, do the following:

Adjust machine bed height. The case sealer is equipped with four (4) legs that are located at the corners of the machine frame. The legs can be adjusted to obtain different machine bed heights - See Specifications.

**Note –** Minimum machine bed height can be reduced to 570mm [22.5 inch] by moving outer columns up one set of mounting holes. However, this change also increases minimum box height of 120mm [4.8 inch] to 170mm [6.8 inch].

Refer to Figure 7-3 and set the machine bed height as follows:

2. Loosen, but do not remove, two (2) M8 × 1.25 socket head screws in one leg (use M6 hex wrench). Adjust leg length for the desired machine bed height. Retighten the two (2) screws to secure the leg. Adjust all four (4) legs equally.

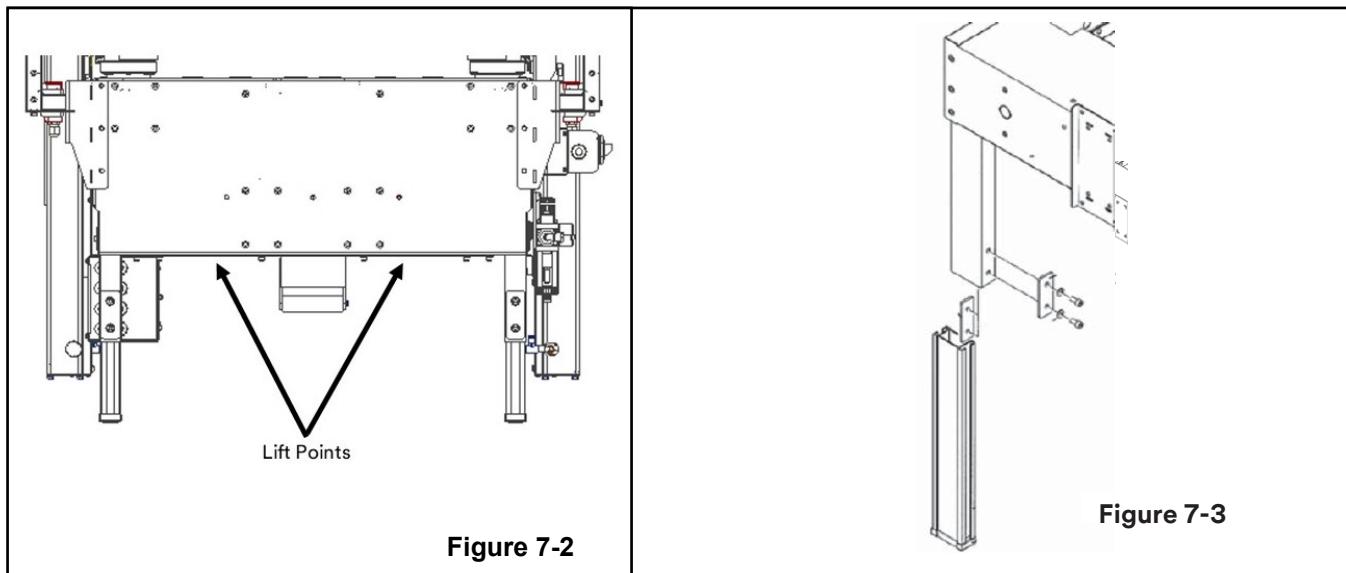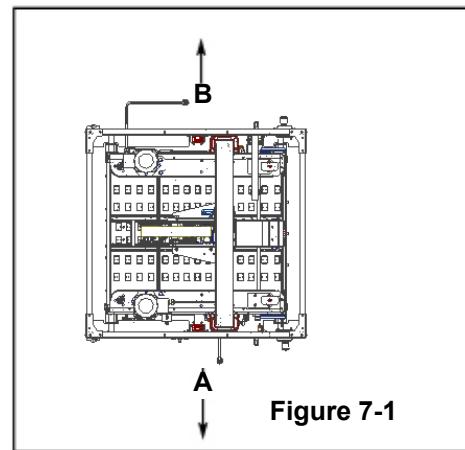

## 7. Installation (continued)

### 7.5 Removal of Plastic Ties

Cut the plastic which attaches the top head to the frame and remove the polystyrene blocks (**Figure 7-4**).

Cut the plastic strap which attaches the strip and the EMERGENCY STOP cable to the frame (**Figure 7-5**). Cut the plastic ties holding the lower taping head in position (**Figure 7-6**).

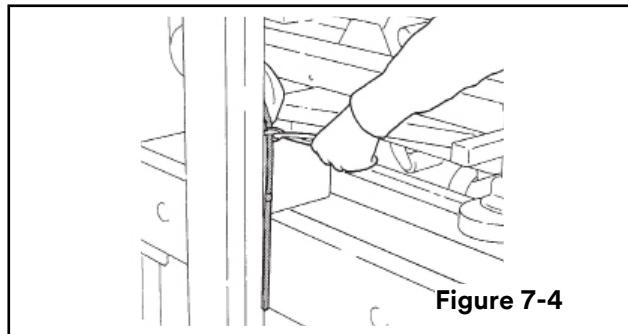


Figure 7-4

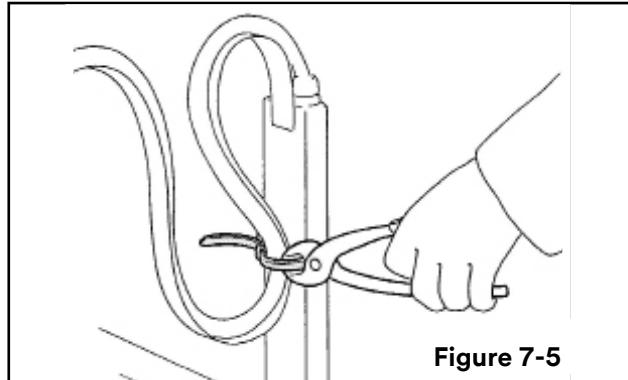


Figure 7-5

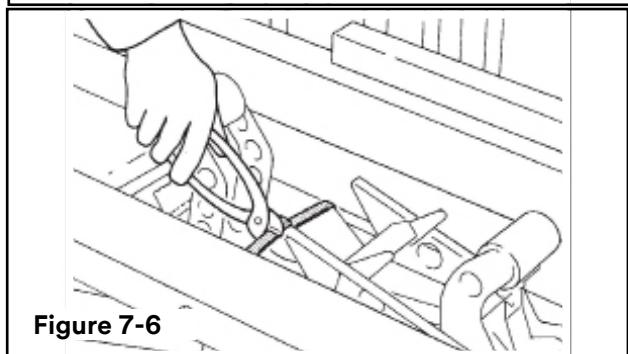


Figure 7-6

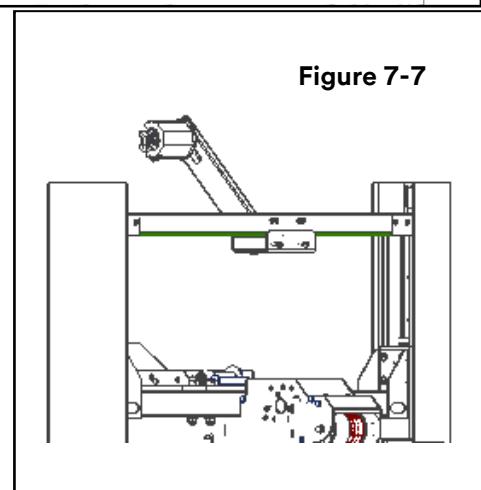


Figure 7-7

(Guarding removed for illustration)

## 7. Installation (continued)

### 7.7 Completion of Taping Heads

See Taping Head Manual for complete instructions:

**Important** – Do not cut against the apply roller - roller damage could occur.

### 7.8 Outboard Tape Roll Holder

If you intend to use the outboard tape roll holder, proceed as follows:

1. Remove the lower taping head from the machine.
2. Remove the tape drum bracket assembly, stud spacer, and fasteners from the lower taping head.
3. Install alternative wrap roller and bracket on the head in place of tape bracket. Replace lower head into machine.
4. Install and secure tape drum bracket assembly on the entry end of the lower frame

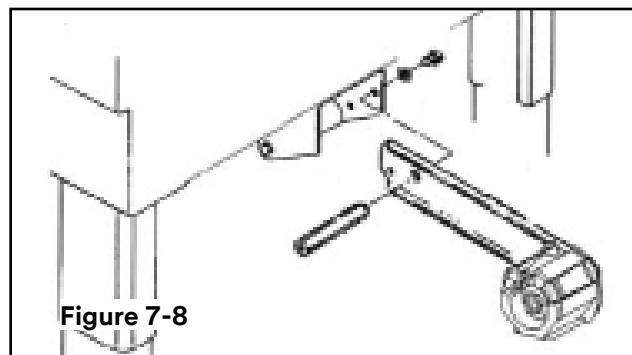


Figure 7-8

### 7.9 Preliminary Electric Inspection

Before connecting the machine to the mains please carry out the following operations:

- 7.9.1** Make sure that the socket is provided with an earth protection circuit and that both the mains voltage and the frequency match the specifications on the name plate.
- 7.9.2** Check that the connection of the machine to the mains meets the safety regulations in your country.
- 7.9.3** The machine is fitted with a main switch and a circuit breaker. The user should check that the electrical settings of the machine are compatible with all the components of the mains system.

### 7.10 Machine Connection to the Mains

For technical specifications:

See Section 4 - Specifications

- Push the LATCHING EMERGENCY STOP BUTTON.
- The main switch turned OFF (O).

Connect the power cord supplied with the machine to a wall socket using a plug which complies with the safety regulations of your country.

### 7.11 Inspection of Phases

(For Three-Main Phases Only)

(N/A for this machine)

# 8. Theory of Operation

## 8.1 Description of the Working Cycle

After having closed the top flaps of the carton, the operator pushes it under the top infeed end in order to avoid the opening of the top flaps. Further pushing causes the two top and bottom belts to drive the box through the taping heads which automatically seal the top and bottom seams. The carton is then expelled on the exit conveyor.

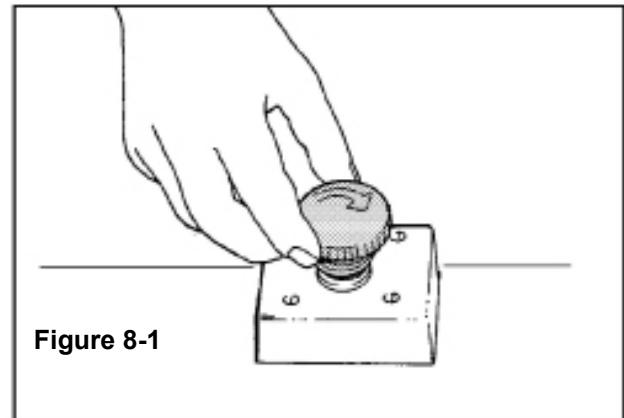


Figure 8-1

## 8.2 Definition of Running Modes

The case sealer 8000r-8000r3 has one (automatic) operating, and one (fixed) mode with:

### Automatic

- Dial rotated to "Fixed Mode Off"
- The EMERGENCY STOP BUTTON unlocked (**Figure 8-1**)
- Depress Blue reset button once (**Figure 8-2**)
- The main On/Off switch "ON" (I) (**Figure 8-2**)

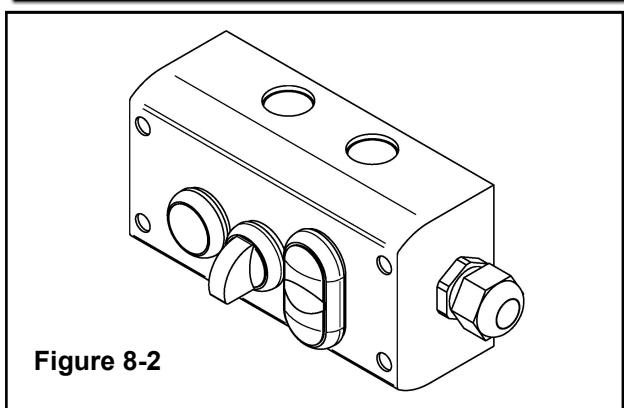


Figure 8-2

### Fixed

- Dial rotated to "Fixed Mode On"
- The EMERGENCY STOP BUTTON unlocked (**Figure 8-1**)
- Depress Blue reset button once (**Figure 8-2**)
- The main On/Off switch "ON" (I) (**Figure 8-2**)

**(Note - In fixed mode machine upper assembly will float at a "fixed" height)**

### 8.3.1 Normal Stop Procedure

When the main switch is turned OFF (O), the machine stops immediately at any point of the working cycle. The same thing happens in case of electrical failure or when the machine is disconnected from the mains.

### 8.3.2 Emergency Stop

The LATCHING EMERGENCY STOP BUTTONS are located on the side of the guarding. (**Figure 8-3**).


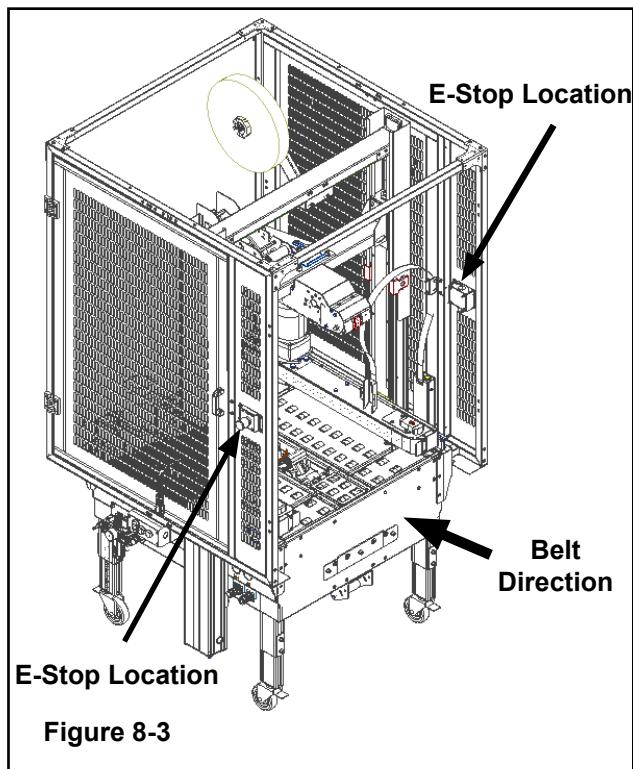



Figure 8-3

## 9. Controls

### 9.1 Start/Stop Buttons

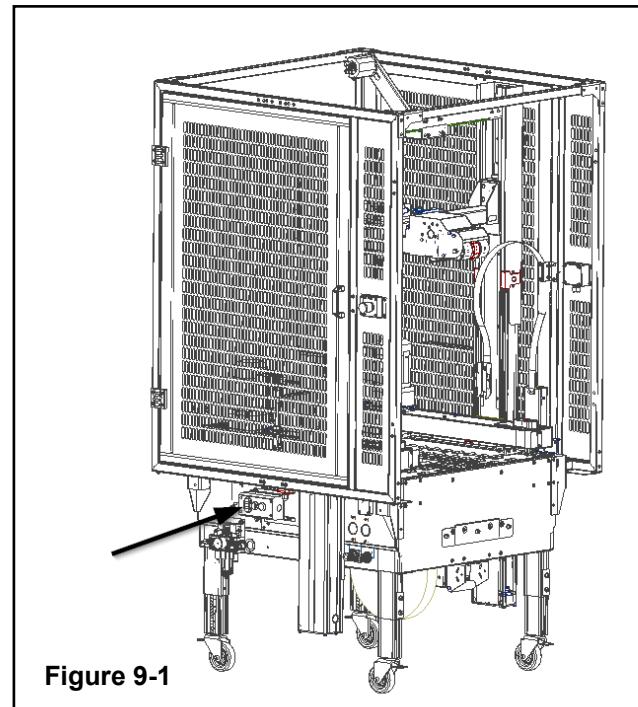

### 9.2 Lockable Emergency Stop Buttons

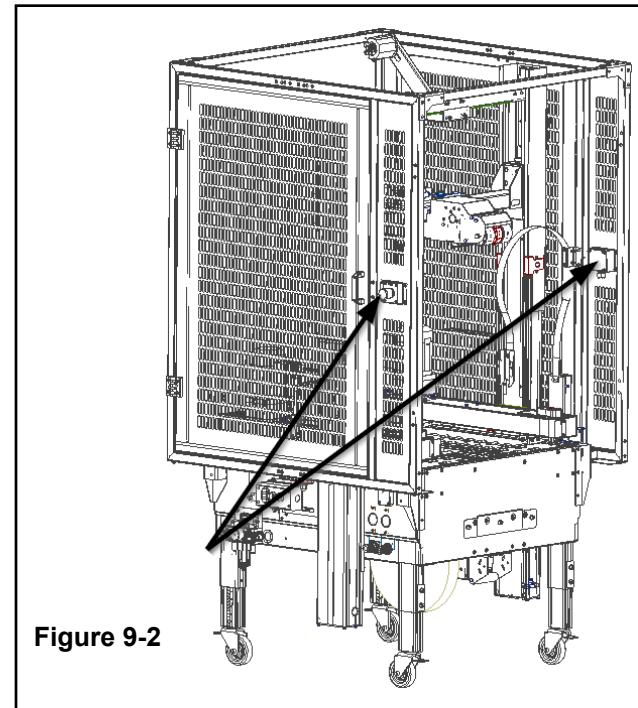

# 10. Safety Devices of the Machine

## 10.1 Blade Guards

Both top and bottom taping units have a blade guard (See Taping Heads Manual).

## 10.2 Emergency Stop Button

The box drive belts are turned on and off with the electrical switch on the side of the machine frame.

The machine electrical supply can be turned off by pressing the latching emergency stop switch.

To restart machine, rotate the emergency stop switch clockwise to release the switch latch (**Figure 10-1**).

Restart machine by pressing the reset button and then pressing the on button (**Figure 10-2**)

## 10.3 Electric System / Circuit Breaker

The electric system is protected by a ground wire whose continuity has been tested during final inspection. The system is also subject to insulation and dielectric strength tests.

### Circuit Breaker

The case sealer is equipped with a circuit breaker which trips if the motors are overloaded. Located inside the electrical enclosure on the side of the machine frame just below the machine bed, the circuit breaker has been pre-set and requires no further maintenance. If circuit is overloaded and circuit breaker trips, unplug machine from electrical power:

1. Determine cause of overload and correct.
2. Plug in machine.
3. Depress blue reset button
4. Turn machine switch "On" (I) to resume case sealing

**Important:** The use of an extension cord is not recommended. However, if one is needed for temporary use, it must:

- Have wire size 1.5mm dia. [AWG 16]
- Have a max. length 30.5m [100 ft]
- Be properly grounded.

Figure 10-1


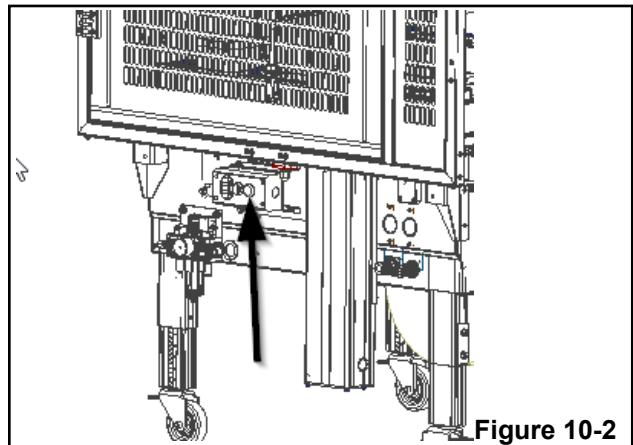


Figure 10-2



### Warning

- To reduce the risk associated with hazardous voltage:
  - Position electrical cord away from foot and vehicle traffic.

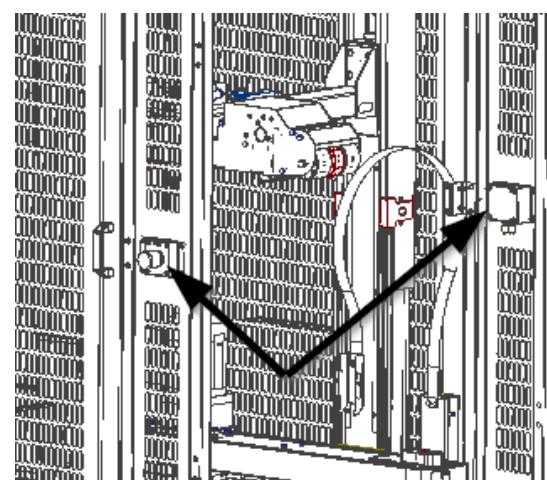

### Warning

- To reduce the risk associated with mechanical and electrical hazards:
  - Allow only properly trained and qualified personnel to operate and service this equipment.

# 11. Special Setup Procedure

## 11.1 Changing the Tape Leg Length

See taping head manual.

### Taping Heads

**Important!** Turn off Electric Power.  
Blades are SHARP!

## 11.2 Special Set-Up Procedure for Outer Column Re-positioning

Moving the outer columns to the upper set of mounting holes increases the maximum box size (height) handled by the case sealer from 533mm [21.00 in] to 644mm [25.38 in] (Dimensions given are with lift cylinders mounted in standard position) -  
See Specifications

**Note** – This also increases the minimum box height from 127mm [5.00 in] to 232mm [9.12 in].

Refer to Figure 11-2



### Warning

- To reduce the risk associated with impact hazards:
  - Always use appropriate supporting means when working under the upper drive assembly



### Warning

- To reduce the risk associated with mechanical and electrical hazards:
  - Turn electrical and air supply off and disconnect before performing any adjustments, maintenance or servicing the machine or taping heads



### Warning

- To reduce the risk associated with sharp blade hazards:
  - Keep hands and fingers away from tape cutoff blades under orange blade guards. The blades are extremely sharp
- To reduce the risk associated with muscle strain:
  - Use proper body mechanics when removing or installing drive assemblies or taping heads that are moderately heavy or may be considered awkward to lift



### Warning

- To reduce the risk associated with mechanical and electrical hazards:
  - Turn electrical and air supply off and disconnect before performing any adjustments, maintenance or servicing the machine or taping heads
- To reduce the risk associated with impact hazards:
  - Always use appropriate supporting means when working under the upper drive assembly
- To reduce the risk associated with muscle strain:
  - Use proper body mechanics when removing or installing drive assemblies or taping heads that are moderately heavy or may be considered awkward to lift
  - Use the appropriate rigging and material handling equipment when lifting or repositioning this equipment

# 11. Special Setup Procedure

## 11.2 Special Set-Up Procedure for Outer Column Re-Positioning

Moving the outer columns will increase/decrease the maximum box height capacity of the **8000r-8000r3** case sealer.



1. On both sides, place a solid spacer block (as needed to support column and to help line up new holes) between floor and bottom of outer column (**Figure 11-1A**).
2. On both front and rear, place solid spacer blocks (14" [355mm]) and lower the upper taping head assembly until the upper assembly rests on blocks.
3. Remove eight (8) column screws (**Figure 11-1B**).
4. Place second spacer block under column (**Figure 11-1A**).
5. Re-attach/tighten the eight (8) screws and washers in each column (**Figure 11-1B**).
6. Remove existing guard and attach inner guide plate using hardware provided (**Figure 11-1B**).

(continued)

**Important!** When the column is in the upper position, the Lower Column Guard must be installed (**Figure 11-1B**).

### Maximum Height:

An additional adjustment can be made to reach Maximum Height. This additional height adjustment can be made by moving the Upper Assembly Crossbar up to top holes - (**Figure 11-2**).

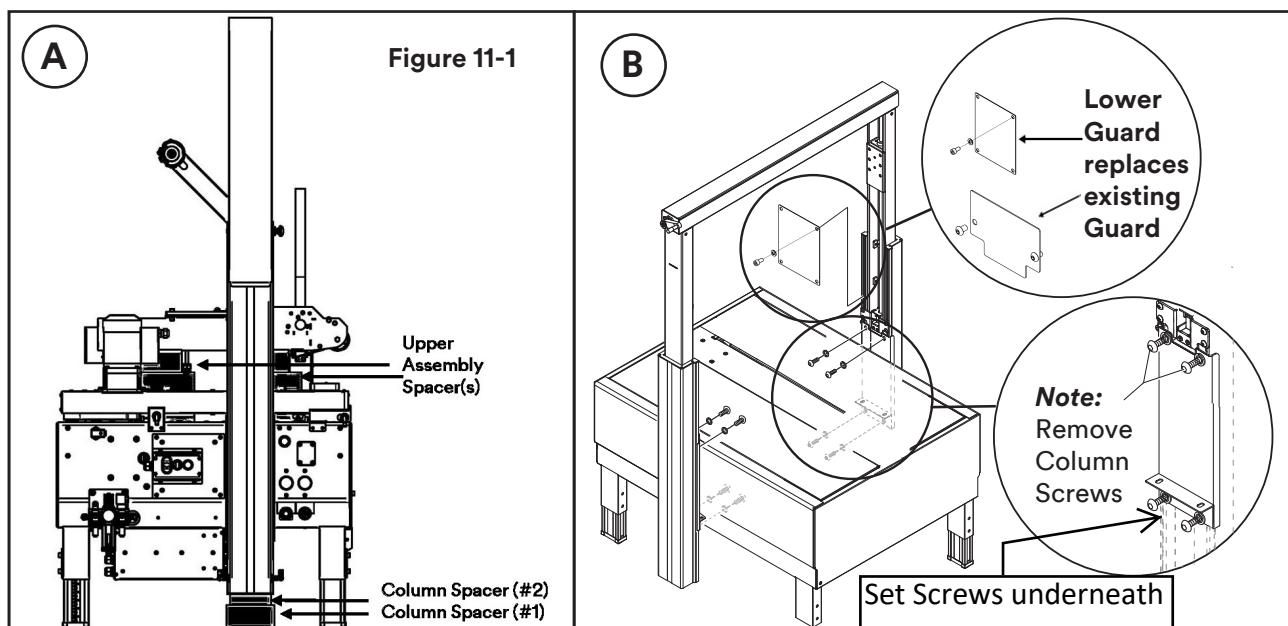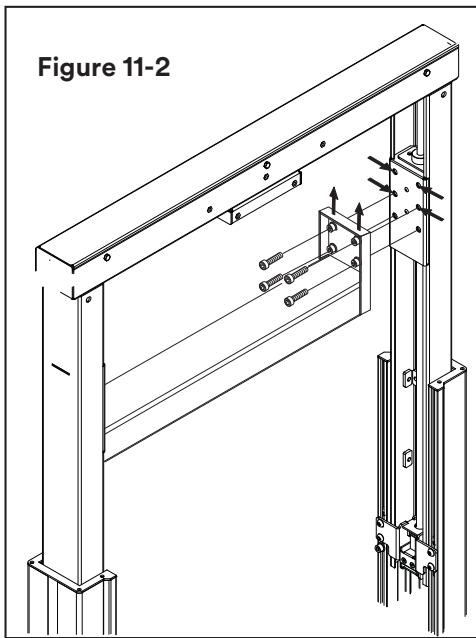

**NOTE:** Guarding removed for illustrations

# 12. Operation

## 12.1 Operator's Correct Working Position and Operational Flow (Figure 12-1).

Once the box has been filled, close its top flaps and push it between the top and bottom drive belts. Always keep hands in position as shown in (Figure 12-2).

The box will be automatically sealed with adhesive tape on the top and bottom box seams. Then the box will be expelled on the exit conveyor.

## 12.2 Starting the Machine

**Important:** Before starting the machine, verify that no tools or other objects are on conveyor bed.

Turn the main switch ON (I) and depress the blue reset button after the EMERGENCY BUTTON is released (Figure 12-3).

## 12.3 Starting Production

After having adjusted the machine according to the box dimensions (height-width), let the machine run without cartons and check its safety devices. Then start the working cycle.

## 12.4 Tape Replacement and Threading

### Skill 1 - Operator

See Taping Head Manual

Press the LATCHING EMERGENCY STOP BUTTON.

## 12.5 Box Size Adjustment

Repeat all operations shown in Set-Up and Adjustments.

## 12.6 Cleaning

Before carrying out any cleaning or maintenance operation, stop the machine by turning OFF (O) switch on the main and disconnect electric power (Figure 12-3).

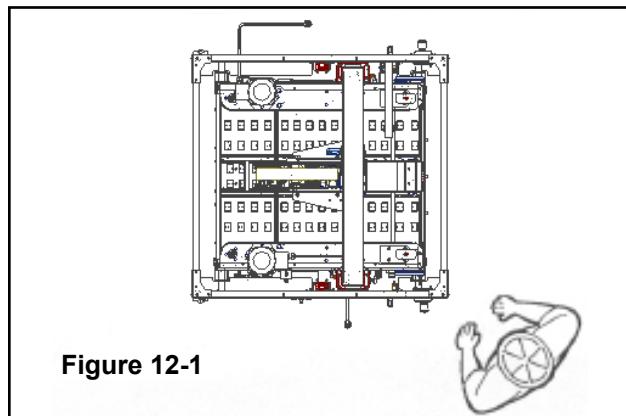


Figure 12-1

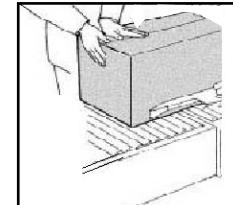


Figure 12-2

Hand Position

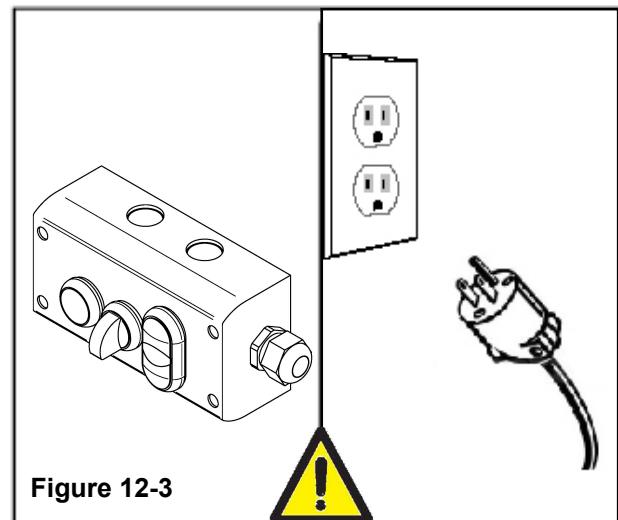


Figure 12-3

## 12.7 Table of Operation Adjustments - Operator Qualifications

1	Tape loading and threading	1
2	Tape web alignment	1
3	Adjustment of one way tension roller	1
4	Adjustment to box size (H and W)	1
5	Top flap compression rollers	1
6	Adjustment of tape applying spring	1
7	Conveyor bed height adjustment	1
8	Special Adjustment-Changing tape leg length	2
9	Special Adjustment-Column re-positioning	2

## 12.8 Safety Devices Inspection

1. Taping units blade guard
2. Latching emergency stop button
3. STOP (OFF) (O) main switch

## 12. Operation

### 12.9 Troubleshooting Guide

Problem	Cause	Correction
Drive belts do not convey boxes	Narrow boxes	Check machine specifications. Boxes are narrower than recommended, causing slippage and premature belt wear.
	Worn drive belts	Replace drive belts
	Top taping head does not apply enough pressure	Adjust the upper drive assembly force adjust regulator to increase the force against the top of the box. Turn air regulator counterclockwise.
	Taping head applying spring holder missing	Replace spring holder
	Taping head applying spring set too high	Reduce spring pressure
Drive belts do not turn	Worn or missing friction rings	Replace friction rings
	Drive belt tension too low	Adjust belt tension
	Electrical disconnect	Check power and electrical plug
	Motor not turning	Evaluate problem and correct
Drive belts break	Worn belt	Replace belt
Squeaking noise as boxes pass through machine	Dry compression rollers	Lubricate compression rollers
	Dry column bearings	Lubricate column bearings
	Defective column bearings	Replace column bearings
Tape not centered on box seam (continued)	Tape drum not centered	Reposition tape drum
	Drive belts not centered	Adjust centering guides
	Box flaps not of equal length	Check box specifications

## 12. Operation

### 12.9 Troubleshooting Guide

Problem	Cause	Correction
Upper drive assembly does not move up or moves up slowly	Lower air pressure	Disconnect the air supply. Make sure main pressure regulator reads zero. Reconnect air supply and adjust regulator to read 6.25 bar [90 PSIG].
	Defective head raising valve	Clean or replace head raising valve
	Worn head raising valve actuator	Replace valve
	Clogged or damaged exhaust mufflers on the upper ends of the head raising cylinders	Clean or replace exhaust mufflers
	Defective head power valve	Clean or replace the head power valve
Upper taping head does not move down at the end of the taping cycle	Upper drive assembly force adjust regulator set too light	Adjust the upper drive assembly force adjust regulator to increase the force against the top of the box. Turn air regulator counterclockwise.
	Defective top drive assembly force adjust regulator	Replace regulator
	Defective "OR" valve	Clean or replace valve
	Defective head power valve	Clean or replace valve
Upper head assembly comes down too fast or too hard	Upper drive assembly force adjust regulator set too heavy	Adjust upper drive assembly force adjust regulator to decrease force against top of box. Turn regulator clockwise.
	Defective upper drive assembly force adjust regulator	Replace regulator
	Cushion screw misadjusted	Adjust cushion screw at base of cylinder
	Cushion screw missing	Replace screw
Centering drive assemblies move slower than normal	Centering force adjust regulator set too low	Adjust regulator
	Centering guide cylinder speed controls not in correct adjustment	Adjust speed controls mounted on centering guide cylinder
	Defective centering guide power valve	Clean or replace valve

# 13. Maintenance and Repairs

## 13.1 Safety Measures (see section 3)

Carrying out maintenance and repairs may imply the necessity to work in dangerous situations.

## 13.2 Tools and Spare Parts Supplied with the Machine

See Spare Parts Order Section.

component wear and over-heating of drive motors. The dust build up is best removed from the machine with a vacuum cleaner. Depending on the number of cartons processed, this cleaning should be done weekly. Excessive build-up that cannot be removed by vacuuming should be removed with a damp cloth.

## 13.3 Recommended Frequency of Inspection and Maintenance Operations

Operation	Frequency	Qualification	Sections
Inspection safety features	daily	1	13.4
Cleaning of machine	weekly	1	13.5
Cleaning of cutter blade	weekly	2	13.6
Oiling of felt pad	weekly	2	13.7
Lubrication	monthly	2	13.7-13.8
Blade replacement	when worn	2	See Tape Head Manual
Drive belt replacement	when worn	2	13.10

## 13.4 Inspections to be Performed

### Before and after every Maintenance Operation

Before every maintenance operation, Turn the main switch OFF (O) and disconnect machine from power source. During the maintenance operation, only properly trained and qualified personnel must work on the machine. At the end of every maintenance operation check the safety devices.

## 13.7 Cleaning of Cutter Blade

### Qualification 2

Should tape adhesive build-up occur, carefully wipe clean with oily cloth or brush. Oil prevents the build-up of tape adhesive  
(See Tape Head Manual )

## 13.5 Check Efficiency of Safety Features

1. Blade guard assembly upper taping head
2. Blade guard assembly lower taping head
3. Latching Emergency stop button with mechanical lock (interrupt supply of electrical power)
4. Turn main switch STOP/OFF (O)
5. Safety guards top drive belts

## 13.6 Cleaning of Machine

### Qualification 1

A weekly cleaning with dry rags or diluted detergents is necessary. Cardboard boxes produce a significant quantity of dust and paper chips when processed or handled in case sealing equipment. If this dust is allowed to build up on machine components, it can cause



## Warning

- To reduce the risk associated with mechanical and electrical hazards:
  - Read, understand, and follow all safety and operating instructions before operating or servicing the case sealer.
  - Allow only properly trained and qualified personnel to operate and service this equipment.
- To reduce the risk associated with pinches, entanglement and hazardous voltage:
  - Turn electrical supply off and disconnect before performing any adjustments, maintenance or servicing the machine or taping heads.

## 13. Maintenance and Repairs

### 13.8 Box Drive Belt Replacement

**Note –** 3M recommends the replacement of drive belts in pairs, especially if belts are unevenly worn.

1. Raise the upper taping head to its fully raised position.
2. Remove and retain the five (5) screws (A), five (5) washers (B) and side cover (C) - **See Figure 13-1.**
3. Remove and retain the screw (D), washer (E) and belt tensioner cover (F).
4. Turn belt adjustment screws (G) counterclockwise on both the upper and lower tension assemblies until belt is loose - **See Figure 13-2.**
5. Locate the belt lacing (joint) by turning the belt manually. Remove the pin with pliers. Remove and discard old belt.


(continued on next page)

#### **WARNING**

- To reduce the risk associated with mechanical and electrical hazards:
  - Read, understand, and follow all safety and operating instructions before operating or servicing the case sealer.
  - Allow only properly trained and qualified personnel to operate and service this equipment.

#### **WARNING**

- To reduce the risk associated with pinches, entanglement and hazardous voltage:
  - Turn electrical supply off and disconnect before performing any adjustments, maintenance or servicing the machine or taping heads.

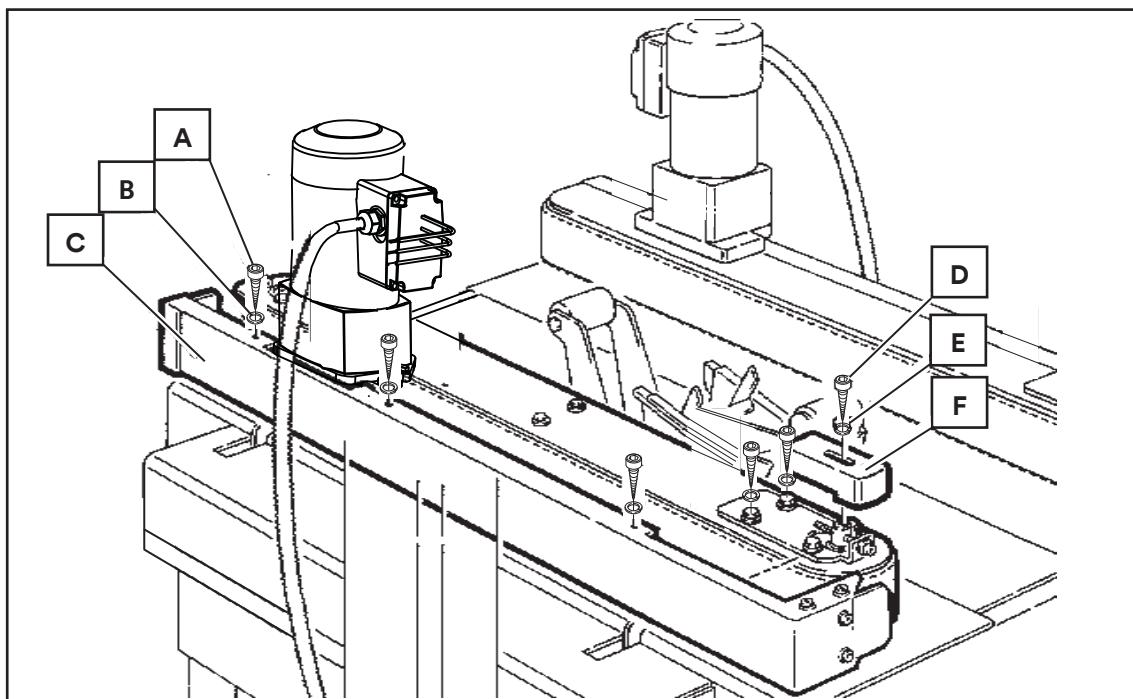

**Figure 13-1 Box Drive Belt (Left Side View – Infeed End) (Guarding removed for illustration)**

## 13. Maintenance and Repairs

6. Install the new belt around drive rollers and insert new pin. Pin must not extend beyond edge of belt.
7. To set drive belt tension, turn adjustment screws (G) equally on both the upper and lower tension assemblies. Turn the screws clockwise to increase tension or counterclockwise to decrease tension. **See Figure 13-2**

Use a force gauge to pull the belt outward 25mm [1 inch] at mid-span, as shown with a moderate pulling force of 3.5 kg [7 lbs].

8. Reverse procedures in Steps 1-3 (**Figure 13-1**) to reassemble the drive belt assembly.

**Important** – Before installing a new drive belt, check the belt inside surface for drive direction arrows and install belt accordingly. If no arrows are shown, the belt may be installed either way.

### 13.9 Drive Pulley Rings

Before installing a new belt, check the orange plastic drive pulley rings for wear. If torn, broken, or worn smooth, replace the rings (**Figure 13-3**).

#### Warning

- To reduce the risk associated with mechanical and electrical hazards:
  - Allow only properly trained and qualified personnel to operate and service this equipment.

#### Warning

- To reduce the risk associated with pinches, entanglement and hazardous voltage:
  - Turn electrical supply off and disconnect before performing any adjustments, maintenance or servicing the machine or taping heads.

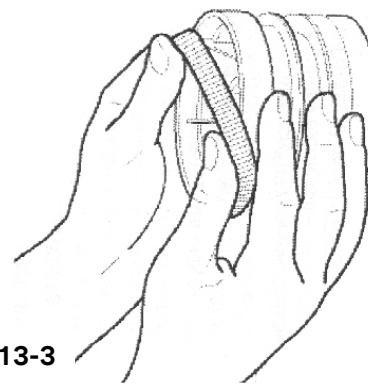


Figure 13-3


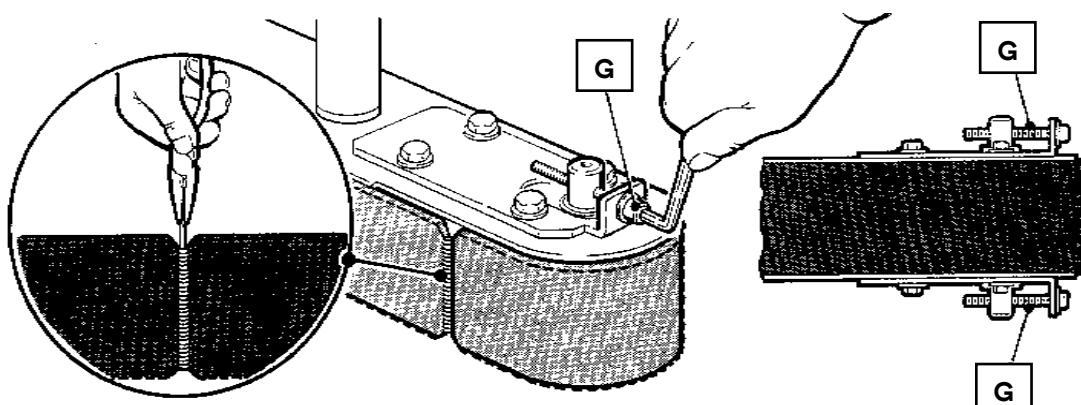


Figure 13-2 Box Drive Assembly, Infeed End

## 13. Maintenance and Repairs

### 13.10 Drive Belt Tension

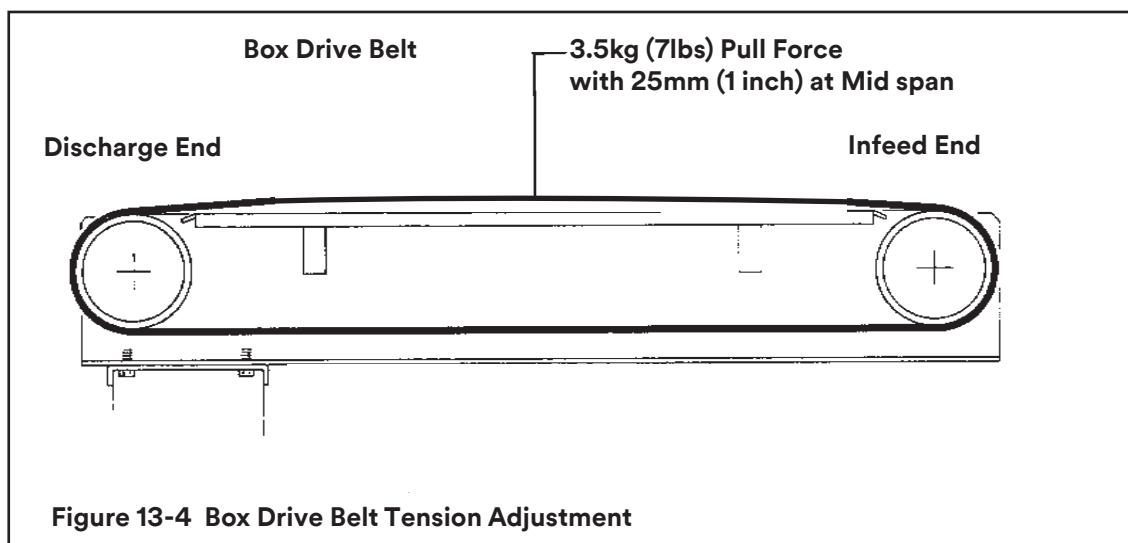

#### 13.10 Drive Belt Tension

Tension adjustment of the drive belts may be required during normal operation. Belt tension must be adequate to positively move the box through the machine and they should run fully on the surface of the pulleys at each end of the frame.

The idler pulleys on the infeed end are adjusted in or out to provide proper belt tension. Each belt is adjusted separately. Belt tension is obtained by tightening the adjustment screw so that a moderate pulling force of 3.5 kg [7 lbs] applied at the mid span, as shown in **Figure 13-4**, will deflect the belt 25mm [1 inch]. This will assure positive contact between the belt and the drive pulley on the discharge end of the taping head. To adjust belts, see "Maintenance – Drive Belts", steps 3 and 7.

#### WARNING

- To reduce the risk associated with mechanical and electrical hazards:
- Read, understand, and follow all safety and operating instructions before operating or servicing the case sealer.
- Allow only properly trained and qualified personnel to operate and service this equipment.

#### WARNING

- To reduce the risk associated with pinches, entanglement and hazardous voltage:
- Turn electrical supply off and disconnect before performing any adjustments, maintenance or servicing the machine or taping heads.

## 13. Maintenance and Repairs

### 13.11 Taping Heads (Refer to Figure 13-5A, 13-5B, and 13-5C)

**Note** – Changing tape leg to 48mm [2 inches] requires machine adjustment also. See Tape Head Manual “Special Set-Up Procedure Changing Tape Leg Length”.


1. Loosen, but do not remove, the retaining screw that secure upper taping head shown - **Figure 13-5A**.
2. Hold upper taping head applying and buffing arms from under upper assembly, slide head forward and down to remove **Figure 13-5B**.
3. Lift the lower taping head, shown in **Figure 13-5C**, straight up to remove it from the case sealer bed.
4. Refer to Taping Head Manual  
See “Adjustments – Changing Tape Leg Length” for taping head set-up.

### WARNING

- To reduce the risk associated with sharp blade hazards:
  - Keep hands and fingers away from tape cutoff blades under orange blade guards. The blades are extremely sharp.

#### Taping Head Adjustments

Tape Web Alignment	– Manual 2
Tape Drum Friction Brake	– Manual 2
Applying Mechanism Spring	– Manual 2
One Way Tension Roller	– Manual 2
Tape Leg Length	– Manual 2
Leading Tape Leg Length Adjust	– Manual 2
Changing Tape Leg Length from 70 to 48mm [2-3/4 to 2 inches]	– Manual 2

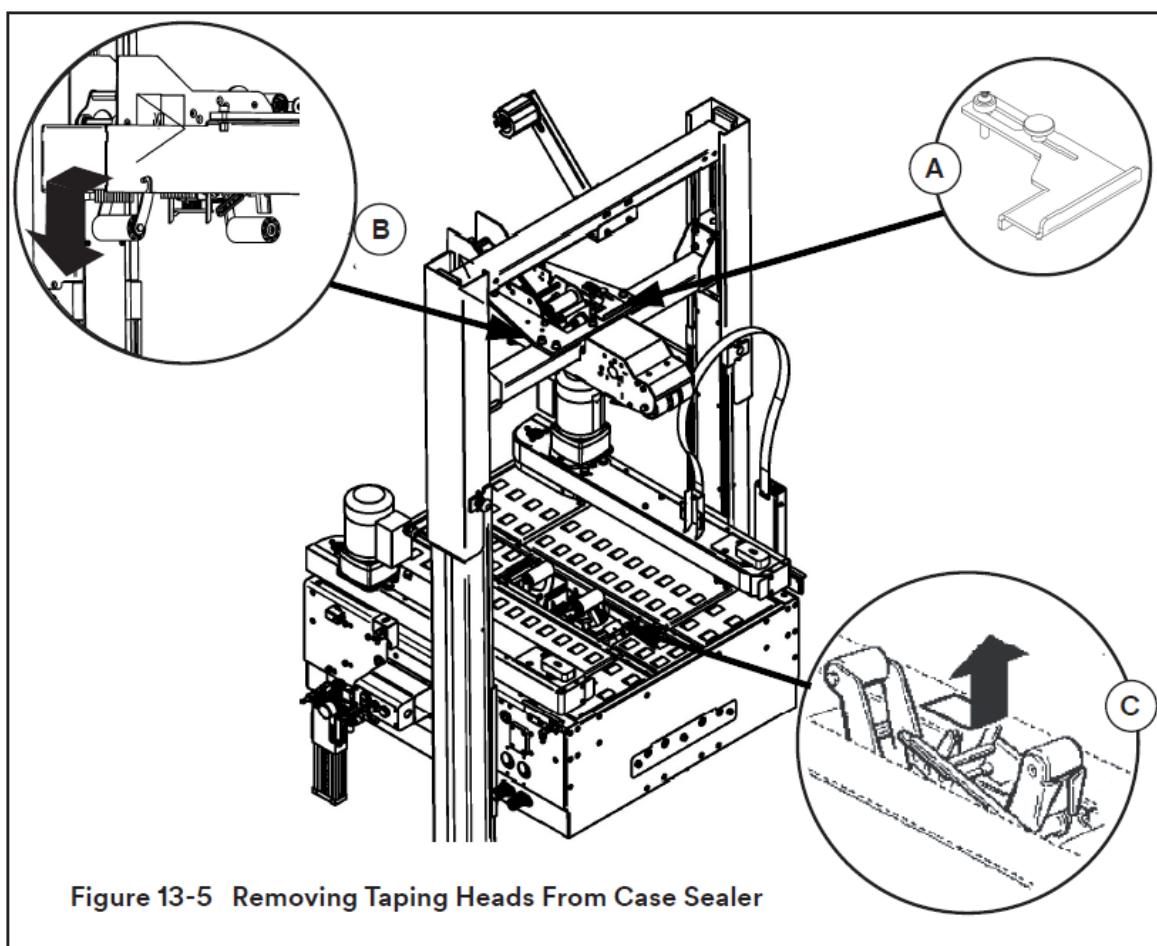

## **13. Maintenance and Repairs *(continued)***

### **13.12 List of the Maintenance Operations**

<b>Date:</b>	<b>Description of Operation</b>

## 14. Additional Instructions

### 14.1 Information for Disposal of Machine (ELV)

The machine is composed of the following materials:

- Steel structure
- Nylon rollers
- Drive belts in PVC
- Nylon pulleys

For machine disposal, follow the regulations published in each country.

### 14.2 Emergency Procedures

In case of danger/fire:

Disconnect plug of power cable from power supply (**Figure 14-1**).

#### IN CASE OF FIRE

Use a fire extinguisher that is rated for electrical fires - (**Figure 14-2**).

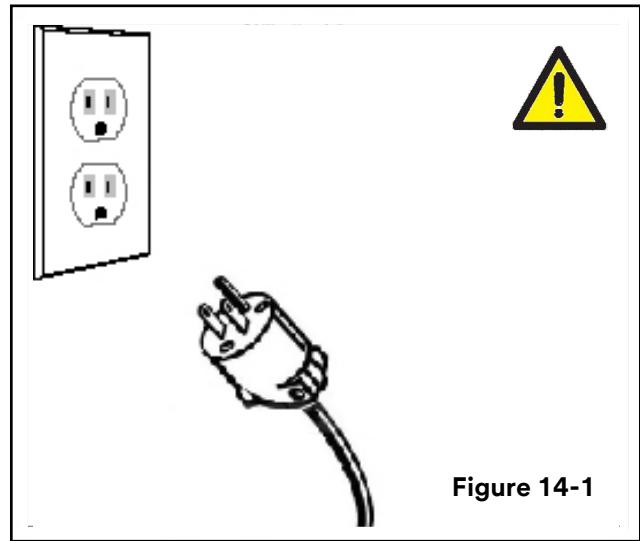


Figure 14-1

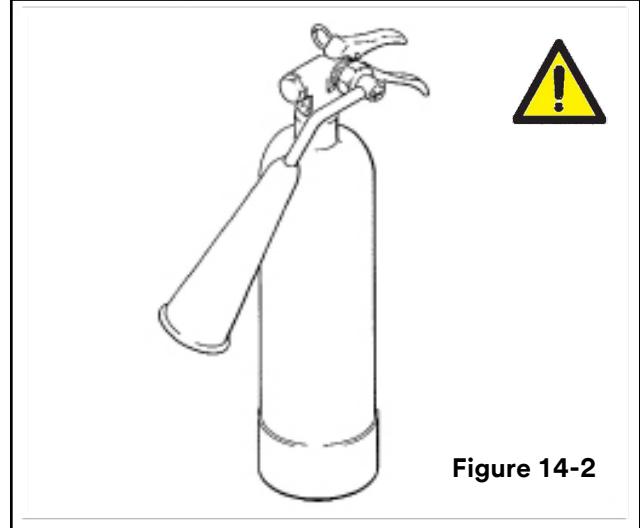


Figure 14-2

## 15. Additional Information

### 15.1 Statement of Conformity

N/A

### 15.2 Emission of Hazardous Substances

Nothing to report



Customer	
Plant designation	: 8000r_Fixed Mode_PLC
Drawing number	: SBB0006631
Commission	:
Manufacturer	
Address	: :
Make	: :
Types	: AUTOMATIC CASE SEALING MACHINE
Mounting site	:
Part feature	:
Special environment	: nessuna
Site	: None
Regulation	:
Degree of protection	:
Control panels	
Supply	: 115V 60Hz
Supply lead	: 1Ph+N+PE
Control voltage	: 24VDC
Model Year	: 2023
Project beginning	
Responsible for project	:
Last change	: 24/11/2023
Last user	:
Document pages	
Number of pages	

User.		Date Change	24/11/2023	8000r_Fixed Mode_PLC		TITLE PAGE	SBB0006631		= 00	Dec 2023
Date	27/09/2023	Date	24/11/2023				+ DOC			
Check.		Name	Norm				EPLAN sample project			
		Revision	Created for							



## Bill of materials

3M

Item designation	Amou.	Designation	Type number	Supplier	Article number	Page/path	3M Code
+P-25A31	1	PLC	2080-LC10-12QWB	A-B	A-B.2080-LC10-12QWB	+P/25.3	78813783467
+P-26B41	0					+P/26.4	
+P-26B51	0					+P/26.5	
+P-26B61	0					+P/26.6	
+P-26B71	0					+P/26.7	
+P-11C21	0					+P/11.2	
+P-11C41	0					+P/11.4	
+P-11F61	1	Miniature Circuit Breaker	1492	A-B	A-B.1492-SPM2C020	+P/11.6	78002508543
+P-11FU61	1	Morsetto portafusibile UK 5	UK 5-HESI	PHÖNIX	PHOE. UK 5-HESI	+P/11.6	78813781339
+P-11FU61	1	FUSIBILE 5X20 2A	5X20 2A.	ITA	ITA.CH 5X20 2A	+P/11.6	78813783491
+P-20H41	1	LED element,front,white	M22-LED-W	MOE	MOE.216557	+P/20.4	78813780828
+P-20K11	1	Slim I/O Relay	G2RV-ST700 DC24	OMR	OMR.G2RV-ST700_DC24	+P/20.1	78002507040
+P-20KA61	1	RELE' 4 SCAMBI	MY4 24VDC	OMR	OMR.MY4 24VDC	+P/20.6	78807652215
+P-27KM21	1	DILM7-10 24VDC	DILM7-10	MOE	MOE.276565	+P/27.2	78813777345
+P-27KM21	1	Diode suppressor f. DILA, M7-15	DILM12-XSPD	MOE	MOE.DILM12-XSPD	+P/27.2	78813783541
+P-11M11	0					+P/11.1	
+P-11M41	0					+P/11.4	
+P-40M11	0					+P/40.1	
+P-41M21	0					+P/41.5	
+P-41M22	0					+P/41.0	
+P-10PE11	0					+P/10.1	
+P-11PE71	0					+P/11.7	
+P-27PE81	0					+P/27.8	
+P-100QM51	1	Motor Protection Circuit Breaker	140MT	A-B	A-B.140MT-C3E-B40	+P/10.5	78002509079
+P-100QM51	1	DISTANZIATORE	140MT-C-TE	AB	AB.140MT-C-TE	+P/10.5	78002509178
+P-20S51	0					+P/20.5	
+P-20S62	1	Illum. push-butt.,flush,blue	M22-DL-B	MOE	MOE.216931	+P/20.6	78813783442
+P-20S62	1	CONTATTO NO	M22-K10	MOE	MOE.216376	+P/20.6	78813780810
+P-20S62	1	SUPPORTO CONTATTI	M22-A	MOE	MOE.M22-A	+P/20.6	78813780844
+P-20S62	1	LED element, blue, Front fixing, 12-30V AC/DC	M22-LED-B	MOE	MOE.218057	+P/20.6	78813783459
+P-21S52	0					+P/21.5	
+P-21S72	0					+P/21.7	
+P-26S11	1	CONTATTO NC	M22-K01	MOE	MOE.216378	+P/26.1	78813780851
+P-26S21	1	Double push-button,illum.,inscript.	M22-DDL-WS-X1/X0	MOE	MOE.216706	+P/26.2	78813780794
+P-26S21	1	CONTATTO NO	M22-K10	MOE	MOE.216376	+P/26.2	78813780810
+P-26S21	1	SUPPORTO CONTATTI	M22-A	MOE	MOE.M22-A	+P/26.2	78813780844
+P-26S31	1	Illuminated selector pushbutton	M22-WRLK-W	MOE	MOE.216823	+P/26.3	78813784226
+P-26S31	1	SUPPORTO CONTATTI	M22-A	MOE	MOE.M22-A	+P/26.3	78813780844
+P-26S31	2	CONTATTO NO	M22-K10	MOE	MOE.216376	+P/26.3	78813780810
+P-26S31	1	LED element,front,white	M22-LED-W	MOE	MOE.216557	+P/26.3	78813780828
+P-21SB51	0					+P/21.5	
+P-21SB71	0					+P/21.7	
+P-20SP11	0					+P/20.1	
+P-11U61	1	Power supply 60W, in: 1 phase 100-240VAC/90-350VDC, out: 24VDC/2.5A	S8VK-G06024	OMR	OMR.S8VK-G06024	+P/11.6	78002509202
+P-40U11	0					+P/40.1	
+P-10X01	0					+P/40.1	
+P-10X11	0						
+P-11XP11	0						
+P-11XP41	0						
+P-20XP11	0						

2 Page 47 Date Released: Dec 2023




# Sommario indirizzi PLC


## PLC address overview

F48\_001

CPU (indirect)	PLC address	Data type	Symbolic address (automatic)	Function text (automatic)	Direction	Planning object designation
	DI-04		=00+P-26B51:4	Fixed mode photocell	Input	
	DI-05		=00+P-26B61:4	Upper group ascent proximity	Input	
	DI-06		=00+P-26B71:4	Close guides proximity	Input	
	DI-07		=00+P-20KA61:5	Emergency stop	Input	
	DO-00		=00+P-25A31:IN:10	MOTORS	Output	
	DO-01		=00+P-27Y41:x2	Side guides closing	Output	
	DO-02		=00+P-27Y61:x2	Upper group ascent	Output	
	DO-03		=00+P-27Y71:x2	Valve for anti-fall driving	Output	
	DI-00		=00+P-26S11:.2	Cycle stop	Input	
	DI-01		=00+P-26S21:14	Cycle start	Input	
	DI-02		=00+P-26S31:14	Fixed mode	Input	
	DI-03		=00+P-26B41:4	End cycle photocell	Input	

User.		Date Change	24/11/2023	8000r_Fixed Mode_PLC		PLC address overview	SBB0006631	=00	Dec 2023
Date	27/09/2023	Date	24/11/2023					+DOC	
Check.		Name	Norm				EPLAN sample project		44-0009-2177-3
		Revision	Created for						Pg. 10 18 Pgs

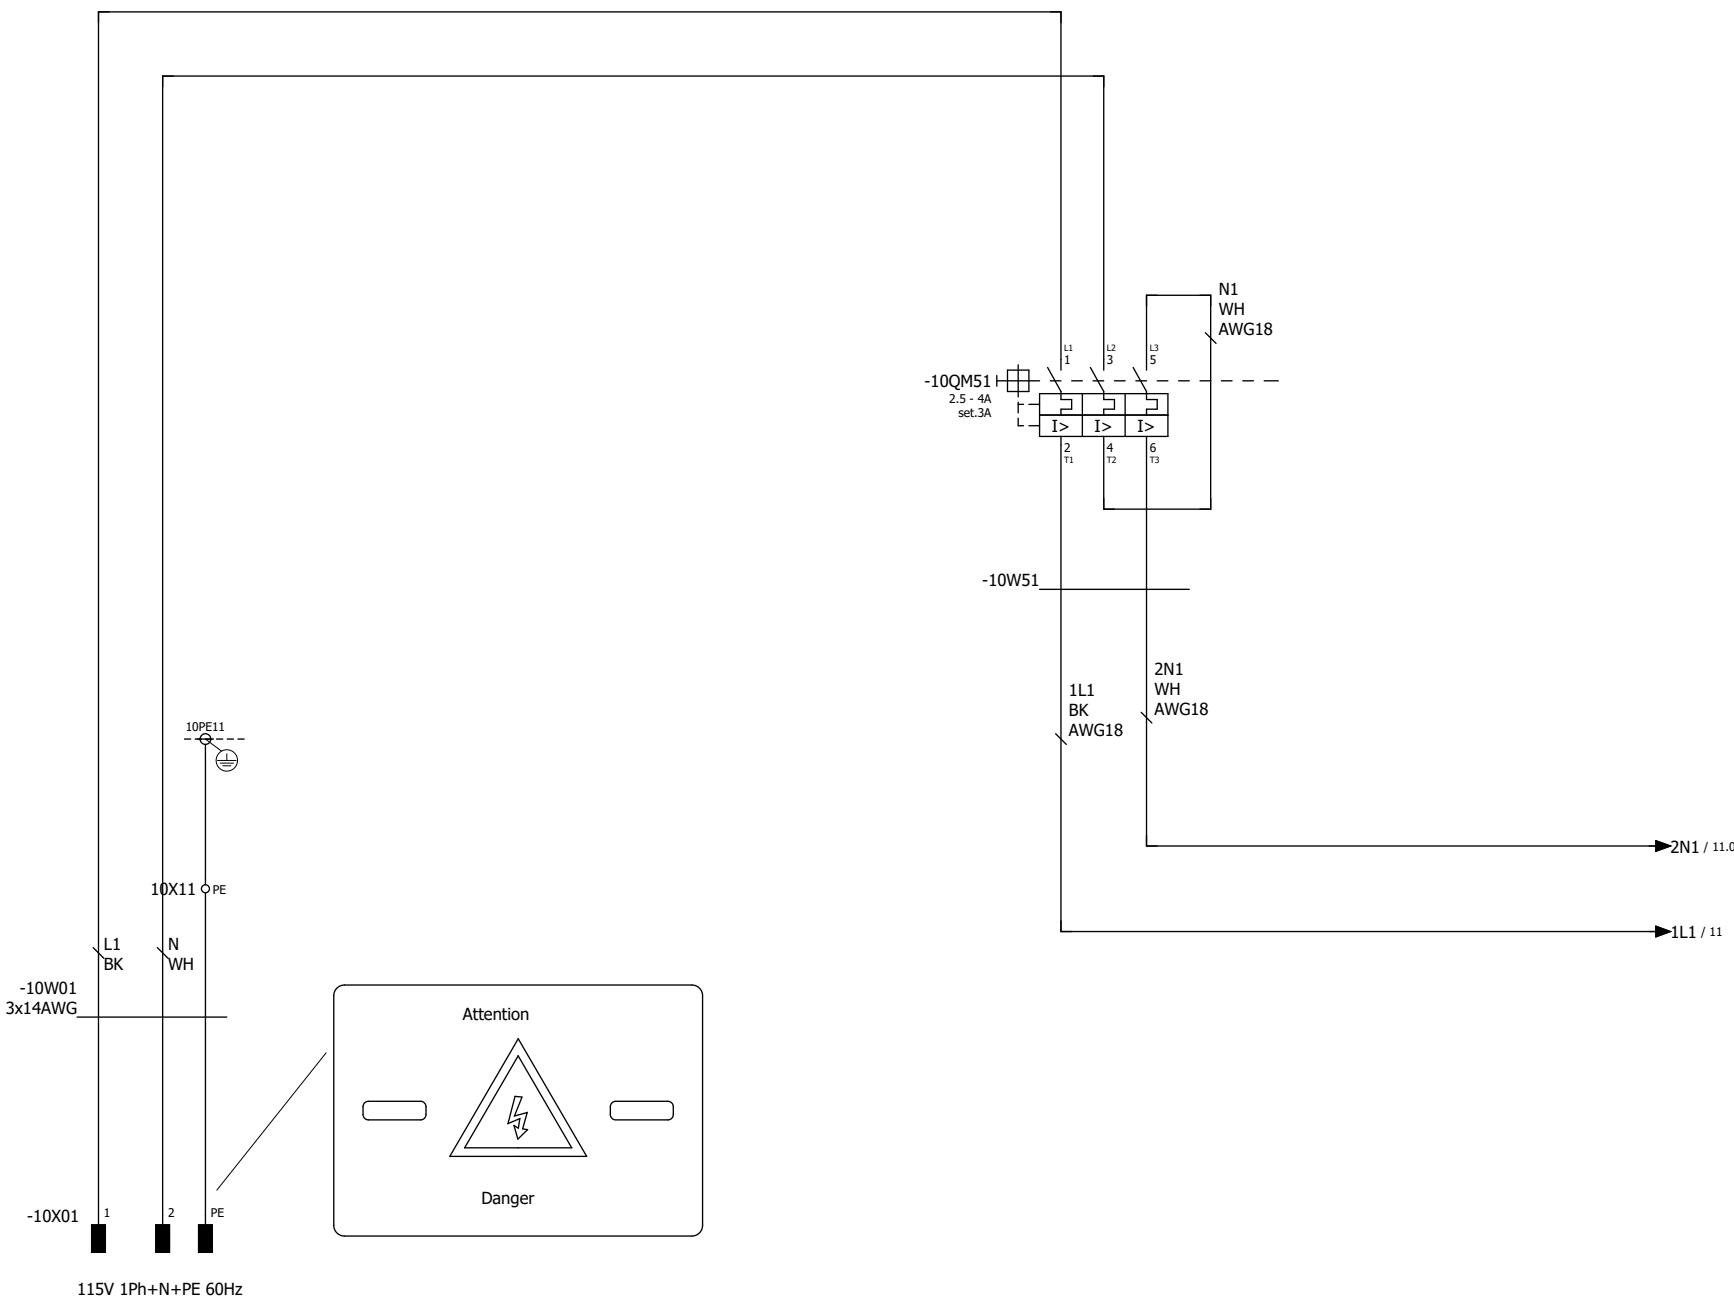

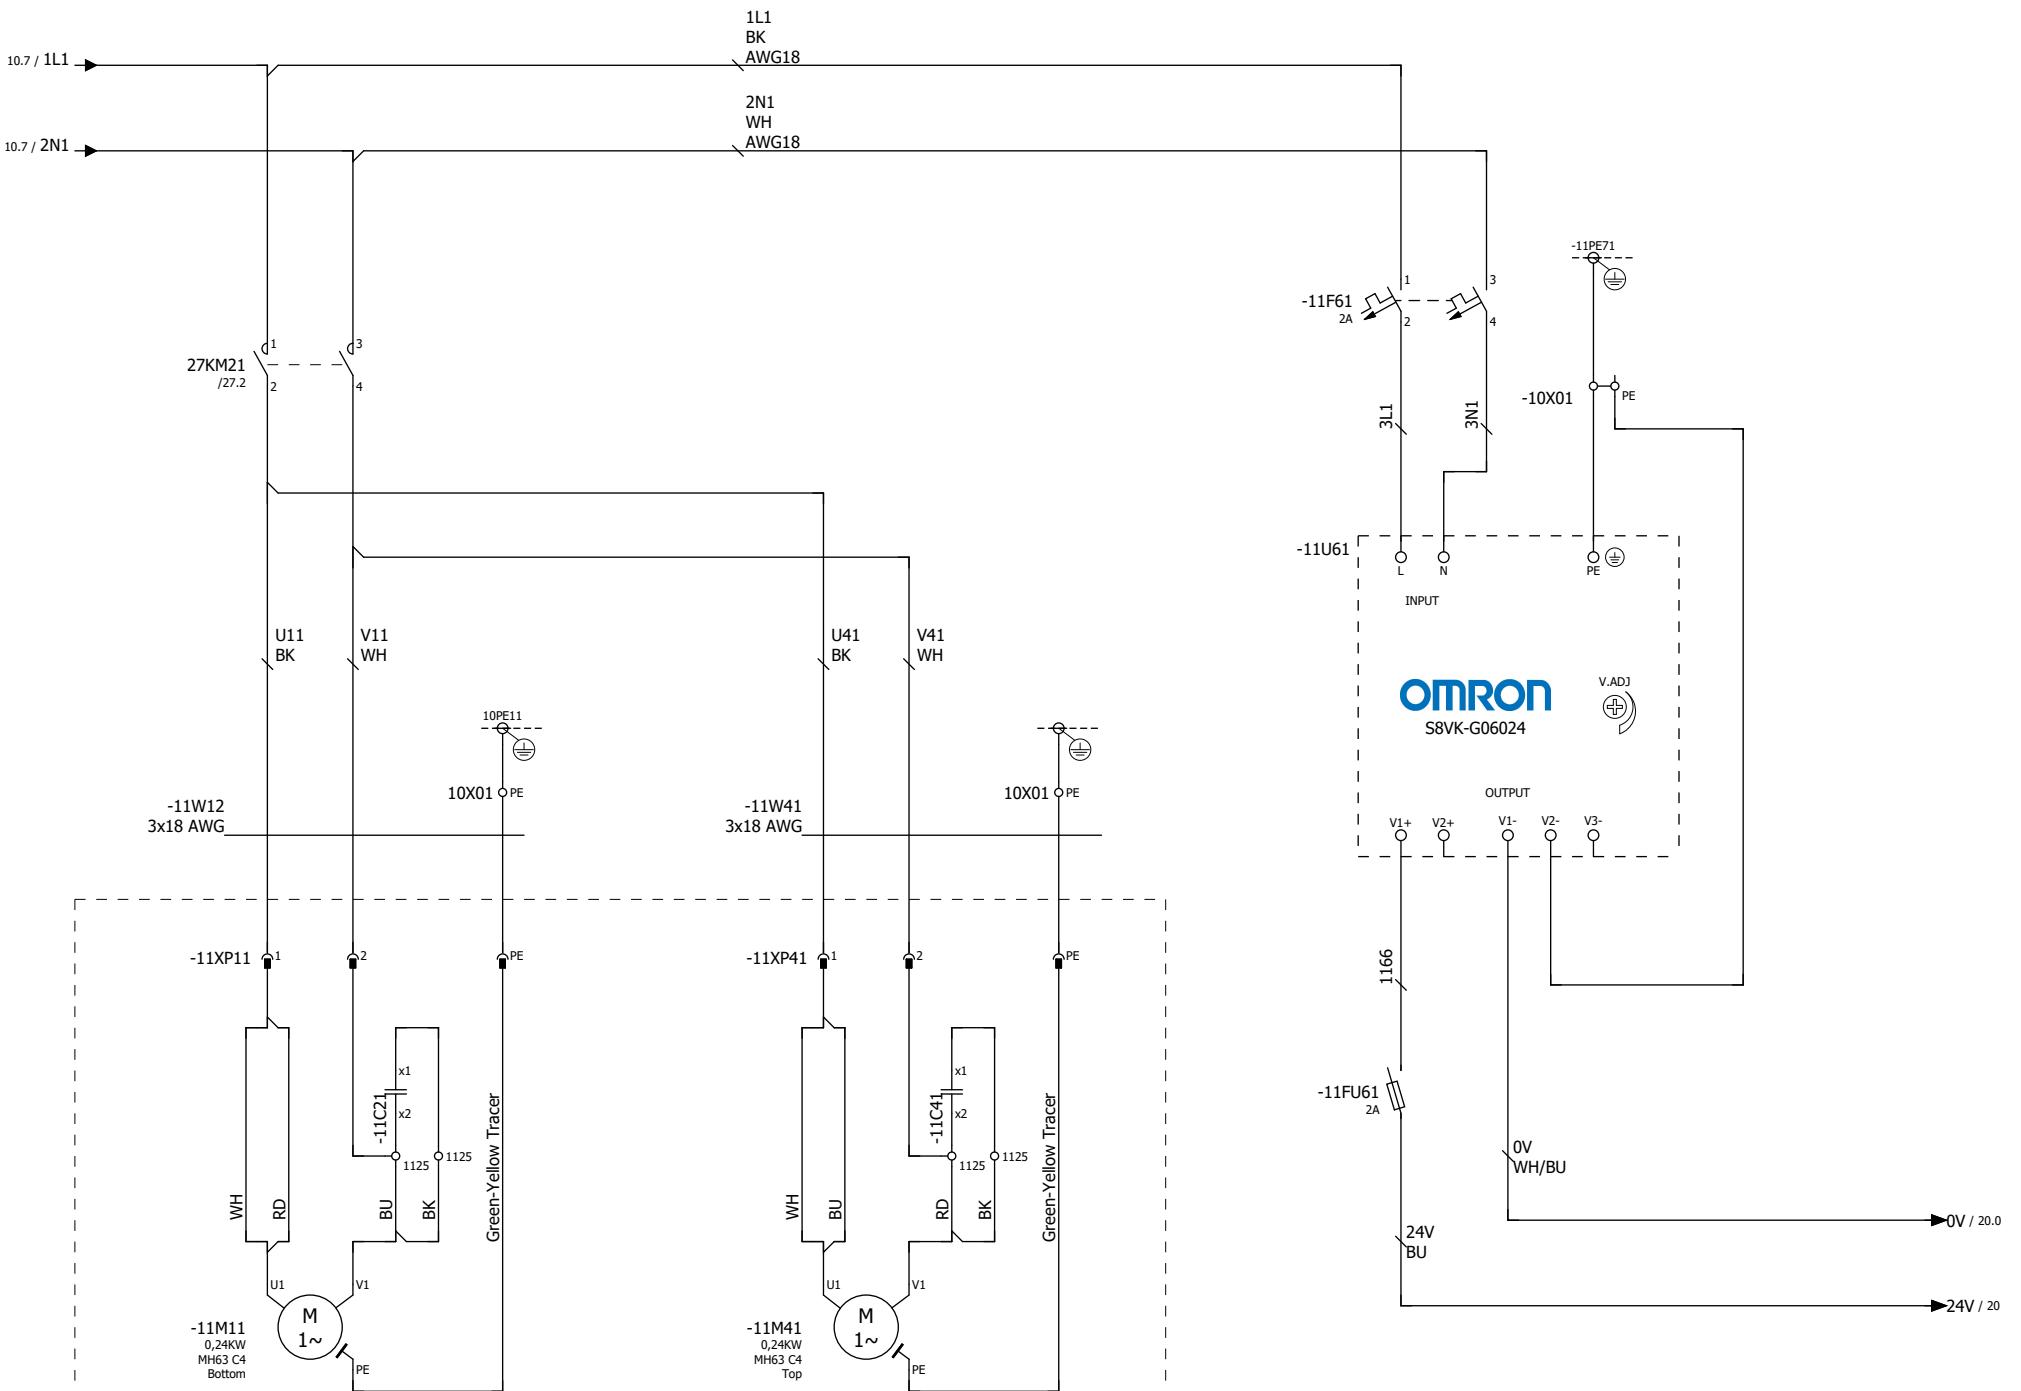

User.		Date Change	24/11/2023	8000r_Fixed Mode_PLC	Transformer - motors	SBB0006631	
Date						= 00	+ P
27/09/2023		Date	24/11/2023			Dec 2023	
Check.	Name	Created for	Norm	Revision	EPLAN sample project	44-0009-2177-3	Pg. 11





Transformer - motors


SBB0006631

20


18 Pgs

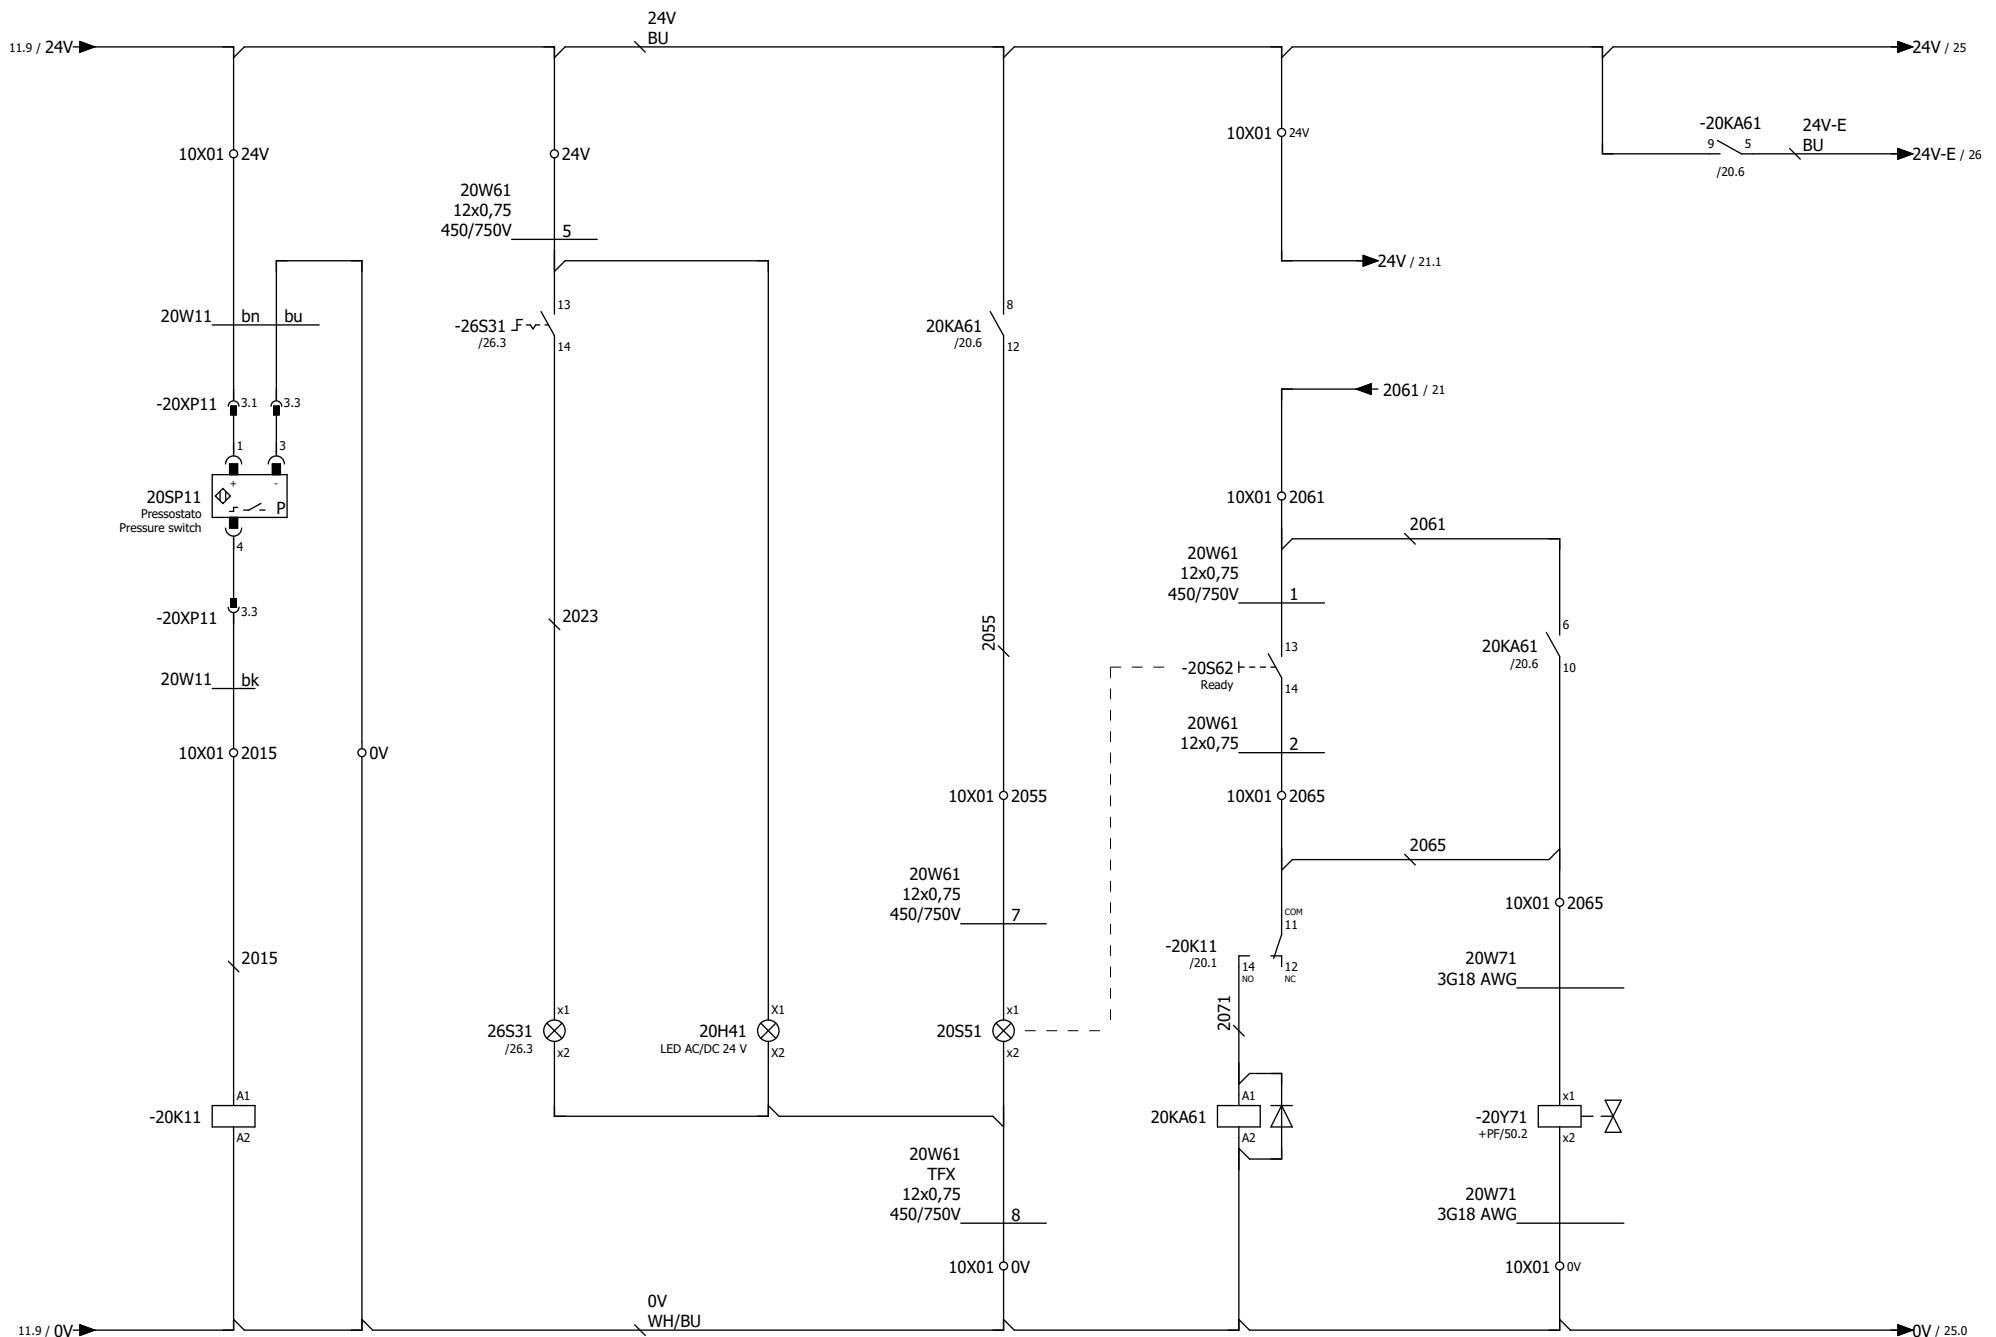

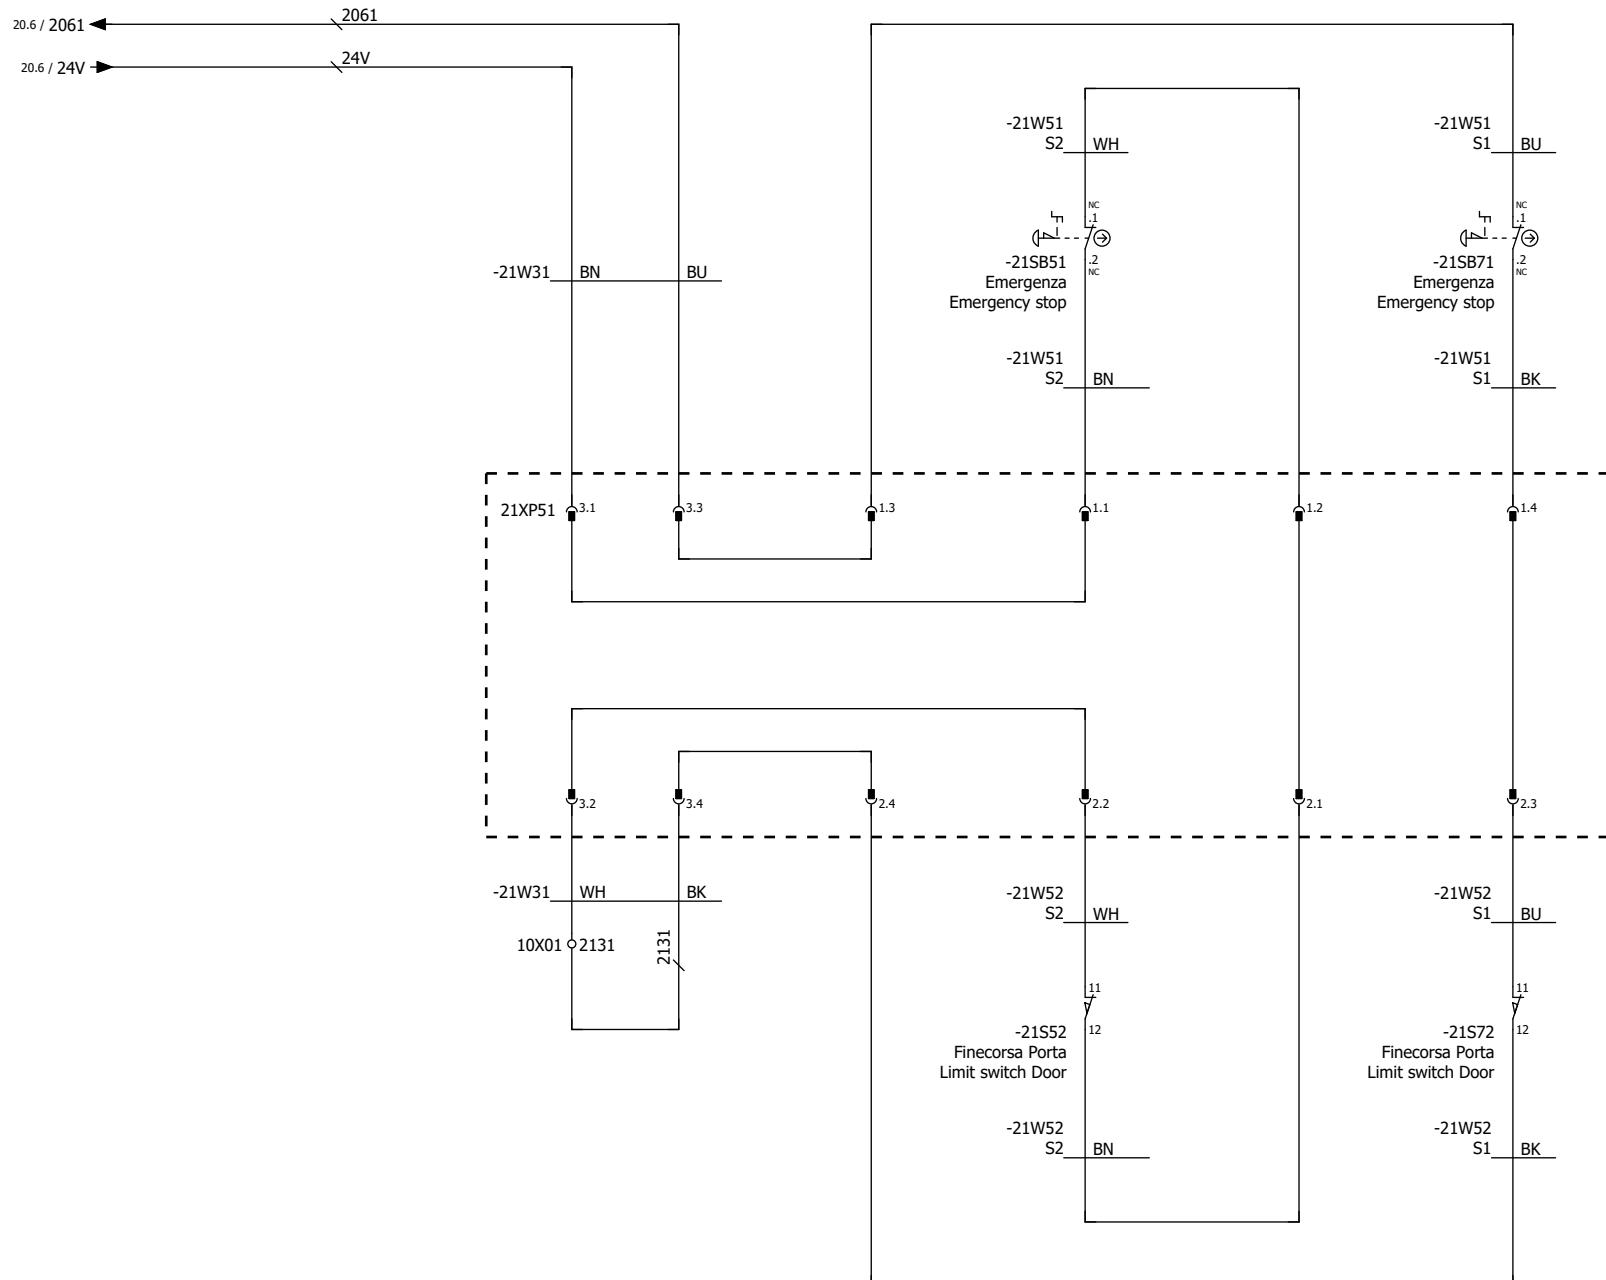


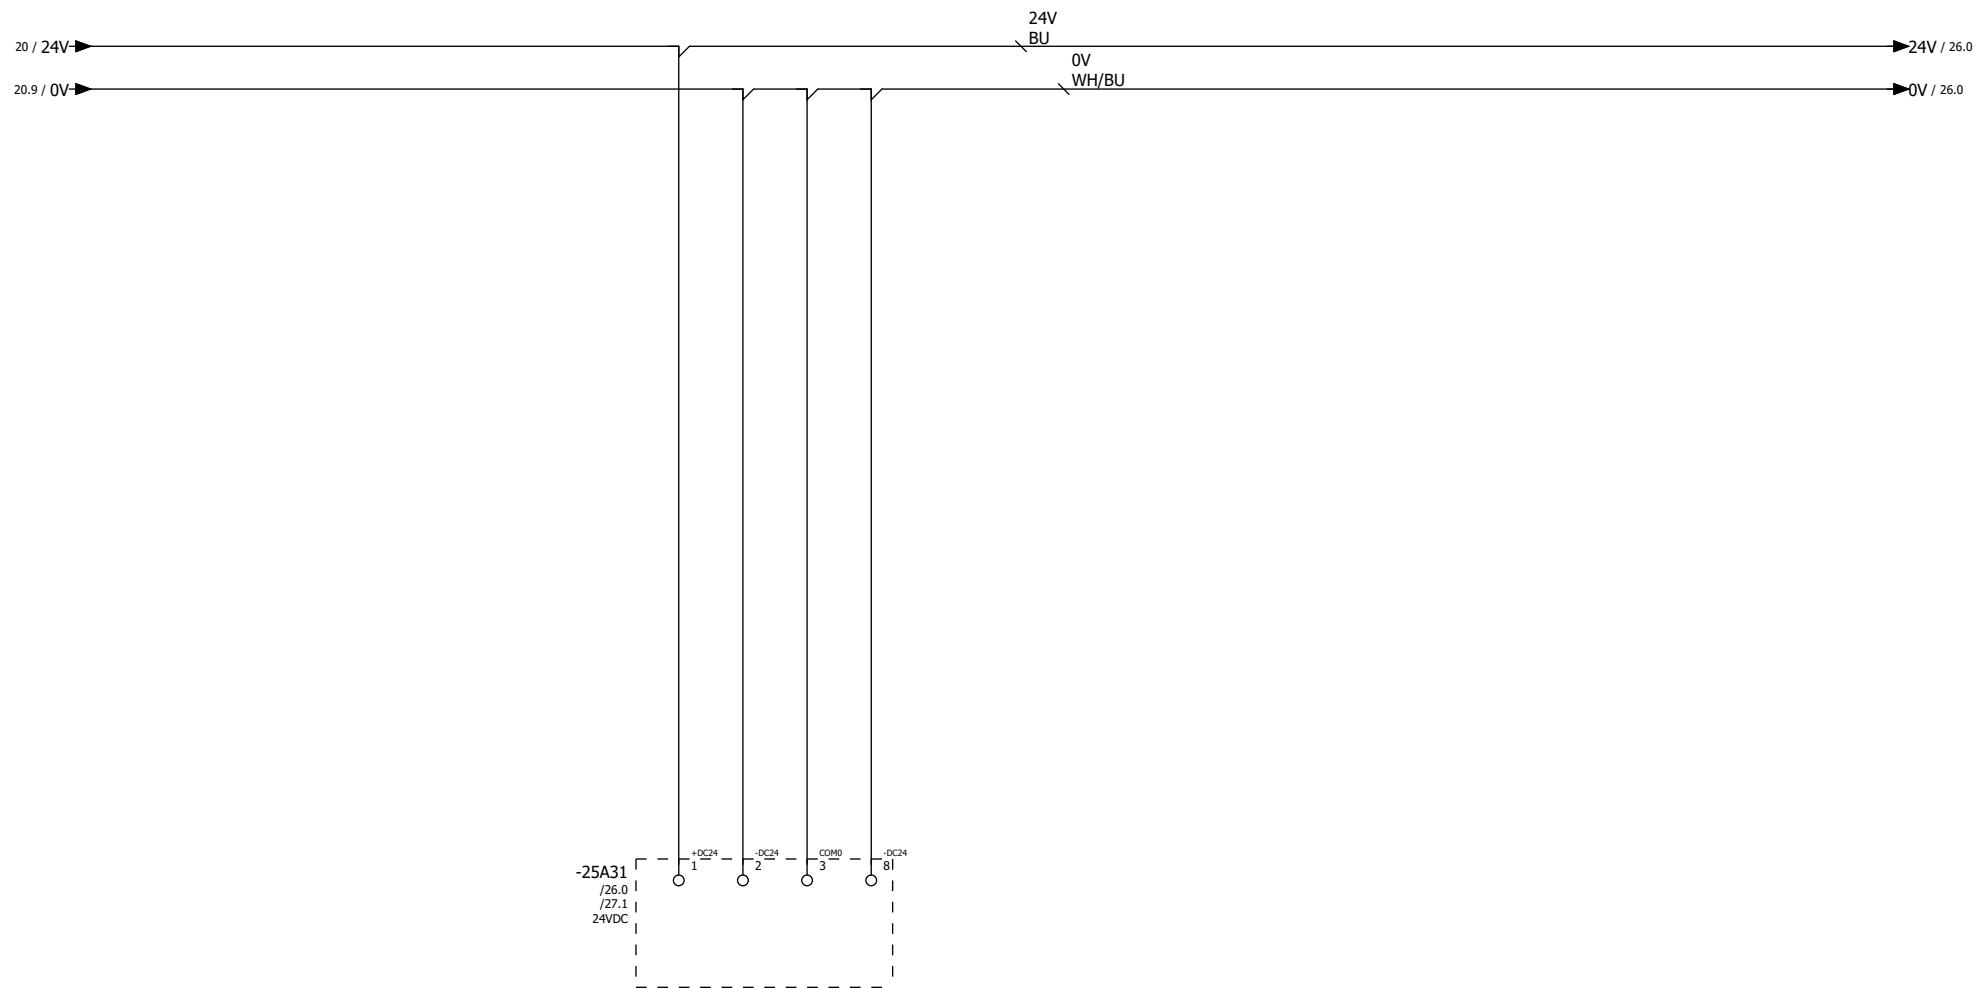


User.		Date Change	24/11/2023	8000r_Fixed Mode_PL�	<b>3M</b>	CPU	SBB0006631		= 00	Dec 2023
Date	27/09/2023	Date	24/11/2023				+ P		44-0009-2177-3	Pg. 25
Check.		Name	Norm				Revision	Created for		18 Pgs
							EPLAN sample project			

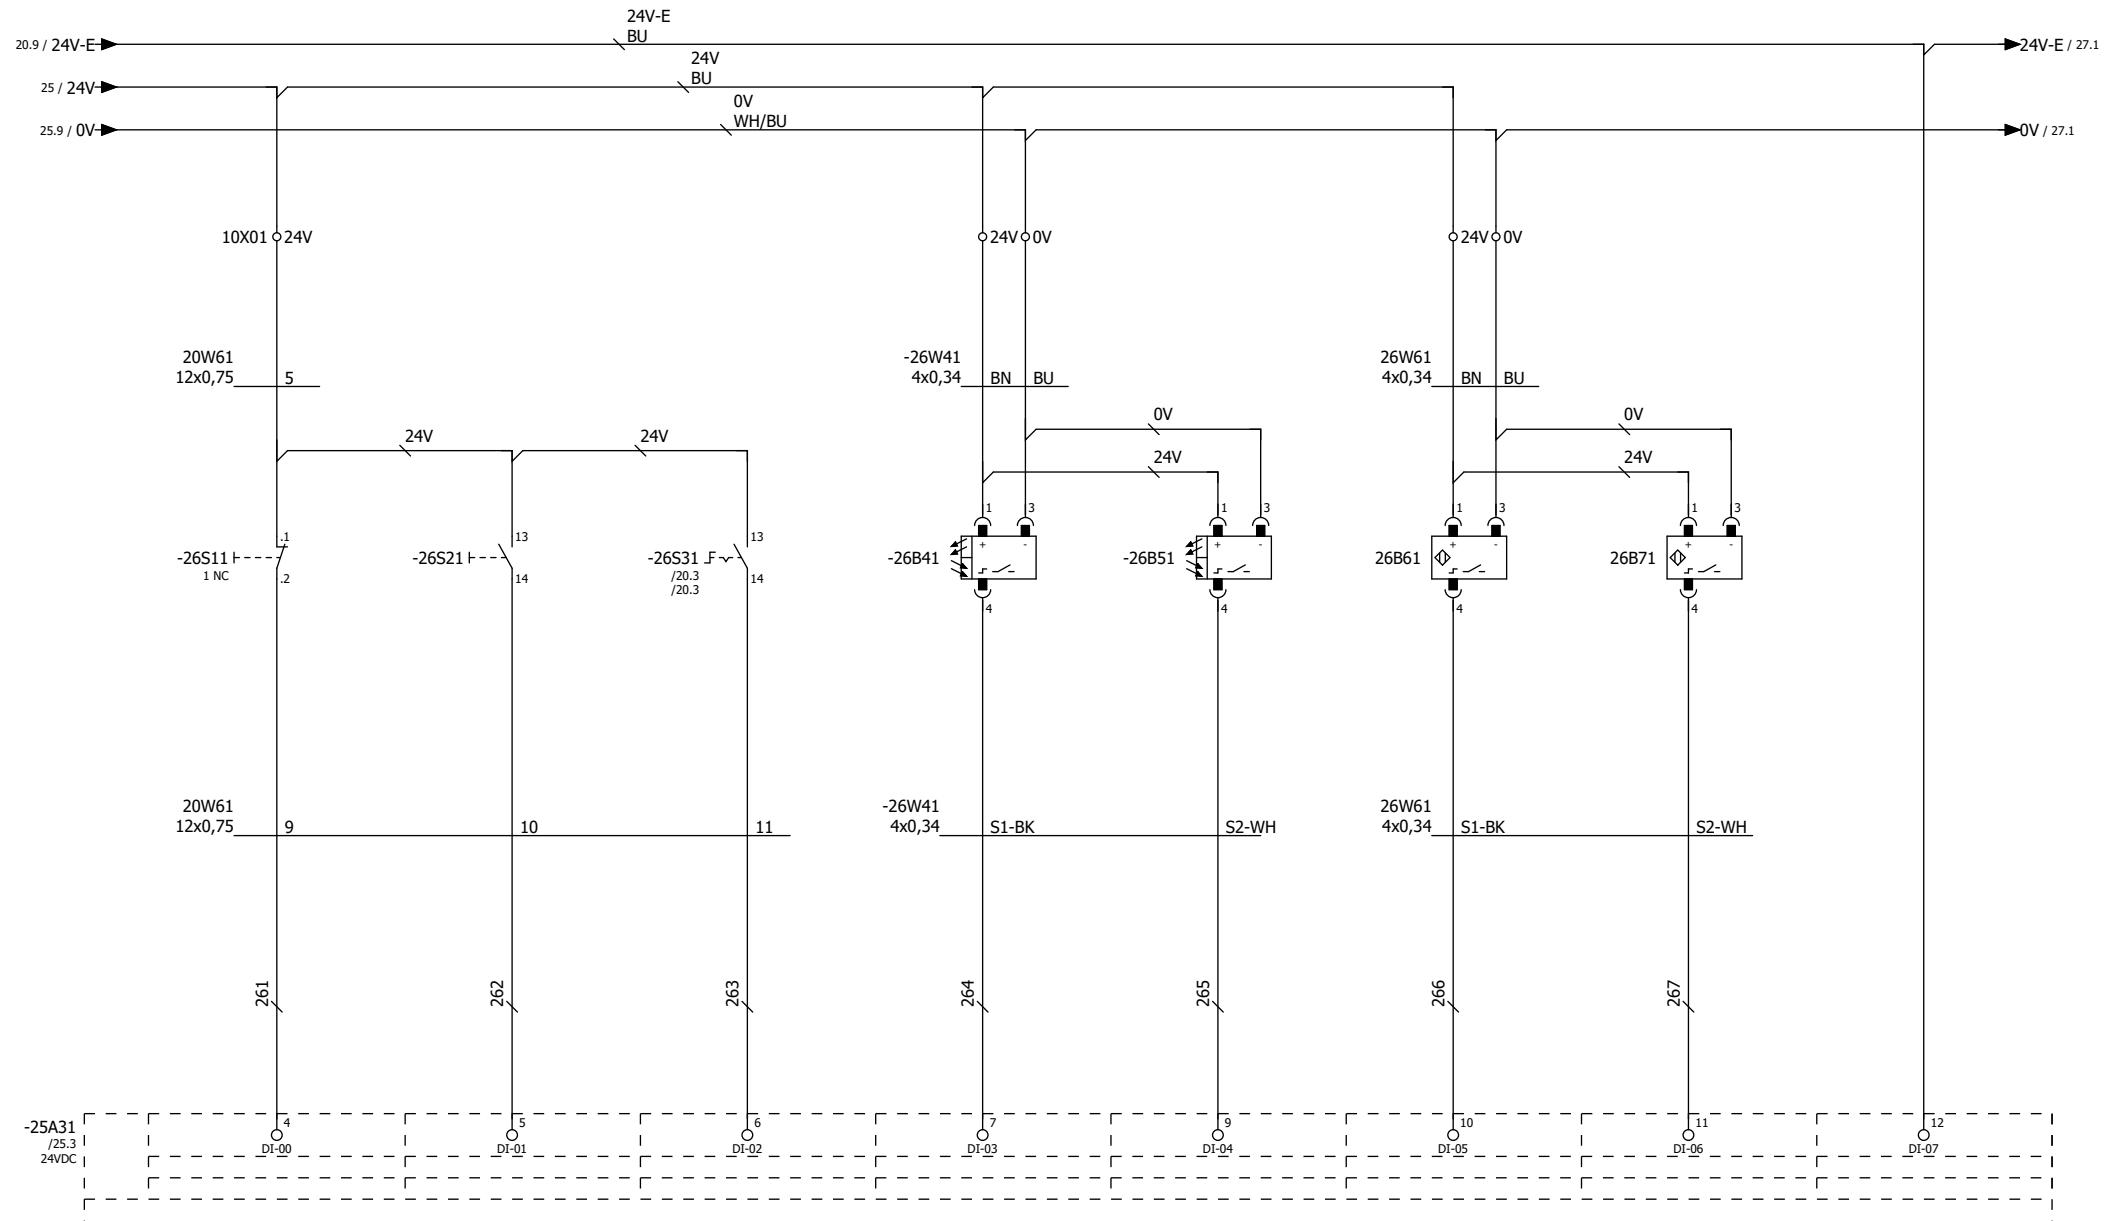Stop ciclo  
Cycle stopStart ciclo  
Cycle startFormato fisso  
Fixed modeFotocellula uscita scatola  
End cycle photocellFotocellula formato fisso  
Fixed mode photocellProximity salita testata  
Upper group ascent proximityProximity chiusura guide  
Close guides proximityEmergenza  
Emergency stop



User.		Date Change	24/11/2023	8000r_Fixed Mode_PLC	3M	INPUTS	SBB0006631		= 00	Dec 2023
Date									+ P	
Check.	Name	Norm					EPLAN sample project			
			Revision							
27/09/2023	Date	24/11/2023								
	Name	Norm								

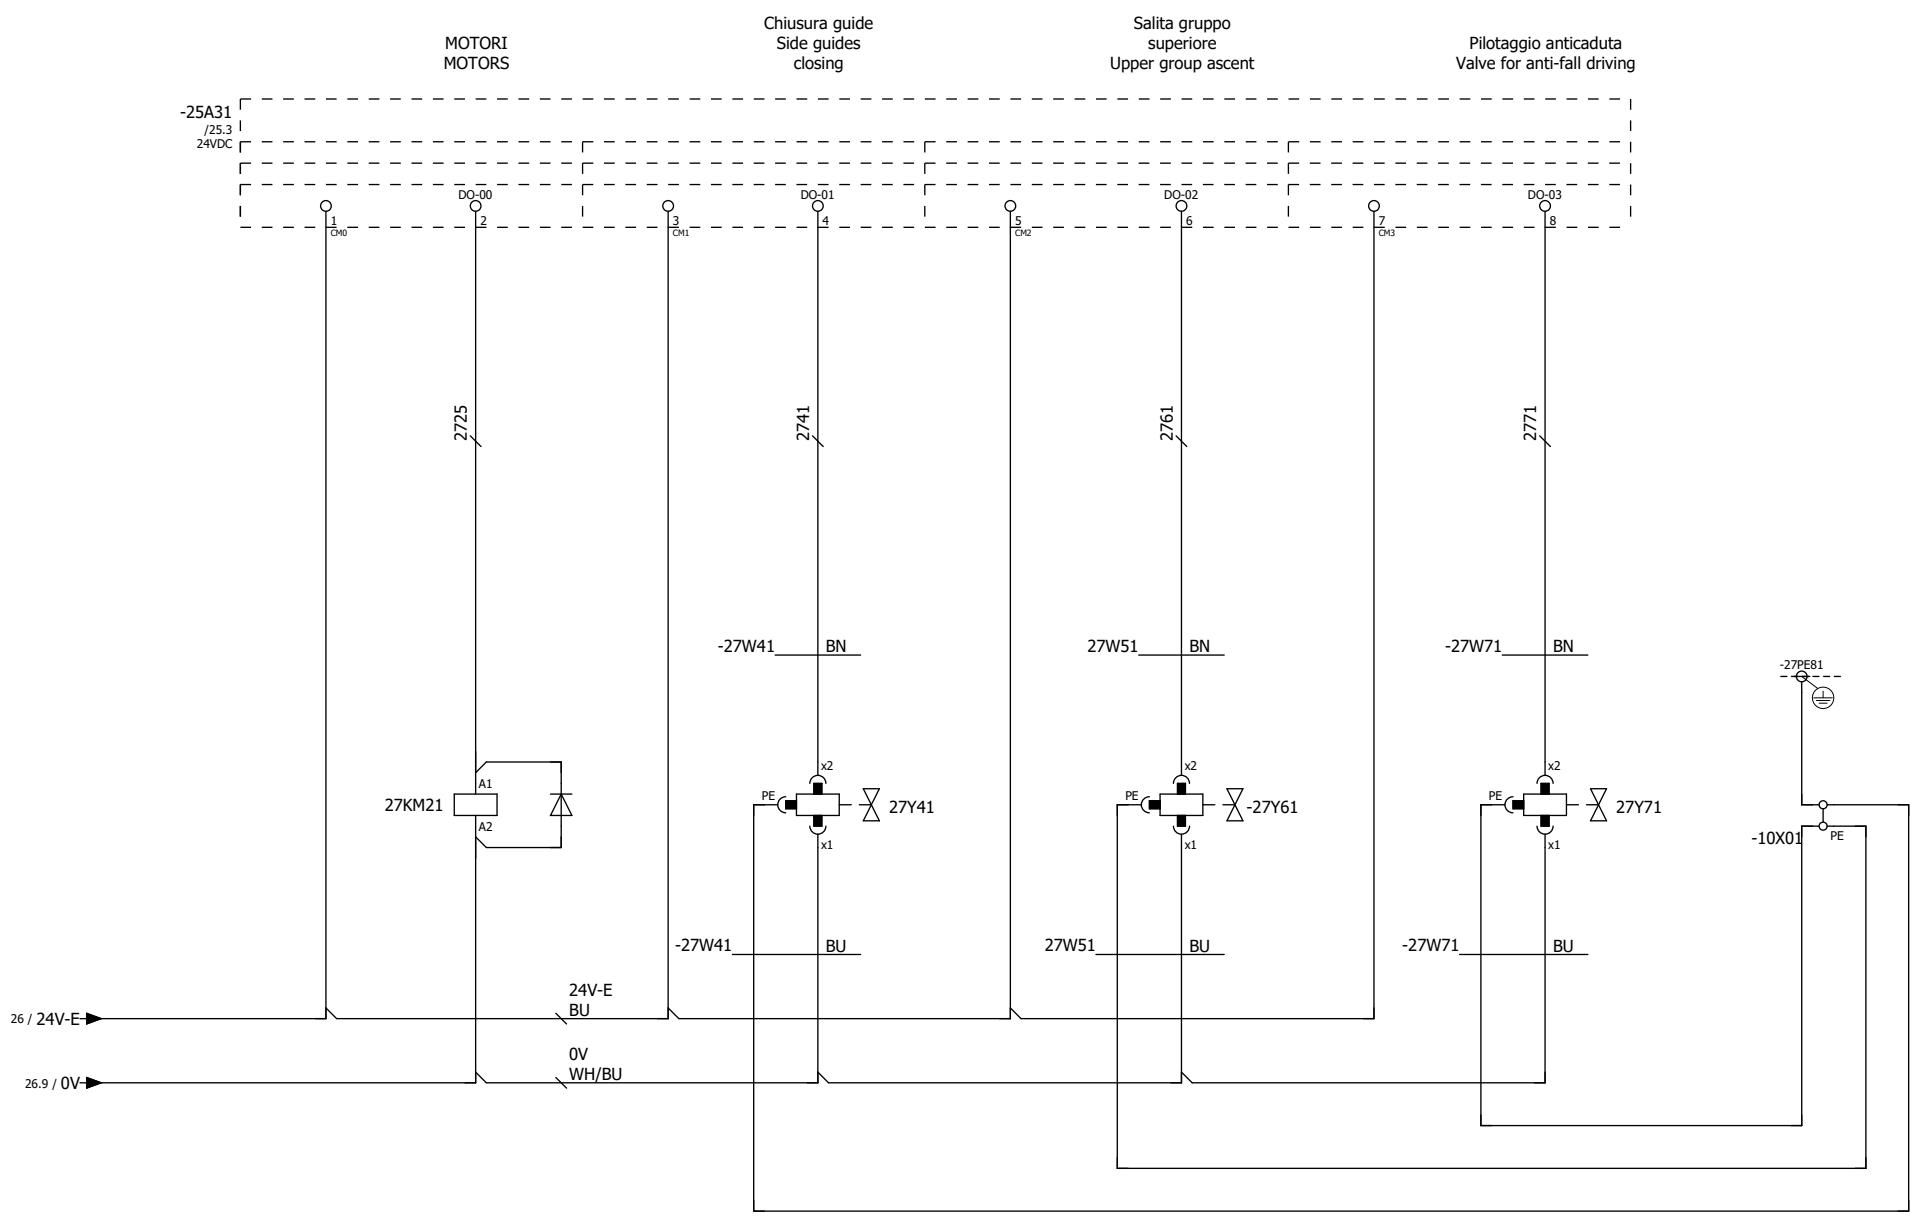

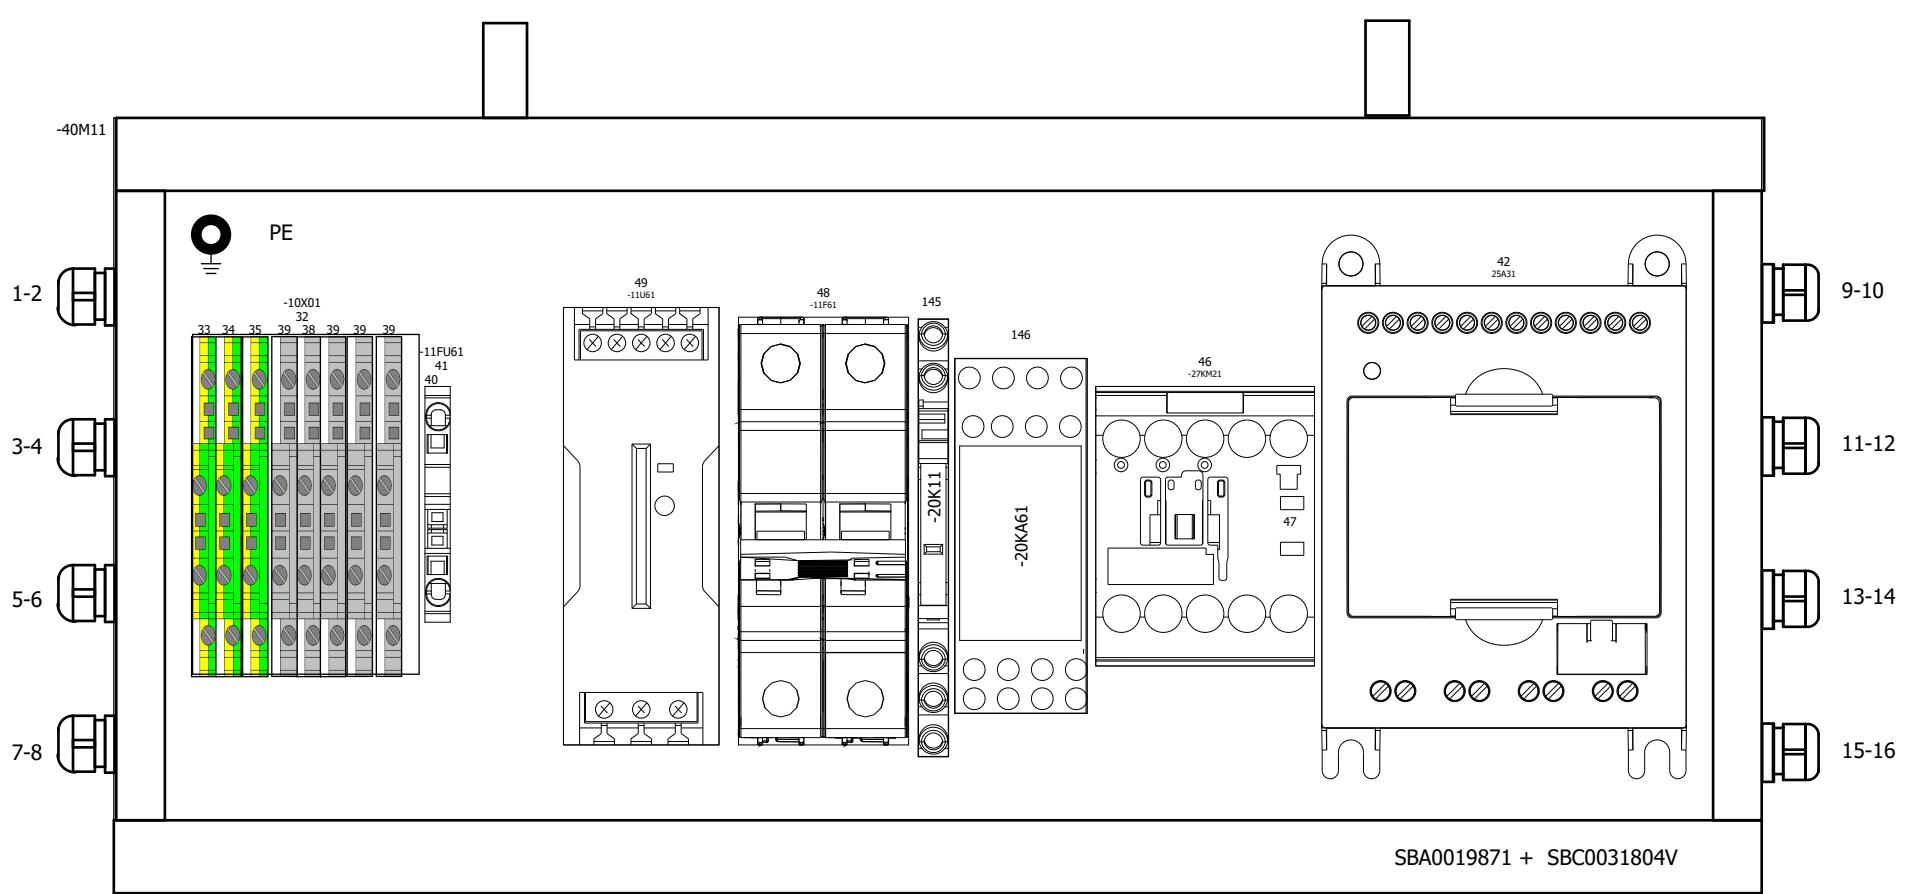



- 1 - TAPPO
- 2 - TAPPO
- 3 - Cavo 11W12 M11 S3802225ZZZ CAVO USA TRIPOLARE L=1,70 MT
- 4 - Cavo 11W41 M41 S3802225ZZZ CAVO USA TRIPOLARE L=2,30 MT
- 5 - Cavo 20W11 20SP11 SCC0002003 PRESA M8 DIRITTA 3 poli L=1,90 MT
- 6 - Cavo 21W31 SCC0002484 Presa M12 90° 4p,3m GIALLO L=1,20 MT.
- 7 - Cavo 20W61 26S31-20H41-20S62-20S11-20S21 CAVO 12x0,75 L=2,60 MT.
- 8 - Cavo 26W61 26B61-26B71 SCC0003379 PRESA M12 DIRITTA 4 poli L=1,00 MT.
- 9 - Cavo 26W41 26B41-26B51 SCC0003379 PRESA M12 DIRITTA 4 poli L=1,00 MT
- 10 - Cavo 20W71 20Y71 SCB0001384 MP1 + LED + VDR 24V CAVO L=1,90 MT.
- 11 - Cavo 27W51 27Y61 SCB0001477 MP1 + LED + VDR 24V CAVO L=2,80 MT.
- 12 - Cavo 27W41 27Y41 SCB0001477 MP1 + LED + VDR 24V CAVO L=2,80 MT.
- 13 - Cavo 27W71 27Y71 SCB0001477 MP1 + LED + VDR 24V CAVO L=2,80 MT.
- 14 - Cavo 10W51 da interruttore cablato
- 15 - TAPPO
- 16 - TAPPO

User.		Date Change	24/11/2023	8000r_Fixed Mode_PLC		Layout box	SBB0006631		= 00	Dec 2023
Date	27/09/2023	Date	24/11/2023				+ P			
Check.		Name	Norm				Revision	Created for		
							EPLAN sample project		44-0009-2177-3	

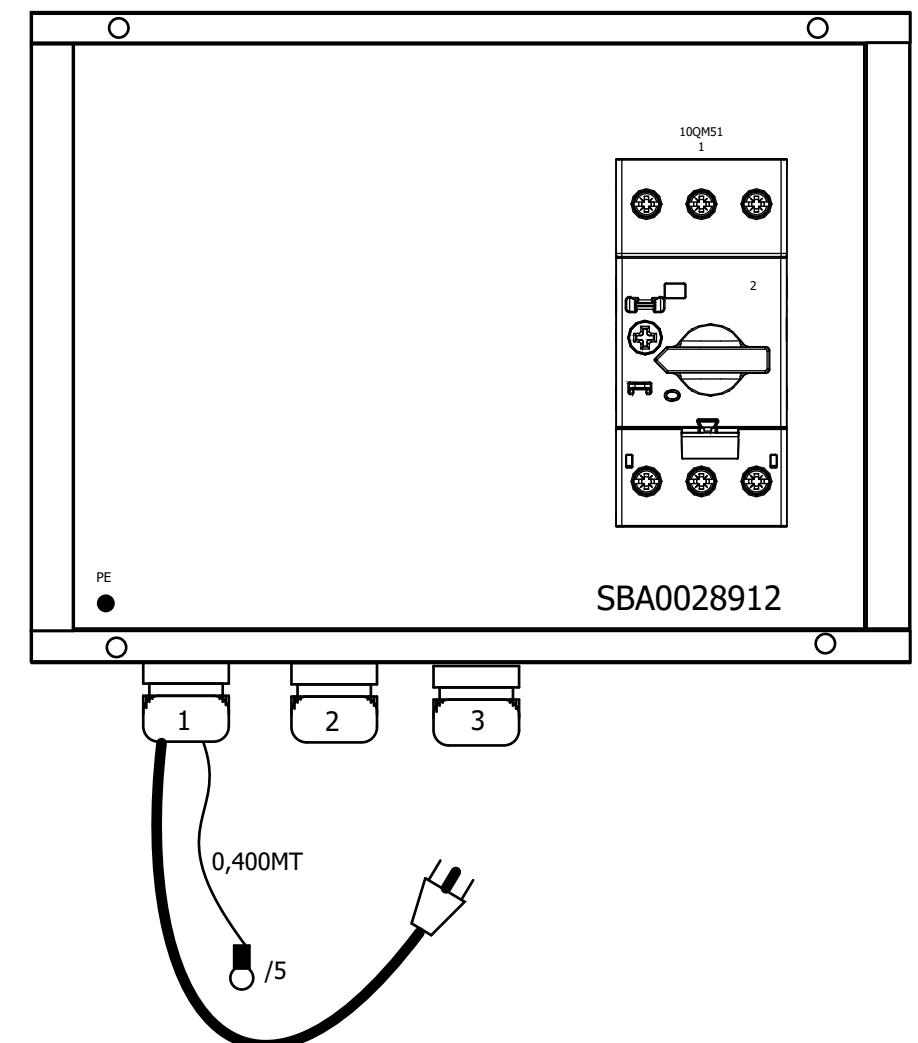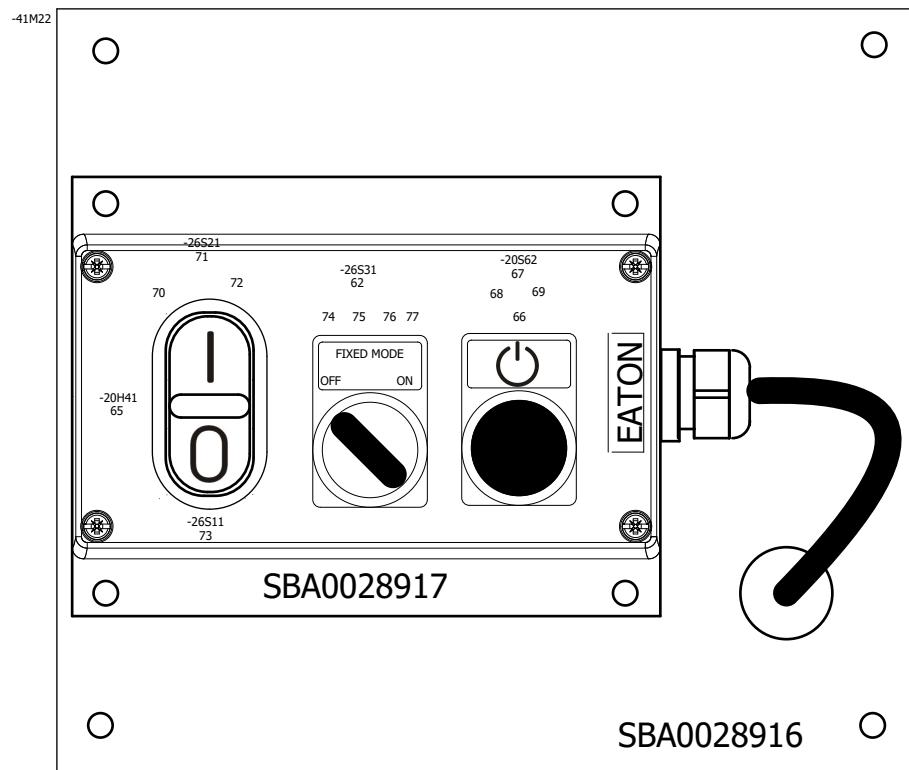


- 1 - Cavo 10W01 Alimentazione S3800733ZZZ
- 2 - Cavo 10W51 CAVO USA TRIPOLARE L=1,90 MT. S3802225ZZZ
- 3 - Cavo 20W61 da quadro cablato

User.		Date Change	24/11/2023	8000r_Fixed Mode_PLA	<b>3M</b>	Layout switch	SBB0006631		= 00	
Date	27/09/2023	Date	24/11/2023				+ P		Dec 2023	
Check.		Name	Norm				EPLAN sample project		44-0009-2177-3	Pg. 41
		Revision	Created for							18 Pgs

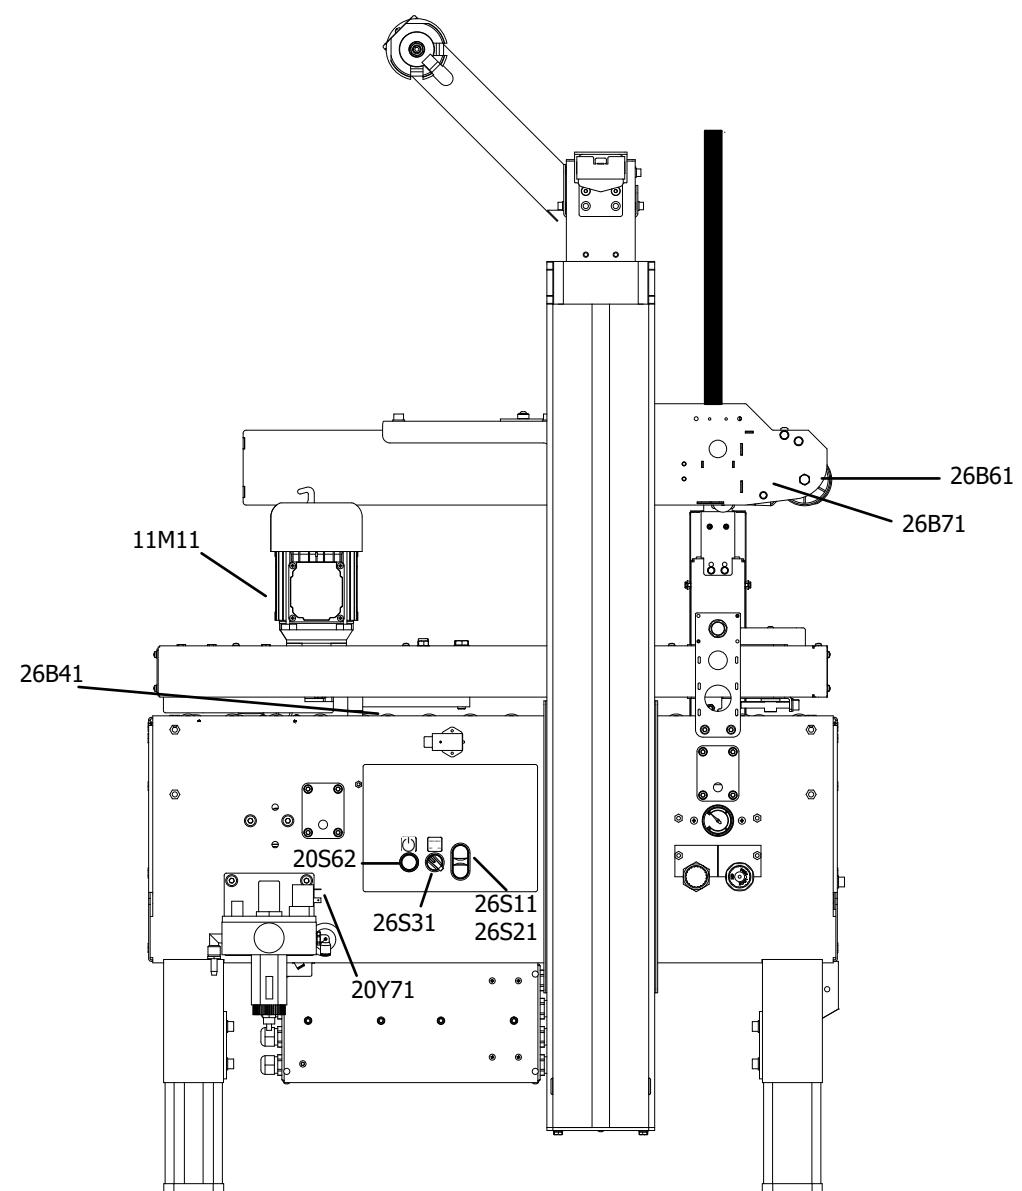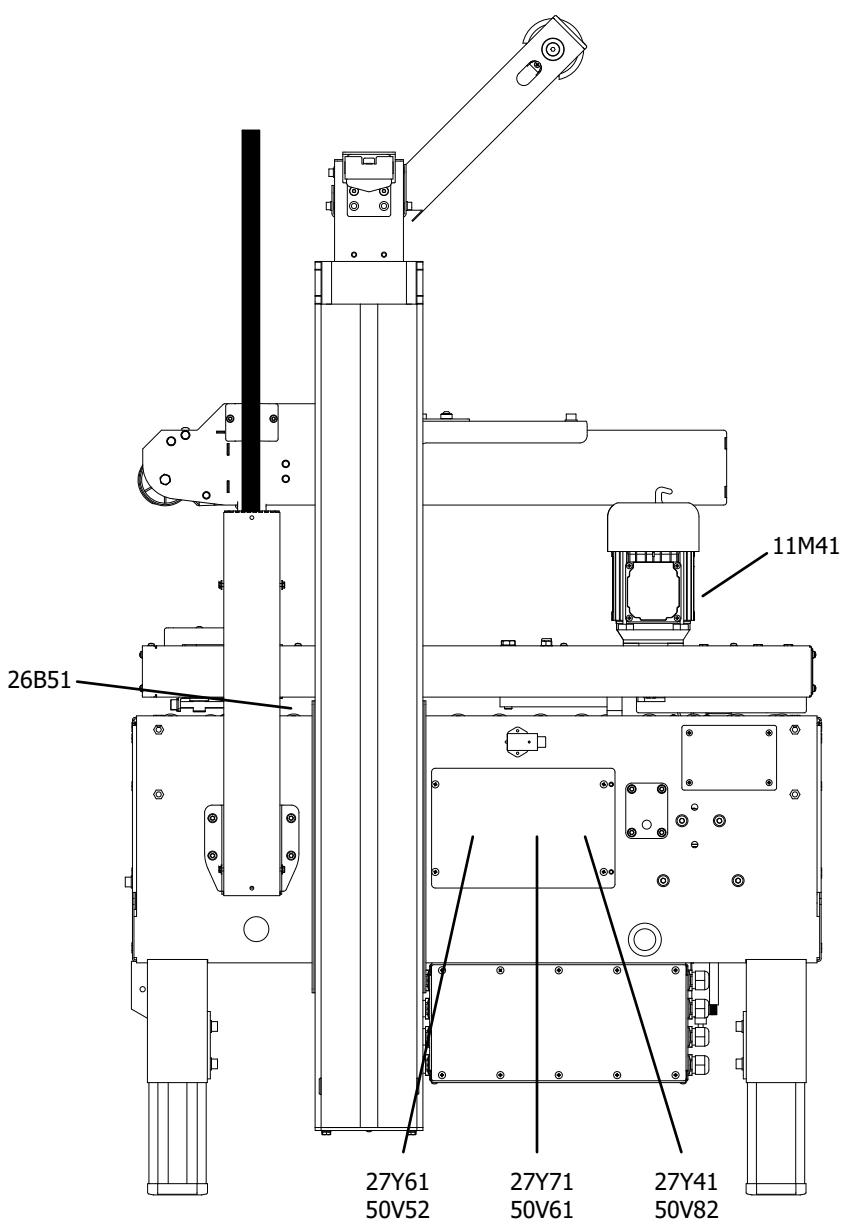


3M-Matic™ 8000r - Type 223487  
Page 59

User.		Date Change	24/11/2023	8000r_Fixed Mode_PLA	Revision	Created for	SBB0006631	
Date	27/09/2023	Date	24/11/2023				= 00	
Check.		Name	Norm				+ P	Dec 2023
								44-0009-2177-3

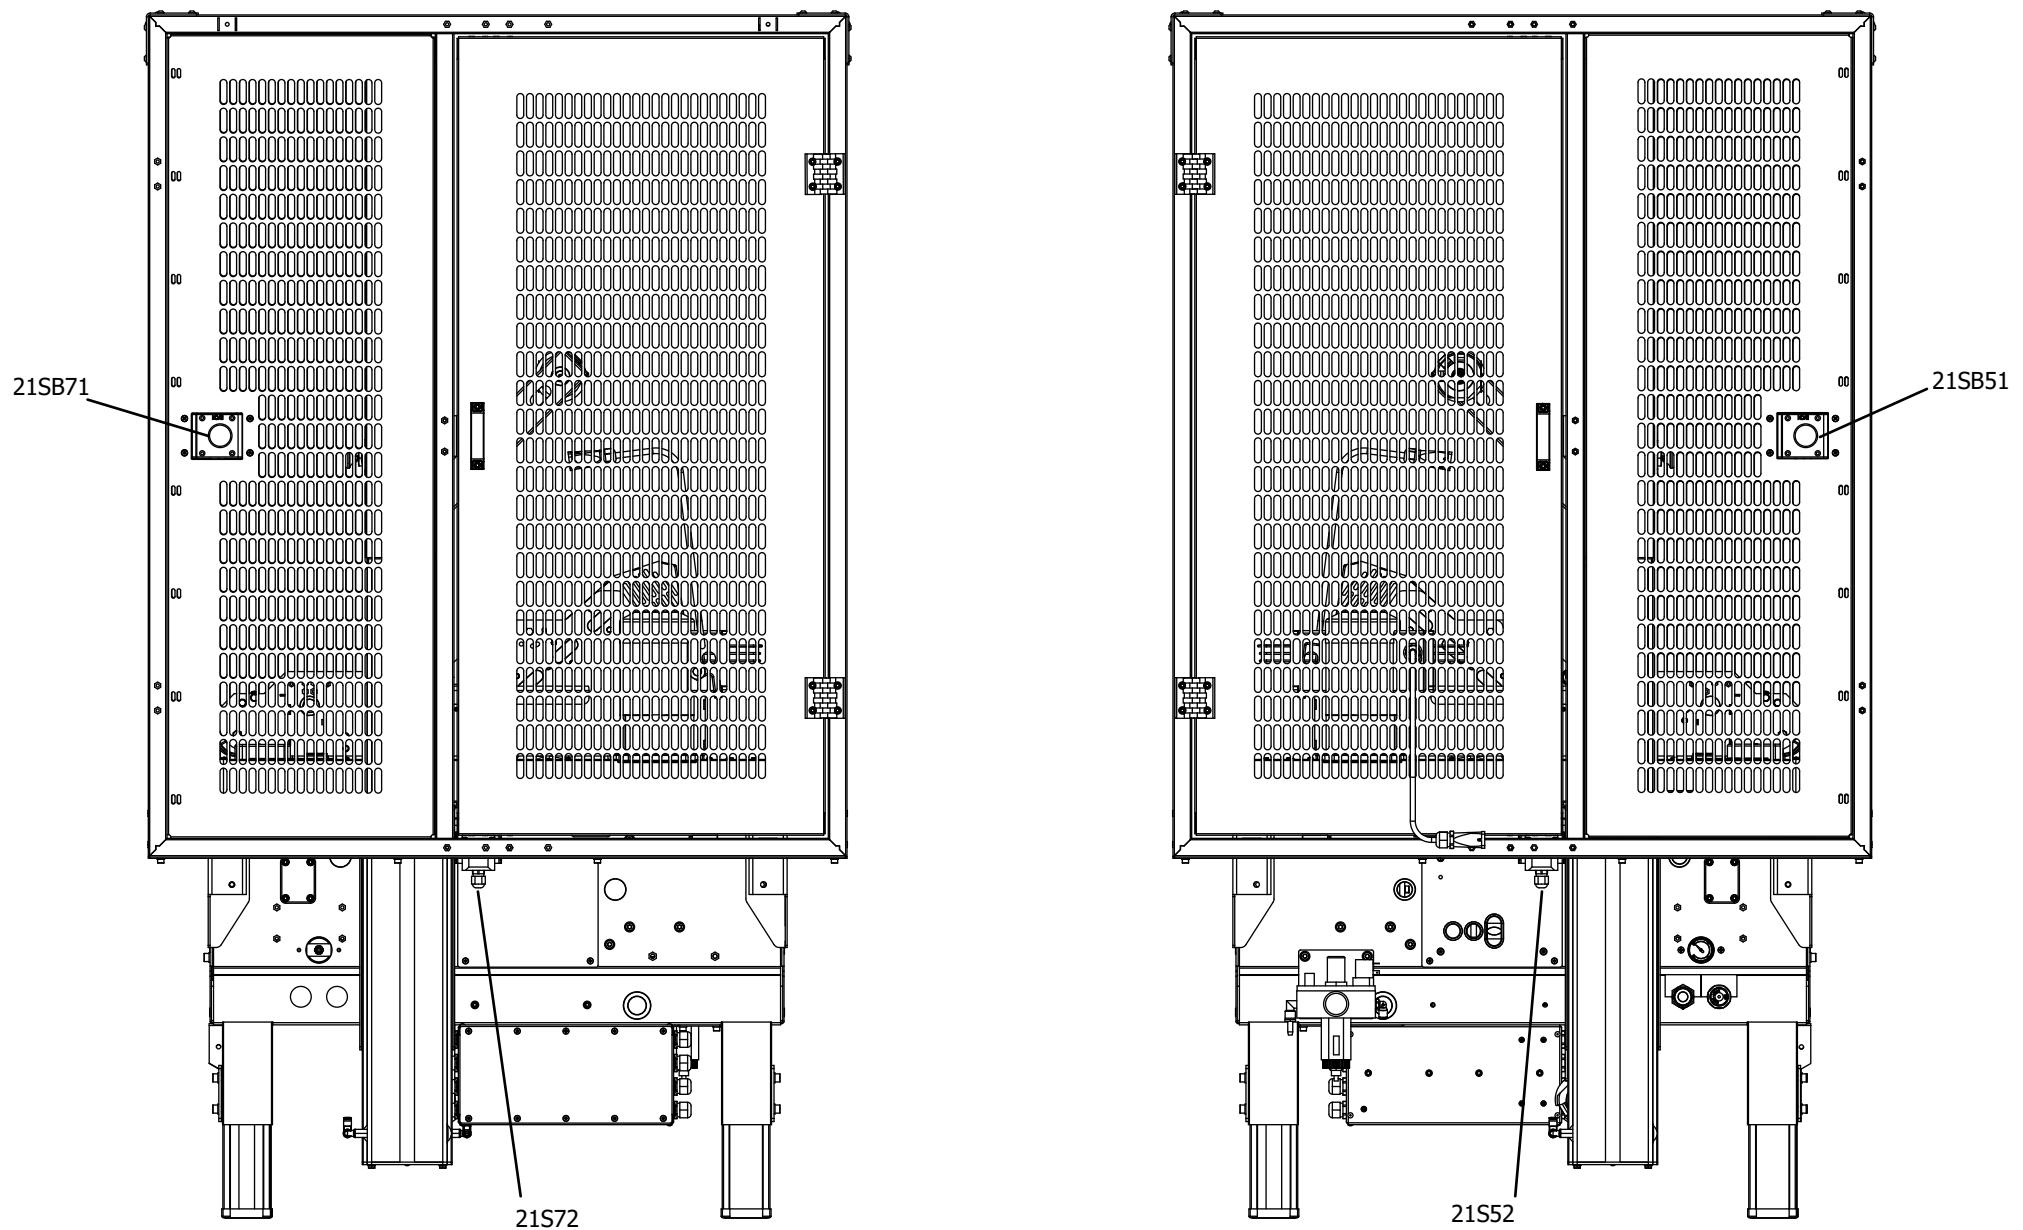

User.		Date Change	24/11/2023	8000r_Fixed Mode_PLC	3M	Layout 8000r	SBB0006631	= 00
Date	27/09/2023	Date	24/11/2023				+ P	Dec 2023
Check.		Name	Norm				EPLAN sample project	44-0009-2177-3
		Revision	Created for				Pg.	61



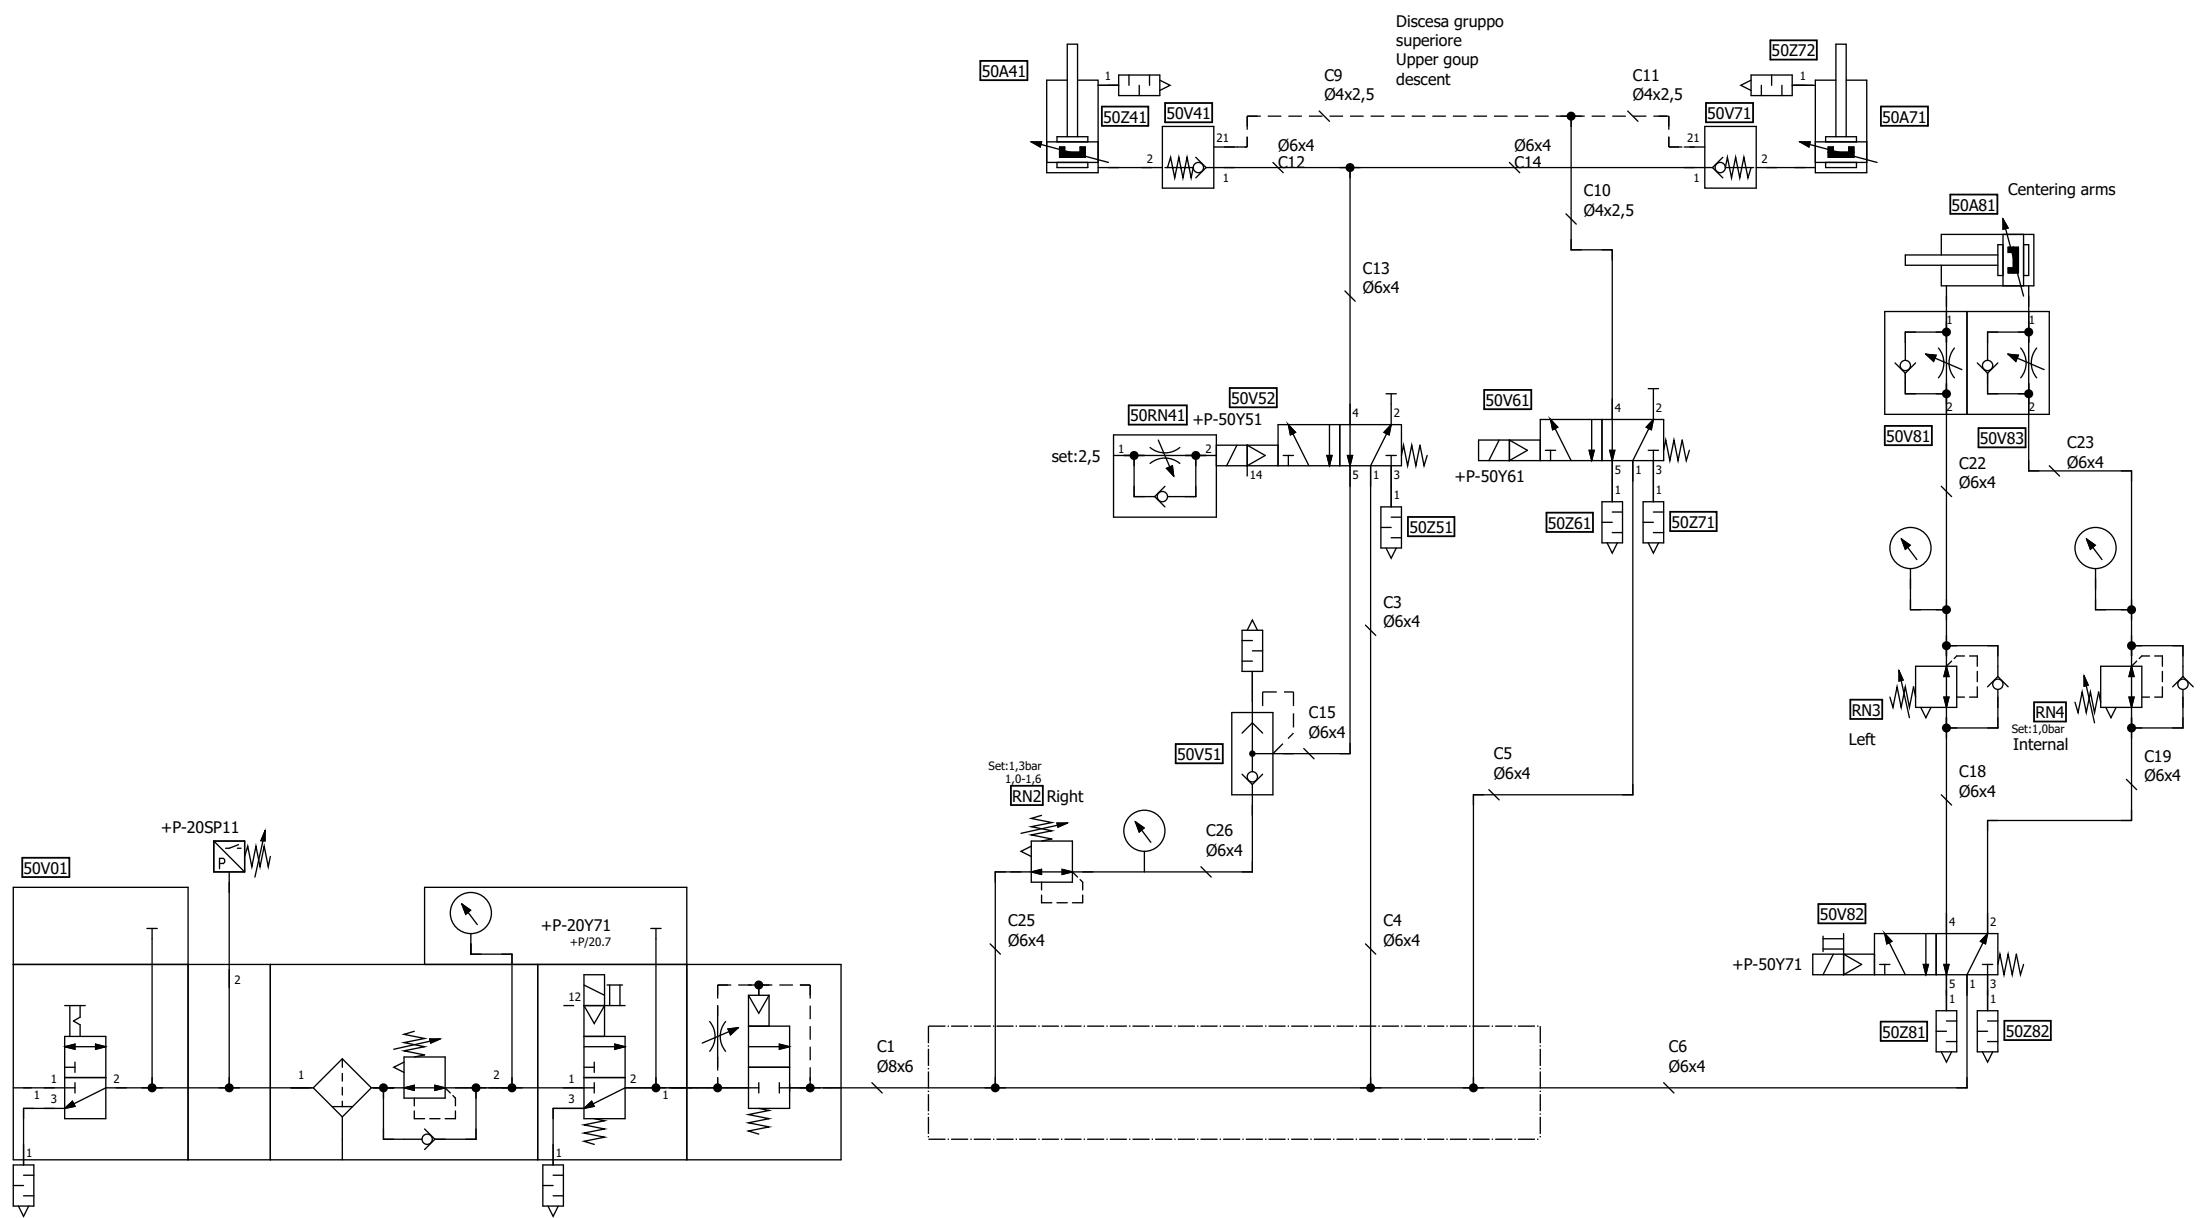

User.		Date Change	24/11/2023	8000r_Fixed Mode_PLC	PNEUMATIC CIRCUIT	SBB0006631	
Date	27/09/2023	Date	24/11/2023			= 00	Dec 2023
Check.	Name	Norm				+ PF	44-0009-2177-3
	Revision	Created for				Pg.	50

## 16. Technical Documentation and Information *(continued)*

### 16.2 Spare Parts Order

#### Replacement Parts Ordering Information and Service

Refer to the first page of this instruction manual "Replacement Parts and Service Information".

#### Order parts by quoting the following information:

(Refer to the Identification Plate on the Machine)

- Machine Model
- Serial Number
- Figure Number
- Position
- 3M Part Number (11 Digits)
- Description
- Quantity

Refer to Manual 2 or 3 for recommended taping head spare parts.

#### ***Important!***

The machine is constantly revised and improved by our designers. The spare parts catalogue is also periodically updated. It is very important that all the orders of spare parts make reference to the serial number of the machine (located on the identification plate on the machine).

The manufacturer reserves the right to modify the machine at any time without notice.

#### Spare Parts – 8000r-8000r3 Random Case Sealer

It is suggested that the following spare parts be ordered and kept on hand:

*(continued)*

#### 8000r-8000r3

<u>Qty.</u>	<u>3M-Part Number</u>	<u>Description</u>
2	78-8076-5452-6	Belt-Drive w/Hook

#### Spare Parts Kit

8000r - 78-0025-3829-2 - SPK - 8000r w/ AGV 2" TH
8000r3 - 78-0025-3830-0 - SPK - 8000r w/ AGV 3" TH

#### Labels

In the event that any labels are damaged or destroyed, they must be replaced to ensure operator safety. .

#### Tool Kit

A tool kit, part number 78-8137-7543-0, is supplied with the machine as a stock item. The kit contains the necessary open end and hex socket wrenches for use with the metric fasteners on the case sealer. The threading tool, part number 78-8076-4726-4 contained in above kit is also available as a replacement stock item.

#### Replacement Parts Ordering Information and Service

Refer to the first page of this instruction manual "Replacement Parts and Service Information".

## 16. Optional Accessories

### 8000r-8000r3 Random Case Sealer, Type 22300 Frame Assemblies

#### To Order Parts:

1. Refer to first illustration, Frame Assemblies, for the Figure Number that identifies a specific portion of the machine.
2. Refer to the appropriate Figure or Figures to determine the parts required and the parts reference number.
3. The Parts List that follows each illustration, includes the Reference Number, Part Number and Part Description for the parts on that illustration.

**Note** – The complete description has been included for standard fasteners and some commercially available components. This has been done to allow obtaining these standard parts locally, if desired.

4. Order parts by Part Number, Part Description and Quantity required. Also include the model/machine name, machine type, and serial number that are located on the identification plate.
5. Refer to the first page of this instruction manual “**Replacement Parts and Service Information**” for replacement parts ordering information.


**Important** – Not all the parts listed are normally stocked items. Some parts or assemblies shown are available only on special order.

Contact 3M/Tape Dispenser Parts to confirm item availability


#### Options and Accessories

For additional information on the options and accessories listed below - contact your 3M Representative.


Part Number	Option / Accessory
78-8095-4862-7	Infeed/Exit Conveyor Attachment
78-8069-3926-6	Low Tape Sensor Kit
78-8069-3983-7	Caster Kit

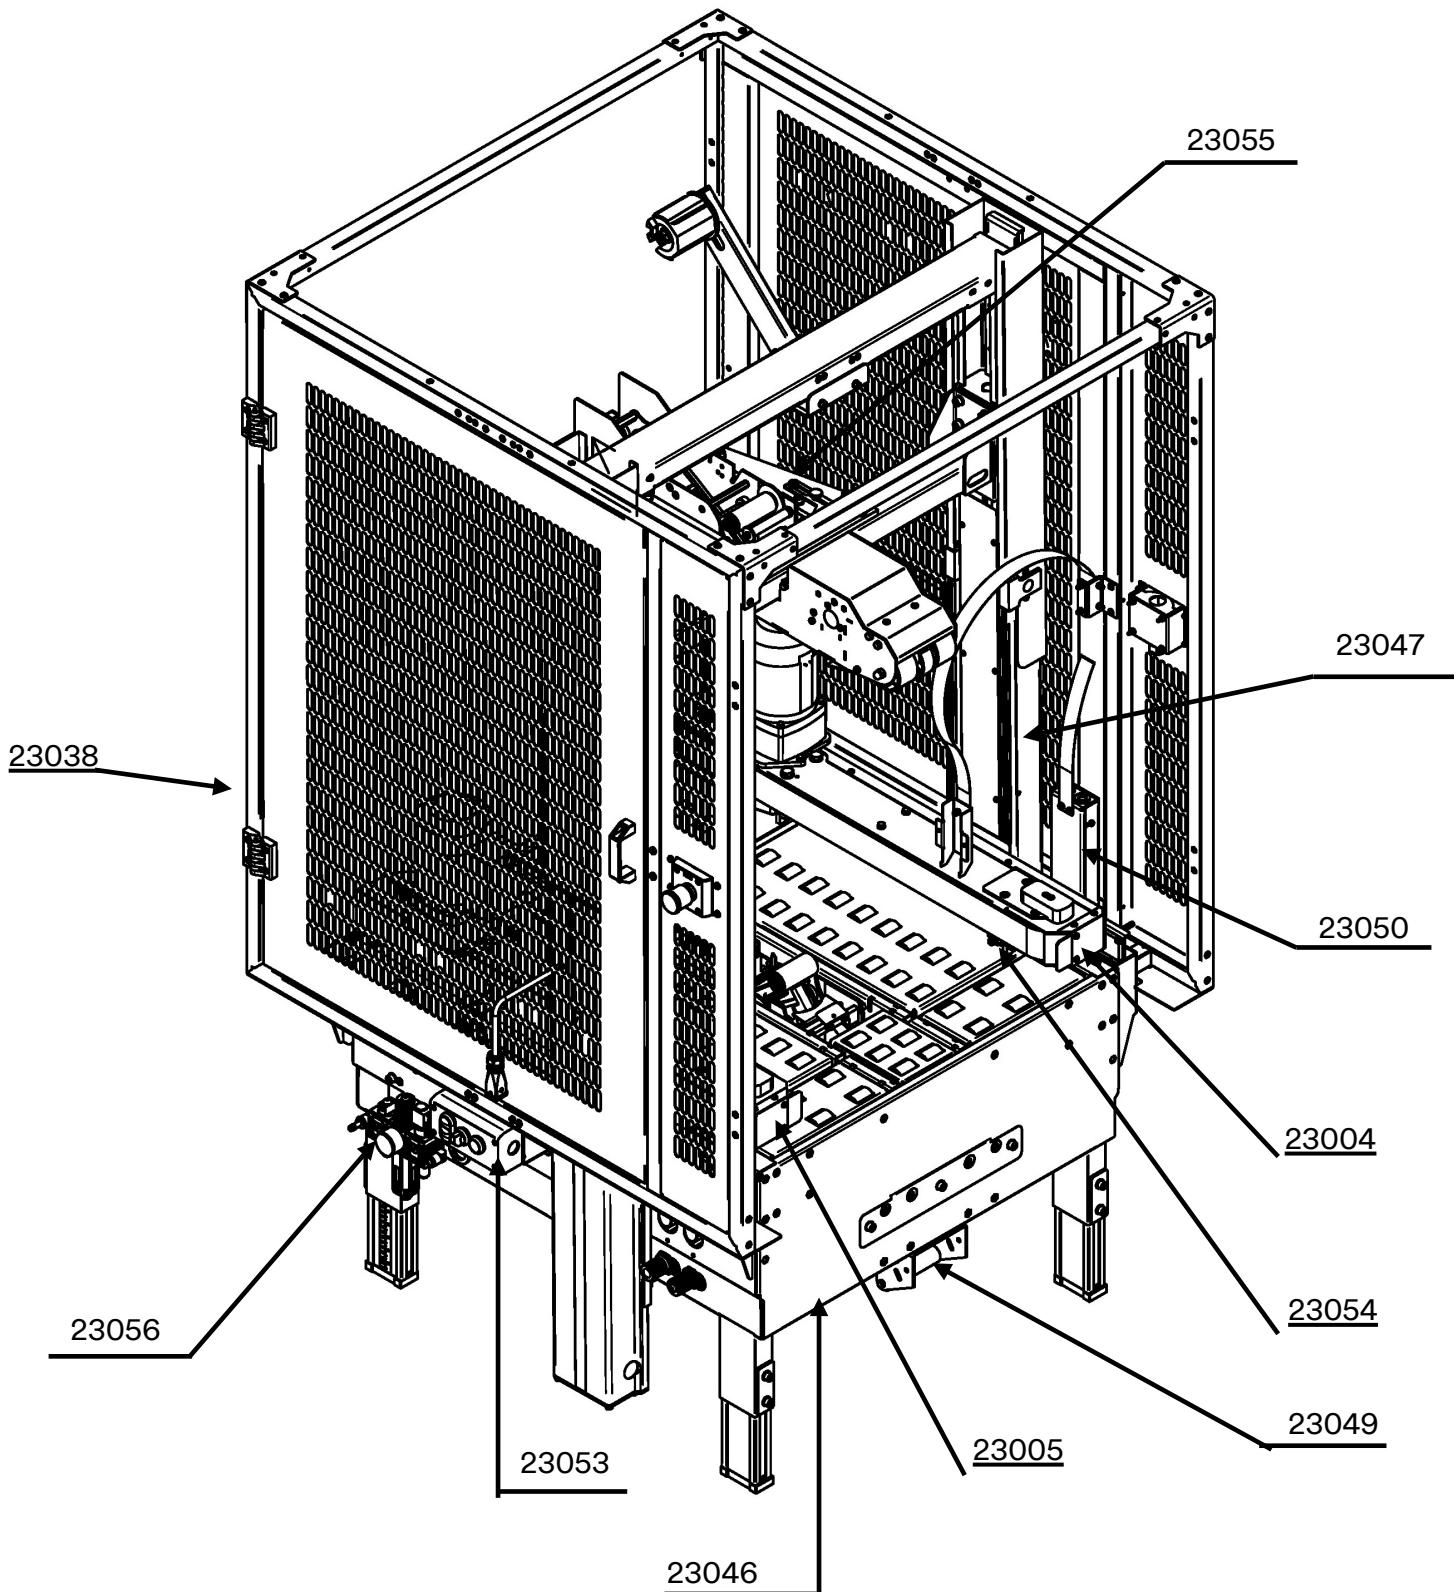

**Frame  
Assemblies**

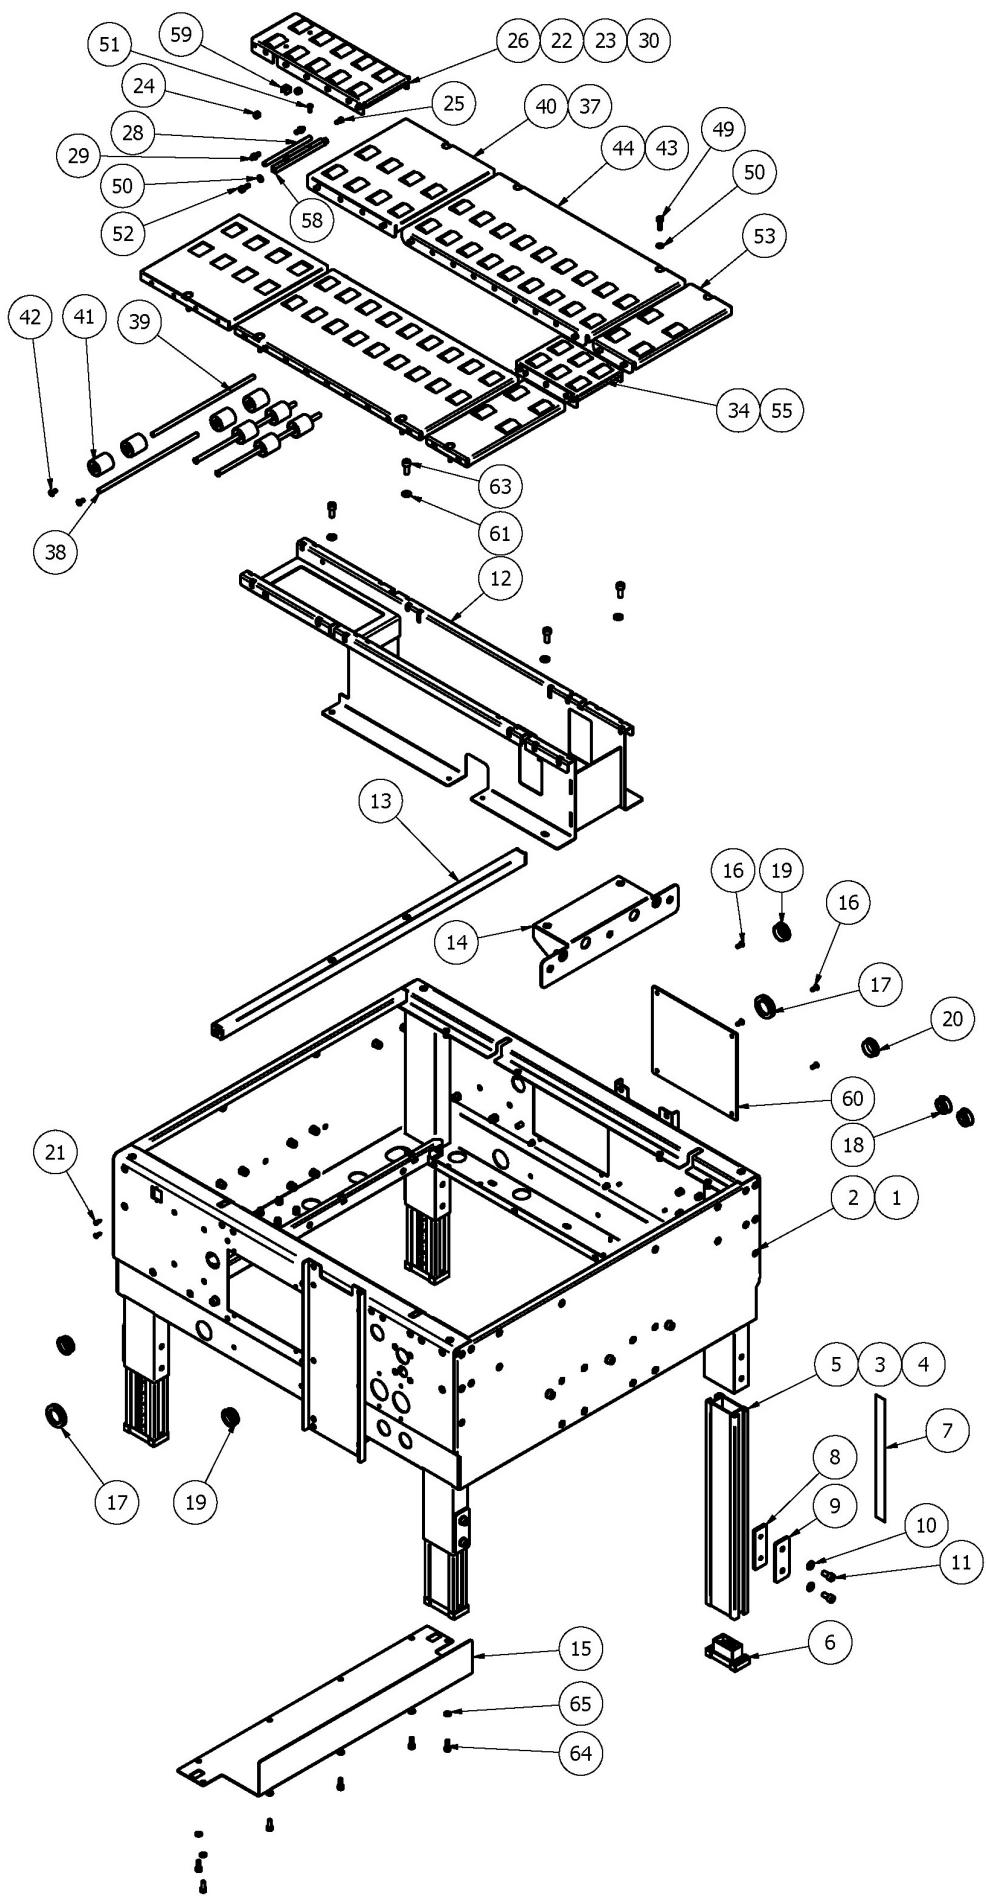



ITEM#	PART NUMBER	DESCRIPTION
23046-1	7 5	BED W/INSERTS
23046-2	7 5 4 4	WELDMENT-BED
23046-3	78-0025-3635-3	LEG ASSEMBLY
23046-4	78-8137-6373-3	LEG-INNER ASSY.
23046-5	78-8137-6287-5	LEG-INNER
23046-6	78-8137-0641-9	PAD-FOOT
23046-7	78-8060-8481-6	LABEL-LEG RULER
23046-8	78-8137-0635-1	CLAMP-LEG
23046-9	78-8129-6100-7	BRACKET
23046-10	M8 WSHR	WASHER-M8 PLAIN
23046-11	M8x16 SHCS	SCREW-M8x16 SHCS
23046-12	78-0025-3599-1	WELDMENT-LOWER BED SUPPORT
23046-13	78-0025-3603-1	CROSSBAR ASSEMBLY
23046-14	78-8137-7799-8	SHOULDER SUPPORT-LOWER UNIT
23046-15	78-0025-3634-6	SUPPORT-BOTTOM REAR
23046-16	78-8094-6145-8	SCREW-M5X12 PHBHCS
23046-17	78-8094-6406-4	RUBBER CABLE FOR HOLE / 38
23046-18	78-8137-0752-4	CAP DP 1187 "Heyco"
23046-19	78-8094-6489-0	GROMMET
23046-20	78-8094-6177-1	CAP
23046-21	78-0025-3646-0	SCREW-SELF TAPPING 6PX13
23046-22	78-0025-3647-8	BED PAN ASSEMBLIES
23046-23	78-0025-3648-6	REAR PAN ASSY
23046-24	M6 HEX NUT-L	NUT-M6 HEX LOCKING
23046-25	M5X12 HHCS	SCREW-M5X12 HHCS
23046-26	78-0025-3649-4	PAN-BED, REAR
23046-27	78-0025-3219-6	PIN-8X124
23046-28	78-8076-5389-0	Mounting-Conveyor
23046-29	78-0025-3218-8	REAR CONVEYOR BED PLATE ASSY.
23046-30	78-8137-7775-8	BED PLATE-REAR CONVEYOR
23046-31	78-0025-3225-3	CONVEYOR-REAR RIGHT/LEFT PLATE ASSY.
23046-32	78-0025-3224-6	PIN-8X263.5
23046-33	78-0025-3222-0	PIN-8X271
23046-34	78-8137-8046-3	CONVEYOR-REAR RIGHT/LEFT PLATE
23046-35	78-8060-7693-7	ROLLER-32X38
23046-36	M5X12 PHBHCS	SCREW-M5X12 PHBHCS
23046-37	78-0025-3650-2	CONVEYOR-MIDDLE RIGHT/LEFT PLATE ASSY.
23046-38	78-0025-3651-0	PAN-BED, MIDDLE
23046-39	M6x20 SHCS M6	SCREW-M6X20 SHCS
23046-40	WSHR	WASHER-M6 PLAIN
23046-41	78-8094-6145-8	SCREW-M5X12 PHBHCS
23046-42	M6X16 SHCS	SCREW-M6X16 SHCS
23046-43	78-0025-3652-8	CONVEYOR-FRONT RIGHT/LEFT PLATE ASSY.
23046-44	78-0025-3653-6	PAN-BED, FRONT
23046-45	78-8137-0568-4	Spacer
23046-46	78-8091-0655-8	Bracket-Spacer
23046-47	78-0025-3637-9	Cover Plate-Pneumatics
23046-48	M8 WSHR	WASHER-M8 PLAIN
23046-49	M8x20 SHCS	SCREW-M8X20 SHCS
23046-50	M6X16 SHCS M6	SCREW-M6X16 SHCS
23046-51	WSHR	WASHER-M6 PLAIN

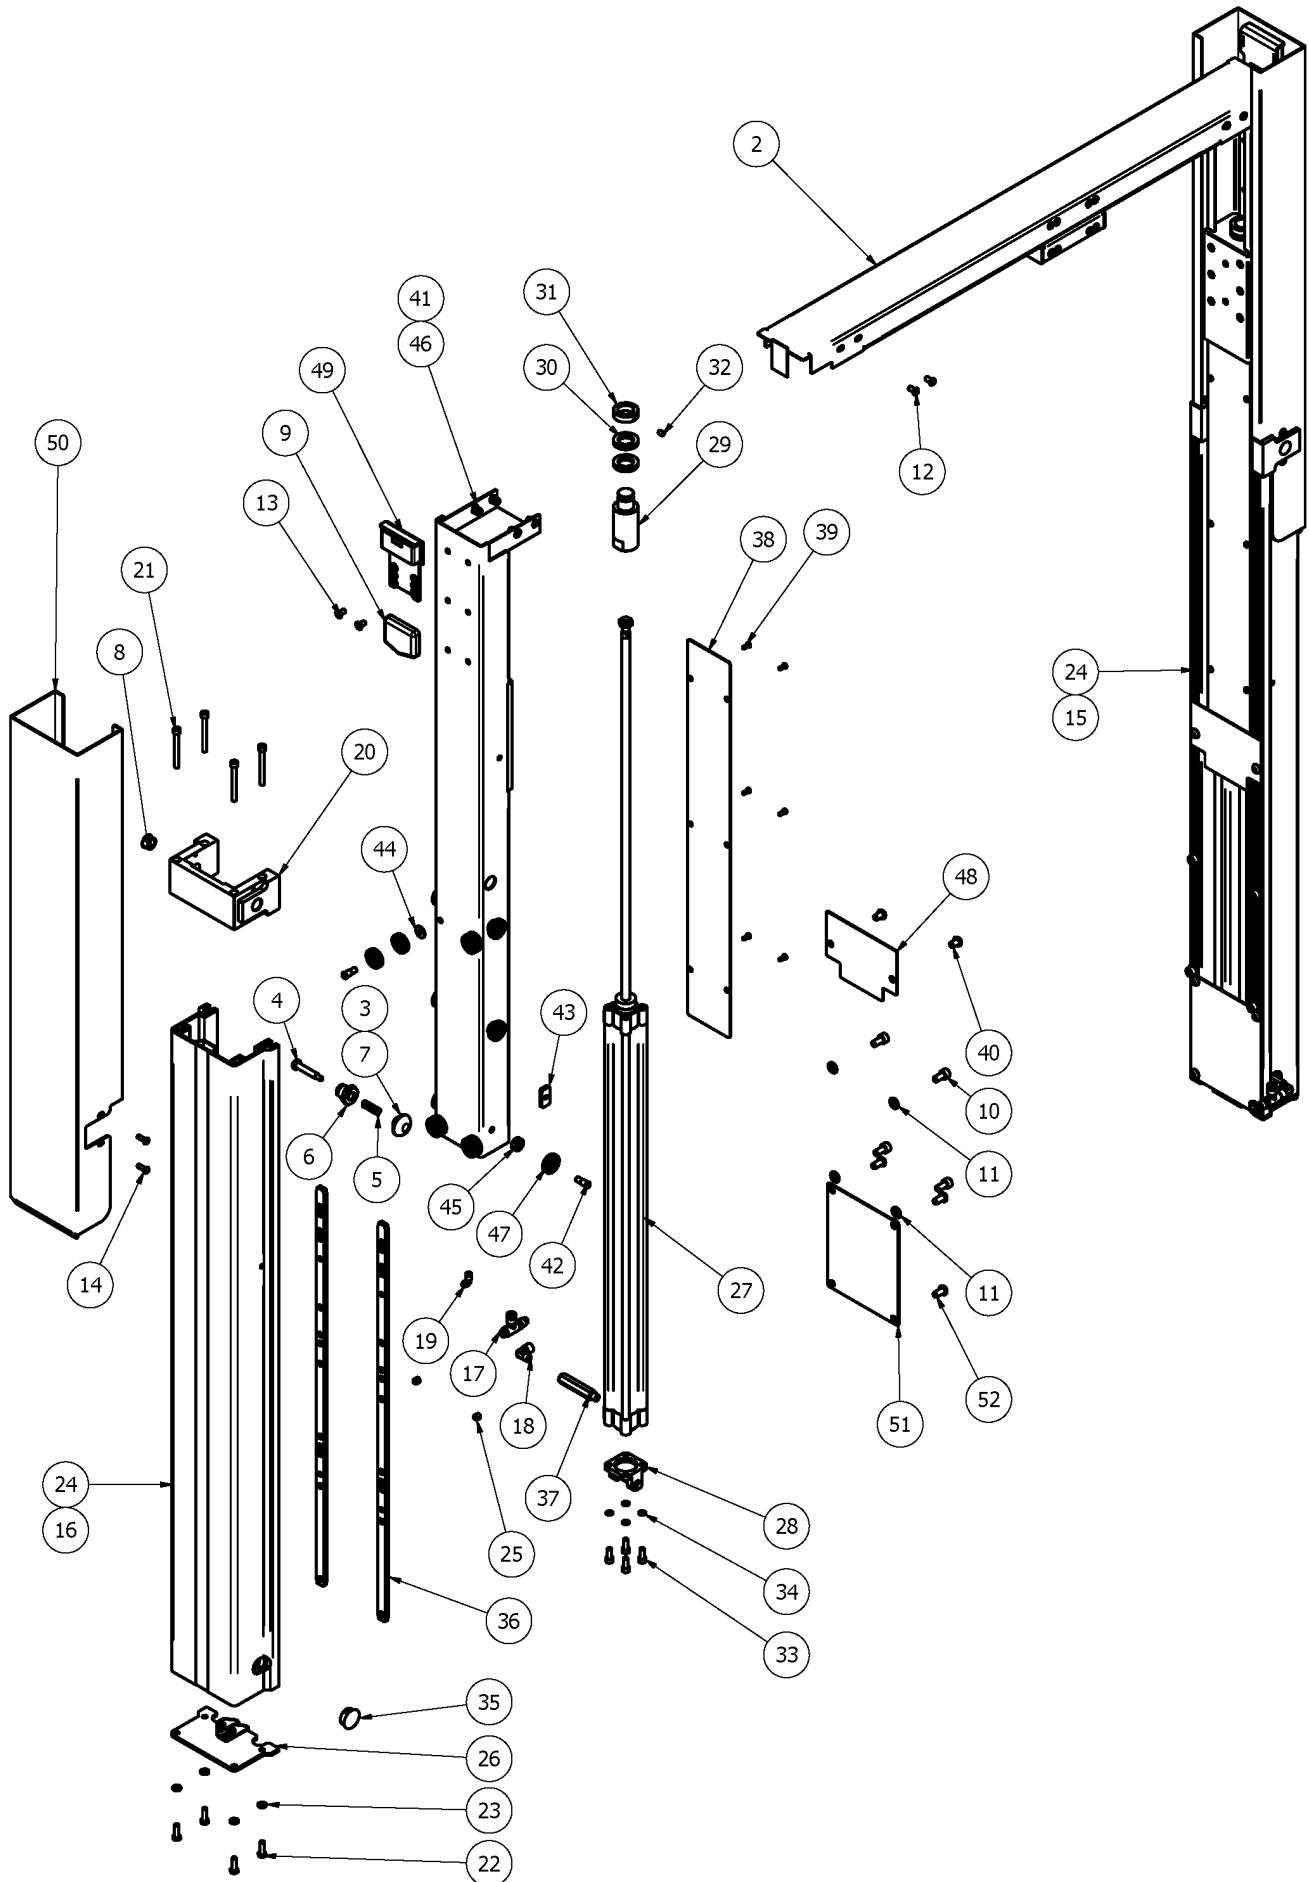

ITEM#	PART NUMBER	DESCRIPTION
23047-1	78-0025-3683-3	COLUMN ASSEMBLIES
23047-2	78-8137-8361-6	BEAM ASSY
23047-3	78-8137-7949-9	Handle Assembly - Height Adjusting
23047-4	78-8076-4544-1	Stud - Height Stop
23047-5	78-8076-4545-8	Spring
23047-6	78-8076-4543-3	Bushing - Height Stop
23047-7	78-8100-0954-4	KNOB (BLACK)
23047-8	78-8076-4744-7	CAP-BLACK ABS/22X1
23047-9	78-8137-0831-6	Bumper
23047-10	M8x16 SHCS	SCREW-M8x16 SHCS
23047-11	M8 WSHR	WASHER-M8 PLAIN
23047-12	M6X12 BHSHCS	SCREW-6X12 BHSHCS
23047-13	M6X12 FHSHCS	SCREW-M6X12 FHSHCS
23047-14	78-0025-3696-5	SCREW-M5X16 BHSHCS
23047-15	78-0025-3697-3	COLUMN ASSY
23047-16	78-0025-3698-1	OUTER COLUMN ASSY
23047-17	78-8137-8400-2	CHECK VALVE HGL-1/8-QS-6
23047-18	26-1005-6895-0	ELBOW JUNCTION MF 1/8"
23047-19	78-8057-5732-1	Ftg - Elbow 1/16 NPT x 4mm (7359-62)
23047-20	78-8137-6379-0	CENTRAL BLOCK-COLUMNS
23047-21	78-8137-3616-8	Screw - M6X60 Galvanized
23047-22	M6X20 HHCS	SCREW-M6X20 HHCS
23047-23	M6 WSHR	WASHER-M6 PLAIN
23047-24	78-0025-3699-9	COLUMN W/ADHESIVE AND INSERTS
23047-25	78-8060-7889-1	SET SCREW-M8X10
23047-26	78-8137-6377-4	Bracket - Cylinder Connection
23047-27	78-0025-3703-9	CYLINDER ASSY
23047-28	78-8137-6383-2	Hinge - Type D5032-A SMC
23047-29	78-8137-6378-2	Cylinder Rod Attachment
23047-30	78-8054-8823-2	Washer - Bumper
23047-31	78-8076-4552-4	Ring Nut - Rod
23047-32	78-8059-5617-0	Set Screw - M6 x 8
23047-33	M6X16 SHCS	SCREW-M6X16 SHCS
23047-34	M6 WSHR SCHN	WASHER-SAFETY (SCHNORR)/6 F144
23047-35	78-0025-3705-4	CAP
23047-36	78-0025-3706-2	CLEAT
23047-37	78-0025-3954-8	EXTENSION-PNEUMATIC
23047-38	78-8137-8394-7	PLATE-INNER COLUMN COVER
23047-39	78-8017-9257-9	Screw - Phil Hd, M4 x 14
23047-40	M8X12 BHSHCS	SCREW-M8X12 BHSHCS
23047-41	78-0025-3707-0	INNER COLUMN ASSY
23047-42	78-8129-6312-8	SCREW-BEARING
23047-43	78-8129-6311-0	PLATE-TAPPED/COLUMN BEARING
23047-44	78-8129-6314-4	WASHER-SPECIAL 7 ID x 18 OD
23047-45	78-8129-6313-6	BUSHING-SPECIAL 8 ID x 18 OD x 7


23047-46	78-0025-3708-8	INNER COLUMN W/INSERTS
23047-47	78-0025-0723-0	BEARING 28x6x6
23047-48	78-8137-8395-4	PLATE-OUTTER COLUMN COVER
23047-49	78-8137-7990-3	DAMPER-SUPPORT ASSY.
23047-50	78-0025-3712-0	GUARD-COLUMN
23047-51	78-0025-3713-8	COVER-OUTER COLUMN LOWER
23047-52	M8X16 BSHCS	SCREW-M8X16 BSHCS

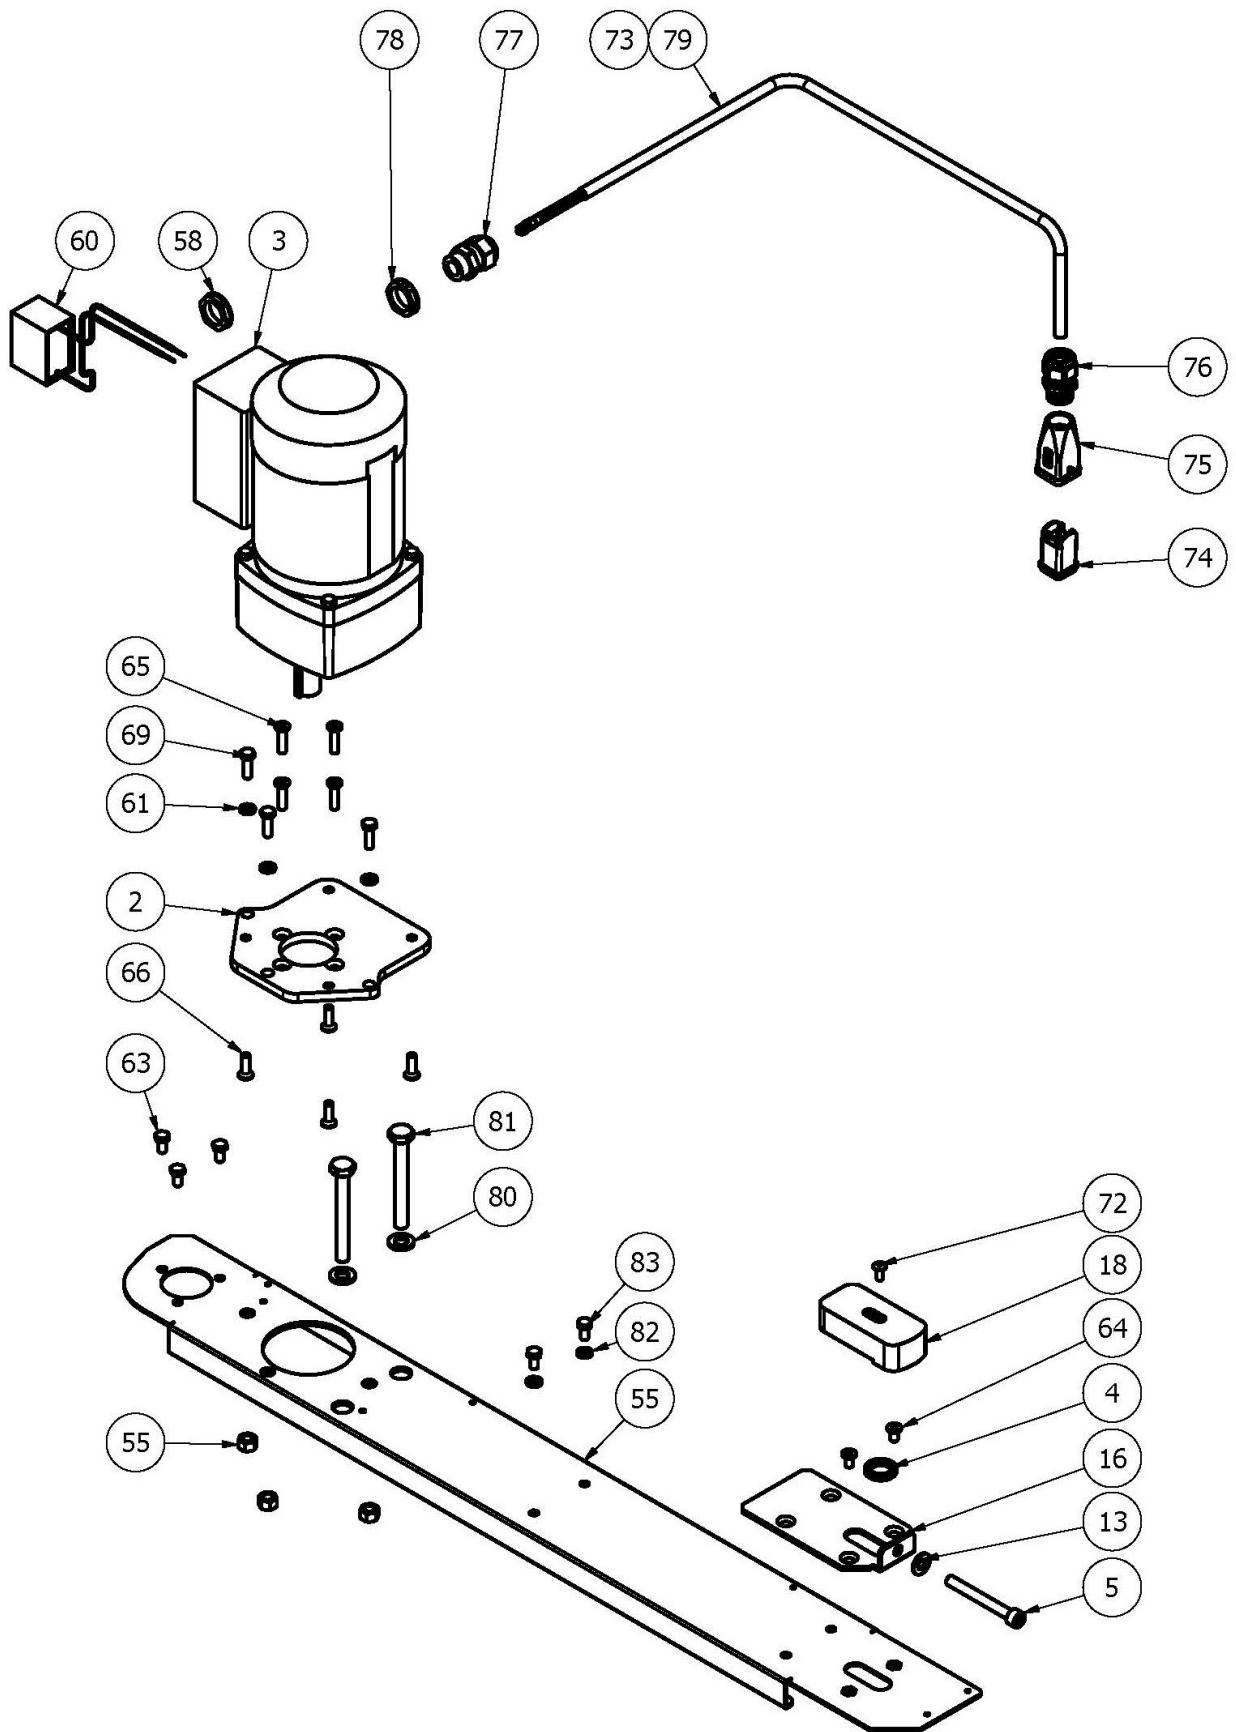


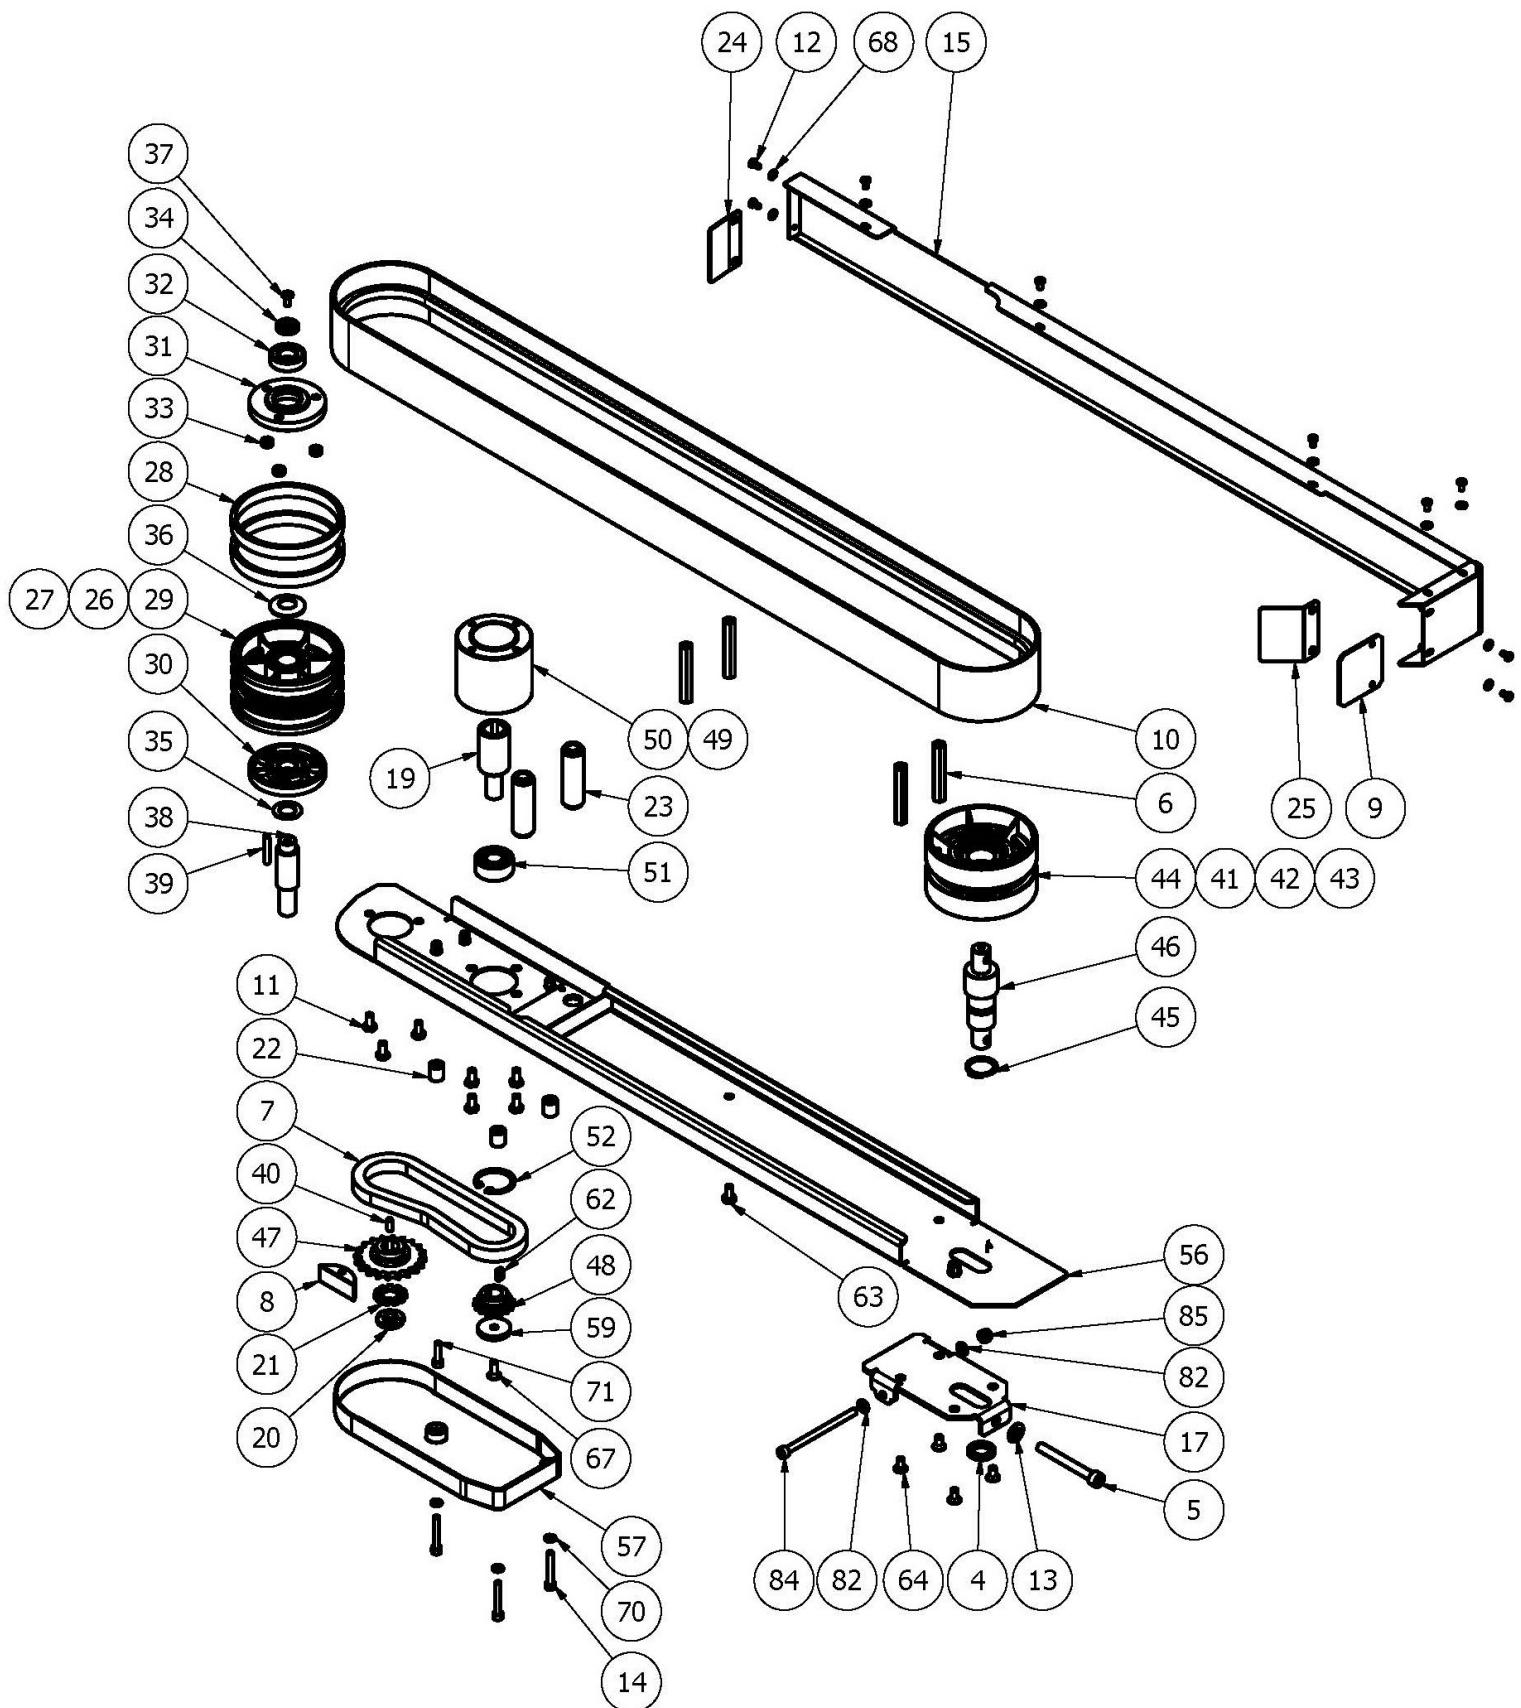

ITEM#	PART NUMBER	DESCRIPTION
23004-1	78-8137-8144-6	RIGHT DRIVE ASSY W/BODINE MOTOR 8000a
23004-2	78-8137-7996-0	BRACKET-MOTOR MOUNT BODINE
23004-3	78-8070-1522-3	Gearmotor - 115V,60HZ,Bodine w/Cap 1/6HP
23004-4	78-8076-5446-8	WASHER-SHAFT
23004-5	78-8070-1519-9	SCREW-M8X70 SHCS
23004-6	78-8055-0661-1	SPACER-W=10 L=61
23004-7	78-8137-7748-5	CHAIN-P3/8 46 LINKS
23004-8	78-8137-3796-8	TENSIONER-CHAIN
23004-9	78-8100-1214-2	FLAP-DRIVE ENTRY
23004-10	78-8076-5452-6	BELT-DRIVE/55X1834 +-2.5
23004-11	78-8137-7747-7	SCREW-SELF TAPPING 3.9X8
23004-12	78-8017-9318-9	WASHER-PLAIN 8mm
23004-13	26-1003-7954-9	SCREW-SOC. HD M5X35
23004-14	78-8137-8025-7	COVER-RIGHT DRIVE BELT
23004-15	78-8137-7756-8	BRACKET-BELT TENSIONER
23004-16	78-8137-7757-6	BRACKET-BELT TENSIONER TOP
23004-17	78-8076-5448-4	COVER-BELT TENSIONER
23004-18	78-8137-8003-4	SHAFT-PINION
23004-19	78-8057-5835-2	WASHER-CENTERING (LOCK NUT)
23004-20	78-8057-5834-5	WASHER-LOCK
23004-21	78-8137-7760-0	BUSHING-DRIVE BELT COVER
23004-22	78-8137-7761-8	SPACER-DRIVE BELT
23004-23	78-8137-8023-2	FLAP-DRIVE EXIT
23004-24	78-8137-8022-4	BRACKET-DRIVE ENTRY ASSY
23004-25	78-8076-5440-1	PULLEY-DRIVE ASSY
23004-26	78-8076-5441-9	PULLEY-DRIVE W/RINGS AND BEARINGS
23004-27	78-8052-6713-1	RING-POLYURETHANE FRICTION
23004-28	78-8137-0858-9	PULLEY-DRIVE
23004-29	78-8076-5442-7	FLANGE-ASSY W/NUTS
23004-30	78-8114-4709-9	FLANGE-BEARING SUPPORT
23004-31	26-1000-4350-9	BEARING-6002 2RS
23004-32	78-8137-7936-6	NUTSERT-M6 GALVANIZED
23004-33	78-8054-8877-8	WASHER-5.5X20X4 W/COUNTERSINK
23004-34	78-8055-0668-6	WASHER-15.2X26X1
23004-35	78-8091-0382-9	WASHER-BELLEVILLE 5/16
23004-36	26-0001-5862-1	SCREW-M5X12 FHSHCS
23004-37	78-8055-0669-4	PIN-DRIVE PULLEY
23004-38	78-8057-5739-6	KEY-5X5X30
23004-39	5X5X12 KEY	KEY-5X5X12
23004-40	78-8076-5443-5	PULLEY-IDLER ASSY
23004-41	78-8055-0660-3	PULLEY-IDLER W/BEARINGS
23004-42	78-8070-1530-6	BEARING-6205 2RS
23004-43	78-0025-3211-3	PULLEY-IDLER
23004-44	12-7997-0272-0	SNAP RING-EXT. 25 STAINLESS STEEL
23004-45	78-8076-5444-3	PIN-IDLER PULLEY


ITEM#	PART NUMBER	DESCRIPTION
23004-46	78-8137-0935-5	SPROCKET-3/8" Z20
23004-47	78-8137-0934-8	SPROCKET-3/8" Z-17
23004-48	78-8137-8368-1	SUPPORT-BEARING ASSY
23004-49	78-8137-8024-0	SUPPORT-BEARING
23004-50	78-8137-7946-5	BEARING-2202 2RS
23004-51	78-0025-3398-8	Snap ring
23004-52	78-8137-8370-7	GUIDE-UPPER RIGHT W/INSERTS
23004-53	78-8137-8371-5	GUIDE-WELDED RIGHT UPPER SUPPORT
23004-54	78-0025-3106-5	NUT-M8-3M
23004-55	78-8137-8004-2	GUIDE-LOWER RIGHT W/INSERTS
23004-56	78-8137-0870-4	COVER-CHAIN
23004-57	78-8129-6469-6	NUT-CORD GRIP M20X1.5
23004-58	78-8054-8577-4	WASHER-SPECIAL 6.5X30X5 W/COUNTERSINK
23004-59	26-1011-8828-7	CAPACITOR-15 MF 300V
23004-60	M6 WSHR	WASHER-M6 PLAIN
23004-61	5X5X12 KEY	KEY-5X5X12
23004-62	M6X12 HHCS	SCREW- M6X12 HHCS SPECIAL
23004-63	M6X12 FHSCHS	SCREW-M6X12 FHSCHS
23004-64	M6X25 FHSCHS	SCREW-M6X25 FHSCHS
23004-65	M6X20 FHSCHS	SCREW-M6X20 FHSCHS
23004-66	M6X16 FHSCHS	SCREW-M6X16 FHSCHS
23004-67	M4 WSHR	WASHER-M4 PLAIN
23004-68	M6X20 HHCS	SCREW-M6X20 HHCS
23004-69	M5 WSHR	WASHER-M5 PLAIN
23004-70	M5X20 SHCS	SCREW-M5X20 SHCS
23004-71	M5X12 PHBHCS	SCREW-M5X12 PHBHCS
23004-72	78-0025-3399-6	HARNESS-DRIVE MOTOR
23004-73	78-8060-7875-0	PLUG-MALE 3P+T
23004-74	78-8060-7877-6	PLUG HOUSING-VERTICAL
23004-75	78-8076-4532-6	CORD GRIP-PG11
23004-76	78-8076-4715-7	CORD GRIP-13X1.5
23004-77	78-8076-5211-6	NUT-SET GMP 13.5
23004-78	78-8134-1975-7	CABLE-3G 1.5UL/CSA
23004-79	M10 WSHR	WASHER-M10 PLAIN
23004-80	M10X85 HHCS	SCREW-M10X85 HHCS
23004-81	M6 WSHR	WASHER-M6 PLAIN
23004-82	M6X12 HHCS	SCREW- M6X12 HHCS SPECIAL
23004-83	M6X90 SHCS	SCREW-M6X90 SHCS
23004-84	M6 HEX NUT-L	NUT-M6 HEX LOCKING

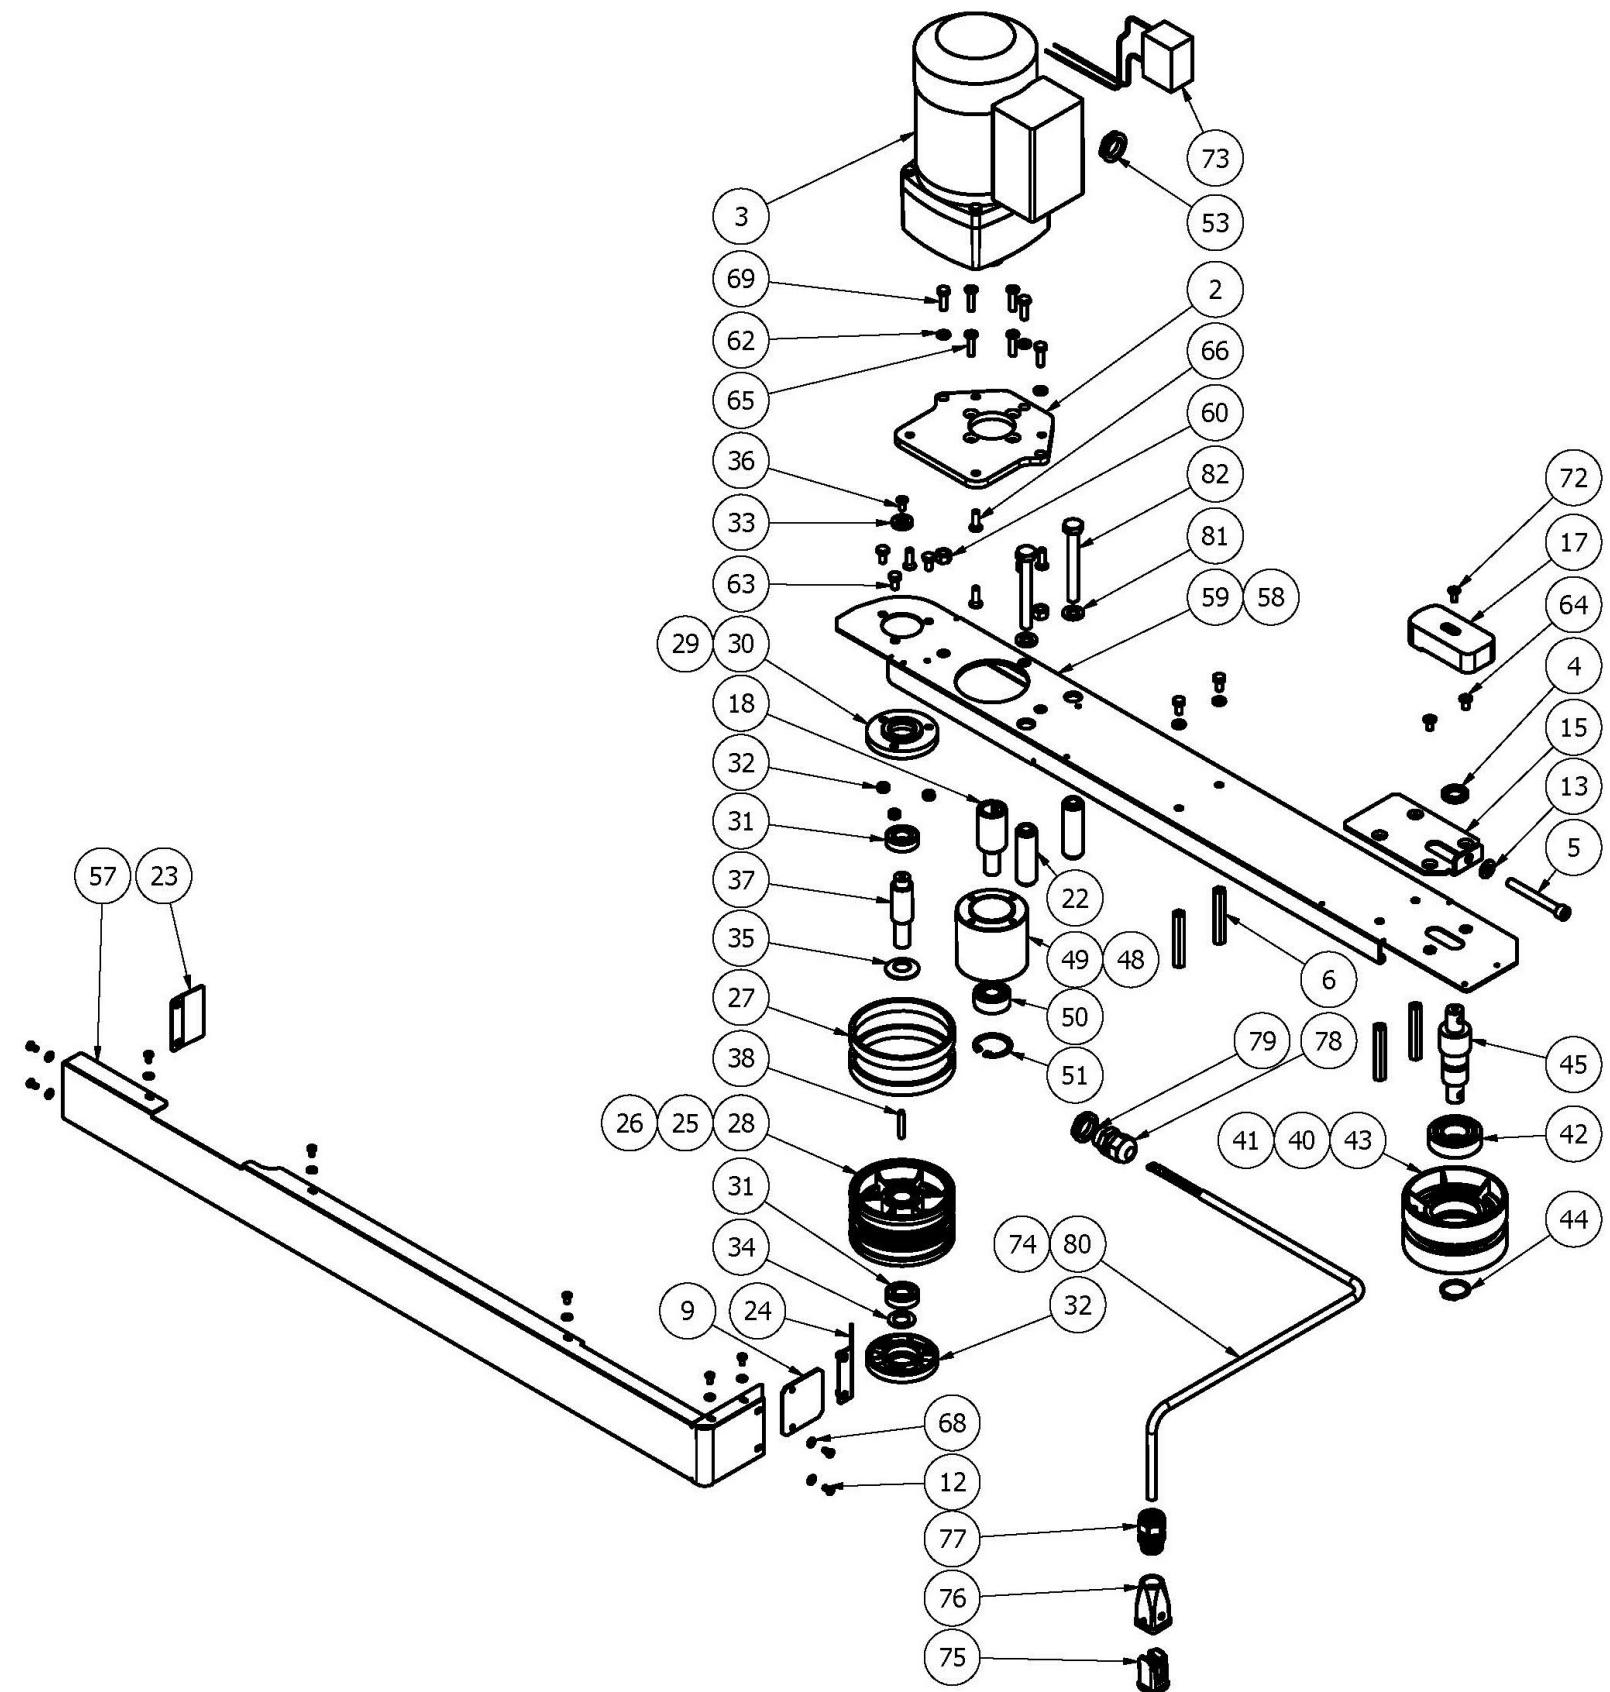

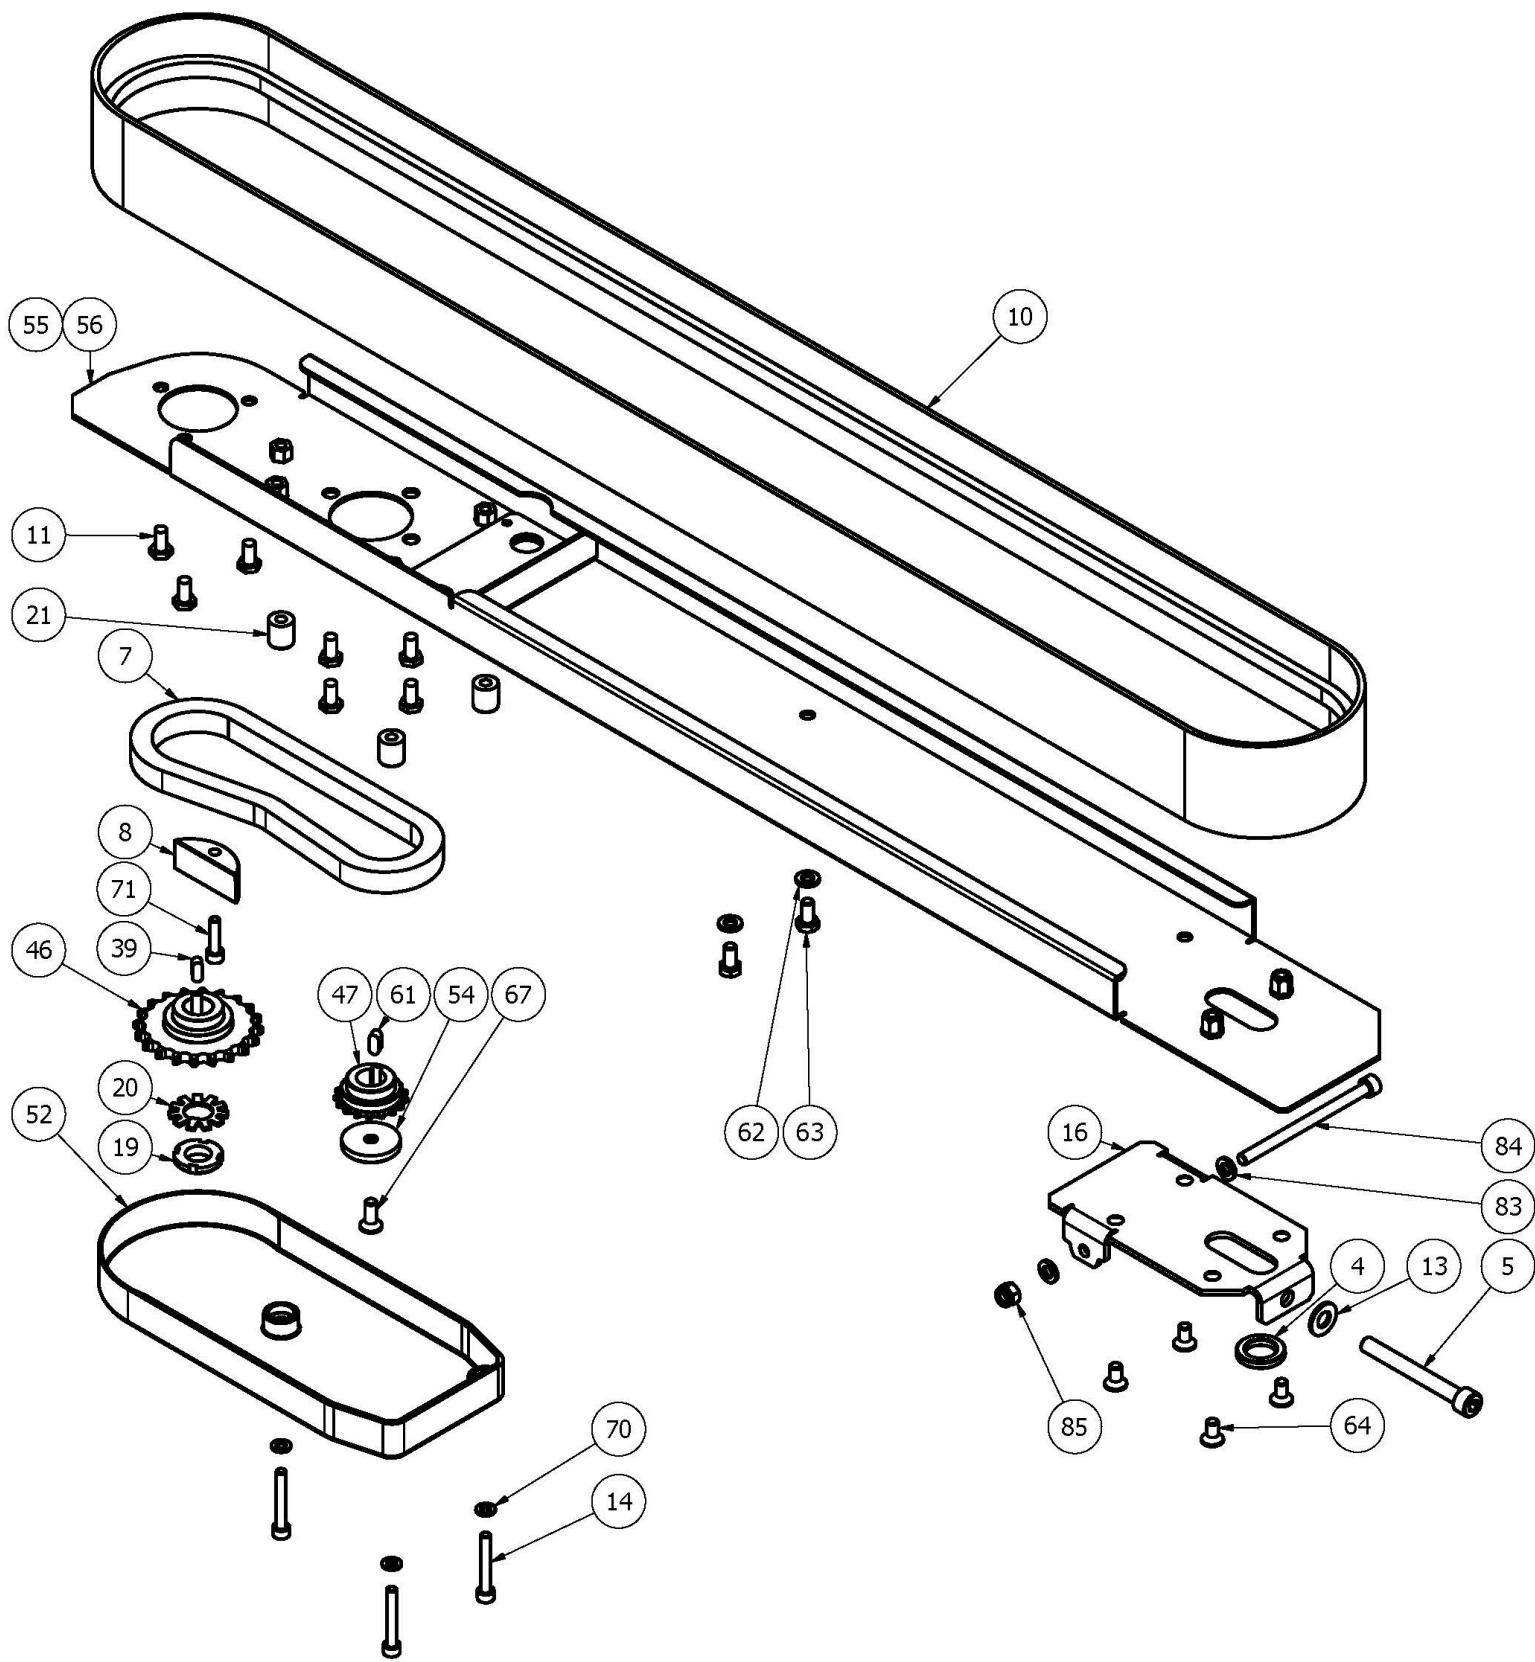


ITEM#	PART NUMBER	DESCRIPTION
23005-1	78-8137-8145-3	LEFT DRIVE ASSY 8000a-3M
23005-2	78-8137-7996-0	BRACKET-MOTOR MOUNT BODINE
23005-3	78-8070-1522-3	Gearmotor - 115V,60HZ,Bodine w/Cap 1/6HP
23005-4	78-8076-5446-8	WASHER-SHAFT
23005-5	78-8070-1519-9	SCREW-M8X70 SHCS
23005-6	78-8055-0661-1	SPACER-W=10 L=61
23005-7	78-8137-7748-5	CHAIN-P3/8 46 LINKS
23005-8	78-8137-3796-8	TENSIONER-CHAIN
23005-9	78-8100-1214-2	FLAP-DRIVE ENTRY
23005-10	78-8076-5452-6	BELT-DRIVE/55X1834 +-2.5
23005-11	78-8137-7747-7	SCREW-SELF TAPPING 3.9X8
23005-12	78-8017-9318-9	WASHER-PLAIN 8mm
23005-13	26-1003-7954-9	SCREW-SOC. HD M5X35
23005-14	78-8137-7756-8	BRACKET-BELT TENSIONER
23005-15	78-8137-7757-6	BRACKET-BELT TENSIONER TOP
23005-16	78-8076-5448-4	COVER-BELT TENSIONER
23005-17	78-8137-8003-4	SHAFT-PINION
23005-18	78-8057-5835-2	WASHER-CENTERING (LOCK NUT)
23005-19	78-8057-5834-5	WASHER-LOCK
23005-20	78-8137-7760-0	BUSHING-DRIVE BELT COVER
23005-21	78-8137-7761-8	SPACER-DRIVE BELT
23005-22	78-8137-8023-2	FLAP-DRIVE EXIT
23005-23	78-8137-8022-4	BRACKET-DRIVE ENTRY ASSY
23005-24	78-8076-5440-1	PULLEY-DRIVE ASSY
23005-25	78-8076-5441-9	PULLEY-DRIVE W/RINGS AND BEARINGS
23005-26	78-8052-6713-1	RING-POLYURETHANE FRICTION
23005-27	78-8137-0858-9	PULLEY-DRIVE
23005-28	78-8076-5442-7	FLANGE-ASSY W/NUTS
23005-29	78-8114-4709-9	FLANGE-BEARING SUPPORT
23005-30	26-1000-4350-9	BEARING-6002 2RS
23005-31	78-8137-7936-6	NUTINSERT-M6 GALVANIZED
23005-32	78-8054-8877-8	WASHER-5.5X20X4 W/COUNTERSINK
23005-33	78-8055-0668-6	WASHER-15.2X26X1
23005-34	78-8091-0382-9	WASHER-BELLEVILLE 5/16
23005-35	26-0001-5862-1	SCREW-M5X12 FHSCHS
23005-36	78-8055-0669-4	PIN-DRIVE PULLEY
23005-37	78-8057-5739-6	KEY-5X5X30
23005-38	5X5X12 KEY	KEY-5X5X12
23005-39	78-8076-5443-5	PULLEY-IDLER ASSY
23005-40	78-8055-0660-3	PULLEY-IDLER W/BEARINGS
23005-41	78-8070-1530-6	BEARING-6205 2RS
23005-42	78-0025-3211-3	PULLEY-IDLER
23005-43	12-7997-0272-0	SNAP RING-EXT. 25 STAINLESS STEEL
23005-44	78-8076-5444-3	PIN-IDLER PULLEY
23005-45	78-8137-0935-5	SPROCKET-3/8" Z20

ITEM#	PART NUMBER	DESCRIPTION
23005-46	78-8137-0934-8	SPROCKET-3/8" Z-17
23005-47	78-8137-8368-1	SUPPORT-BEARING ASSY
23005-48	78-8137-8024-0	SUPPORT-BEARING
23005-49	78-8137-7946-5	BEARING-2202 2RS
23005-50	78-0025-3398-8	Snap ring
23005-51	78-8137-0870-4	COVER-CHAIN
23005-52	78-8129-6469-6	NUT-CORD GRIP M20X1.5
23005-53	78-8054-8577-4	WASHER-SPECIAL 6.5X30X5 W/COUNTERSINK
23005-54	78-8137-8365-7	GUIDE-WELDED LEFT LOWER SUPPORT
23005-55	78-0025-3244-4	GUIDE-LOWER SUPPORT LEFT
23005-56	78-8137-8027-3	COVER-LEFT DRIVE BELT
23005-57	78-8137-8366-5	GUIDE-UPPER LEFT W/INSERTS
23005-58	78-0025-3246-9	SUP GUIDE LEFT ENGINE BODINE 8000a-3M
23005-59	78-0025-3106-5	NUT-M8-3M
23005-60	5X5X12 KEY	KEY-5X5X12
23005-61	M6 WSHR	WASHER-M6 PLAIN
23005-62	M6X12 HHCS	SCREW- M6X12 HHCS SPECIAL
23005-63	M6X12 FHSCHS	SCREW-M6X12 FHSCHS
23005-64	M6X25 FHSCHS	SCREW-M6X25 FHSCHS
23005-65	M6X20 FHSCHS	SCREW-M6X20 FHSCHS
23005-66	M6X16 FHSCHS	SCREW-M6X16 FHSCHS
23005-67	M4 WSHR	WASHER-M4 PLAIN
23005-68	M6X20 HHCS	SCREW-M6X20 HHCS
23005-69	M5 WSHR	WASHER-M5 PLAIN
23005-70	M5X20 SHCS	SCREW-M5X20 SHCS
23005-71	M5X12 PHBHCS	SCREW-M5X12 PHBHCS
23005-72	26-1011-8828-7	CAPACITOR-15 MF 300V
23005-73	78-0025-3399-6	HARNESS-DRIVE MOTOR
23005-74	78-8060-7875-0	PLUG-MALE 3P+T
23005-75	78-8060-7877-6	PLUG HOUSING-VERTICAL
23005-76	78-8076-4532-6	CORD GRIP-PG11
23005-77	78-8076-4715-7	CORD GRIP-13X1.5
23005-78	78-8076-5211-6	NUT-SET GMP 13.5
23005-79	78-8134-1975-7	CABLE-3G 1.5UL/CSA
23005-80	M10 WSHR	WASHER-M10 PLAIN
23005-81	M10X85 HHCS	SCREW-M10X85 HHCS
23005-82	M6 WSHR	WASHER-M6 PLAIN
23005-83	M6X90 SHCS	SCREW-M6X90 SHCS
23005-84	M6 HEX NUT-L	NUT-M6 HEX LOCKING

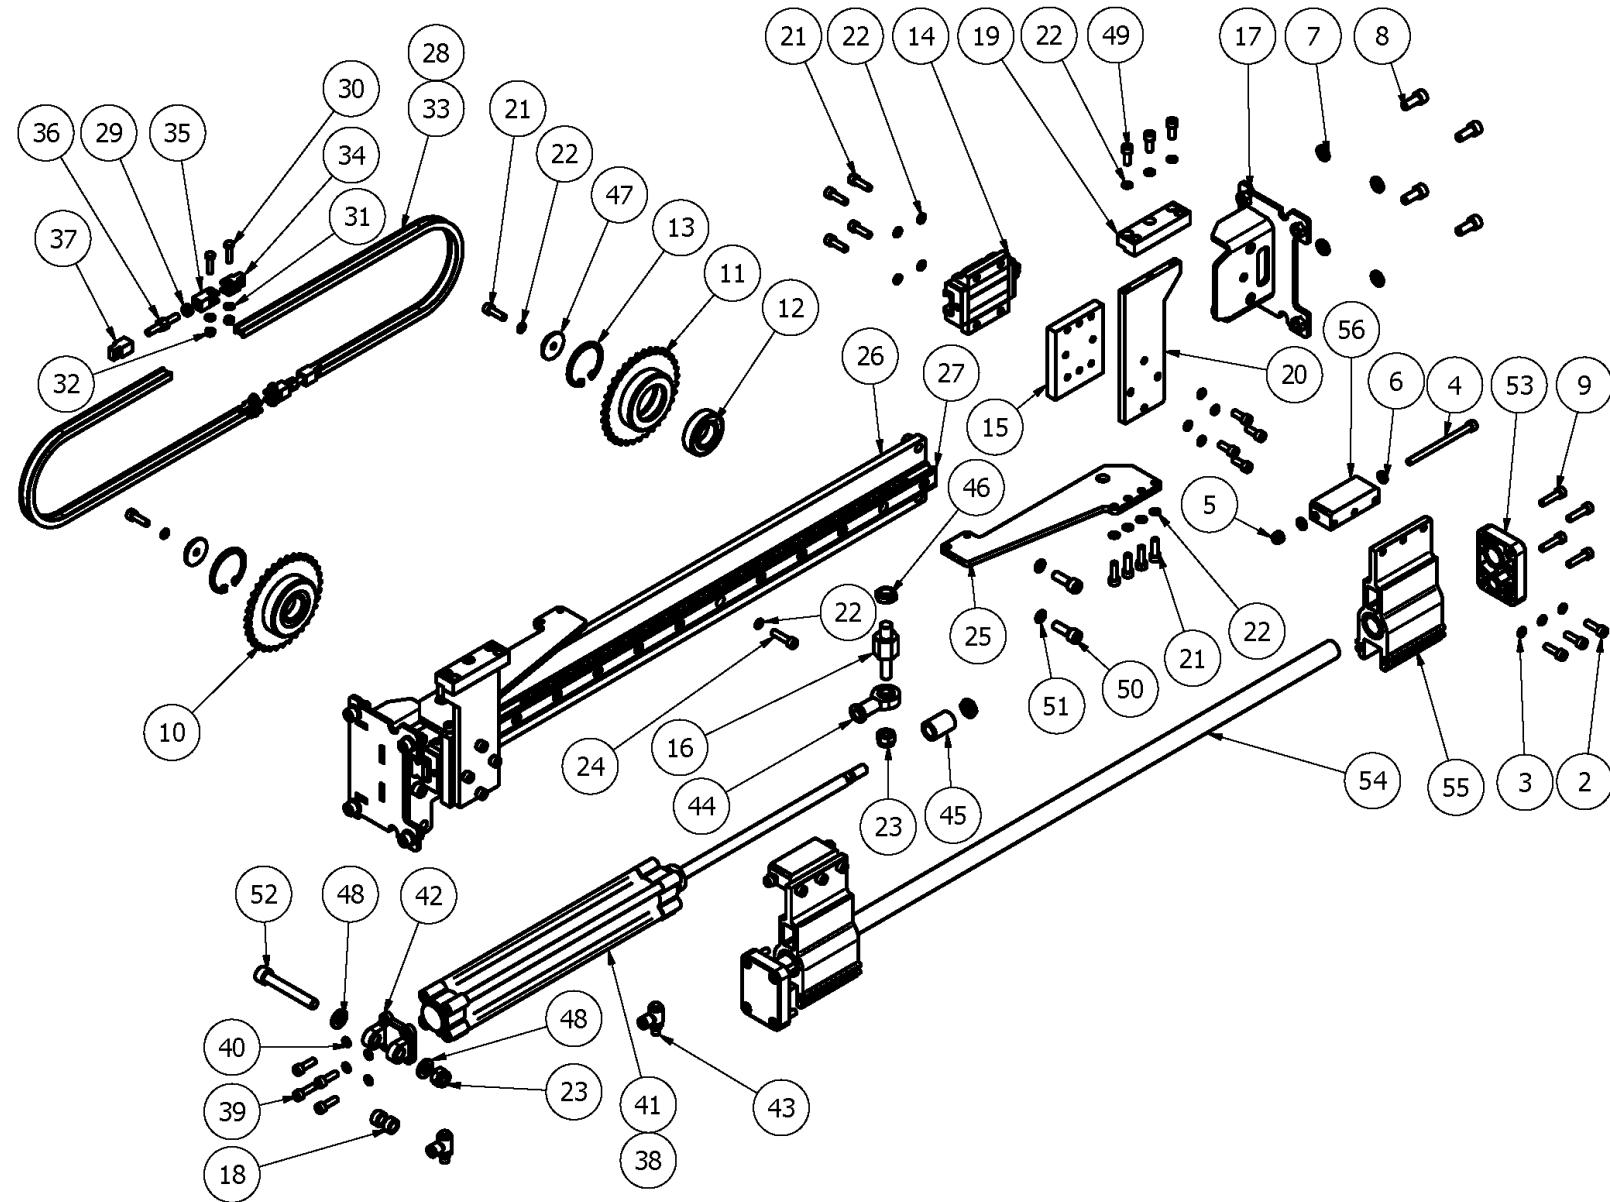


ITEM#	PART NUMBER	DESCRIPTION
23038-1	78-0025-3607-2	CENTERING ASSEMBLY
23038-2	M6x20 SHCS	SCREW-M6X20 SHCS
23038-3	M6 WSHR SCHN	WASHER-SAFETY (SCHNORR)/6 F144
23038-4	M6X90 SHCS	SCREW-M6X90 SHCS
23038-5	M6 HEX NUT-L	NUT-M6 HEX LOCKING
23038-6	M6 WSHR	WASHER-M6 PLAIN
23038-7	M8 WSHR	WASHER-M8 PLAIN
23038-8	M8x20 SHCS	SCREW-M8X20 SHCS
23038-9	M6x25 SHCS	SCREW-M6X25 SHCS
23038-10	78-8137-3619-2	SPROCKET - 3/8" Z35 W/BEARING
23038-11	78-0025-3609-8	SPROCKET-3/8" Z35
23038-12	78-8023-2551-0	BEARING - 6005-2RS
23038-13	78-8137-3621-8	SNAP RING-EXT.D47 STAINLESS STEEL
23038-14	78-0025-3610-6	BLOCK-GUIDE ASSY
23038-15	78-0025-3611-4	BLOCK-MOUNTING
23038-16	78-0025-3612-2	PIN-CYLINDER
23038-17	78-0025-3613-0	WELDMENT-MOUNTING ASSY
23038-18	78-0025-3616-3	BUSHING
23038-19	78-0025-3617-1	PLATE-DRIVE MOUNTING
23038-20	78-0025-3618-9	PLATE-CENTERING ARM
23038-21	M6x20 SHCS	SCREW-M6X20 SHCS
23038-22	M6 WSHR SCHN	WASHER-SAFETY (SCHNORR)/6 F144
23038-23	M10 HEX NUT	NUT-M10 HEX LOCKING
23038-24	M6x25 SHCS	SCREW-M6X25 SHCS
23038-25	78-0025-3619-7	CONNECTING ARM
23038-26	78-0025-3620-5	WELDMENT-TRANSMISSION BAR
23038-27	78-0025-3623-9	GUIDE-BEARING
23038-28	78-0025-3624-7	CHAIN ASSY
23038-29	M6 HEX NUT	NUT-M6 HEX
23038-30	M5X20 HHCS	SCREW-M5X20 HHCS
23038-31	M5 WSHR	WASHER-M5 PLAIN
23038-32	26-1005-6859-6	Nut - Self-Locking, M5 VC
23038-33	78-0025-3625-4	CHAIN
23038-34	78-8137-3629-1	Chain coupling
23038-35	78-8137-3628-3	Right fork
23038-36	78-8054-8785-3	Rod - Threaded Right/Left
23038-37	78-8137-3627-5	Left Fork
23038-38	78-0025-3626-2	CYLINDER ASSY
23038-39	M6x20 SHCS	SCREW-M6X20 SHCS
23038-40	M6 WSHR SCHN	WASHER-SAFETY (SCHNORR)/6 F144
23038-41	78-0025-3627-0	CYLINDER
23038-42	78-8129-6494-4	CYLINDER BASE
23038-43	78-8100-0828-0	FLOW REGULATOR AS 2201F 01-06S F144
23038-44	78-0025-3769-0	Mount - Cylinder Rod End
23038-45	78-0025-3945-6	SPACER

23038-46	78-8091-0555-0	Nut - M12 Special
23038-47	78-8052-6709-9	Washer - Special
23038-48	M10 WSHR	WASHER-M10 PLAIN
23038-49	M6X16 SHCS	SCREW-M6X16 SHCS
23038-50	26-1003-7965-5	Screw - Soc. Hd. Hx. Soc. M8 x 25
23038-51	M8 WSHR SCHN	WASHER-SAFETY (SCHNORR)/8 F144
23038-52	78-0025-3629-6	SCREW-M10X70 SHCS
23038-53	78-8137-8100-8	ROD SUPPORT-S11-T KYOWA S8
23038-54	78-0025-3630-4	LINEAR GUIDE ROD
23038-55	78-0025-3631-2	BEARING BLOCK ASSY
23038-56	78-0025-3633-8	BLOCK-DRIVE ATTACHMENT


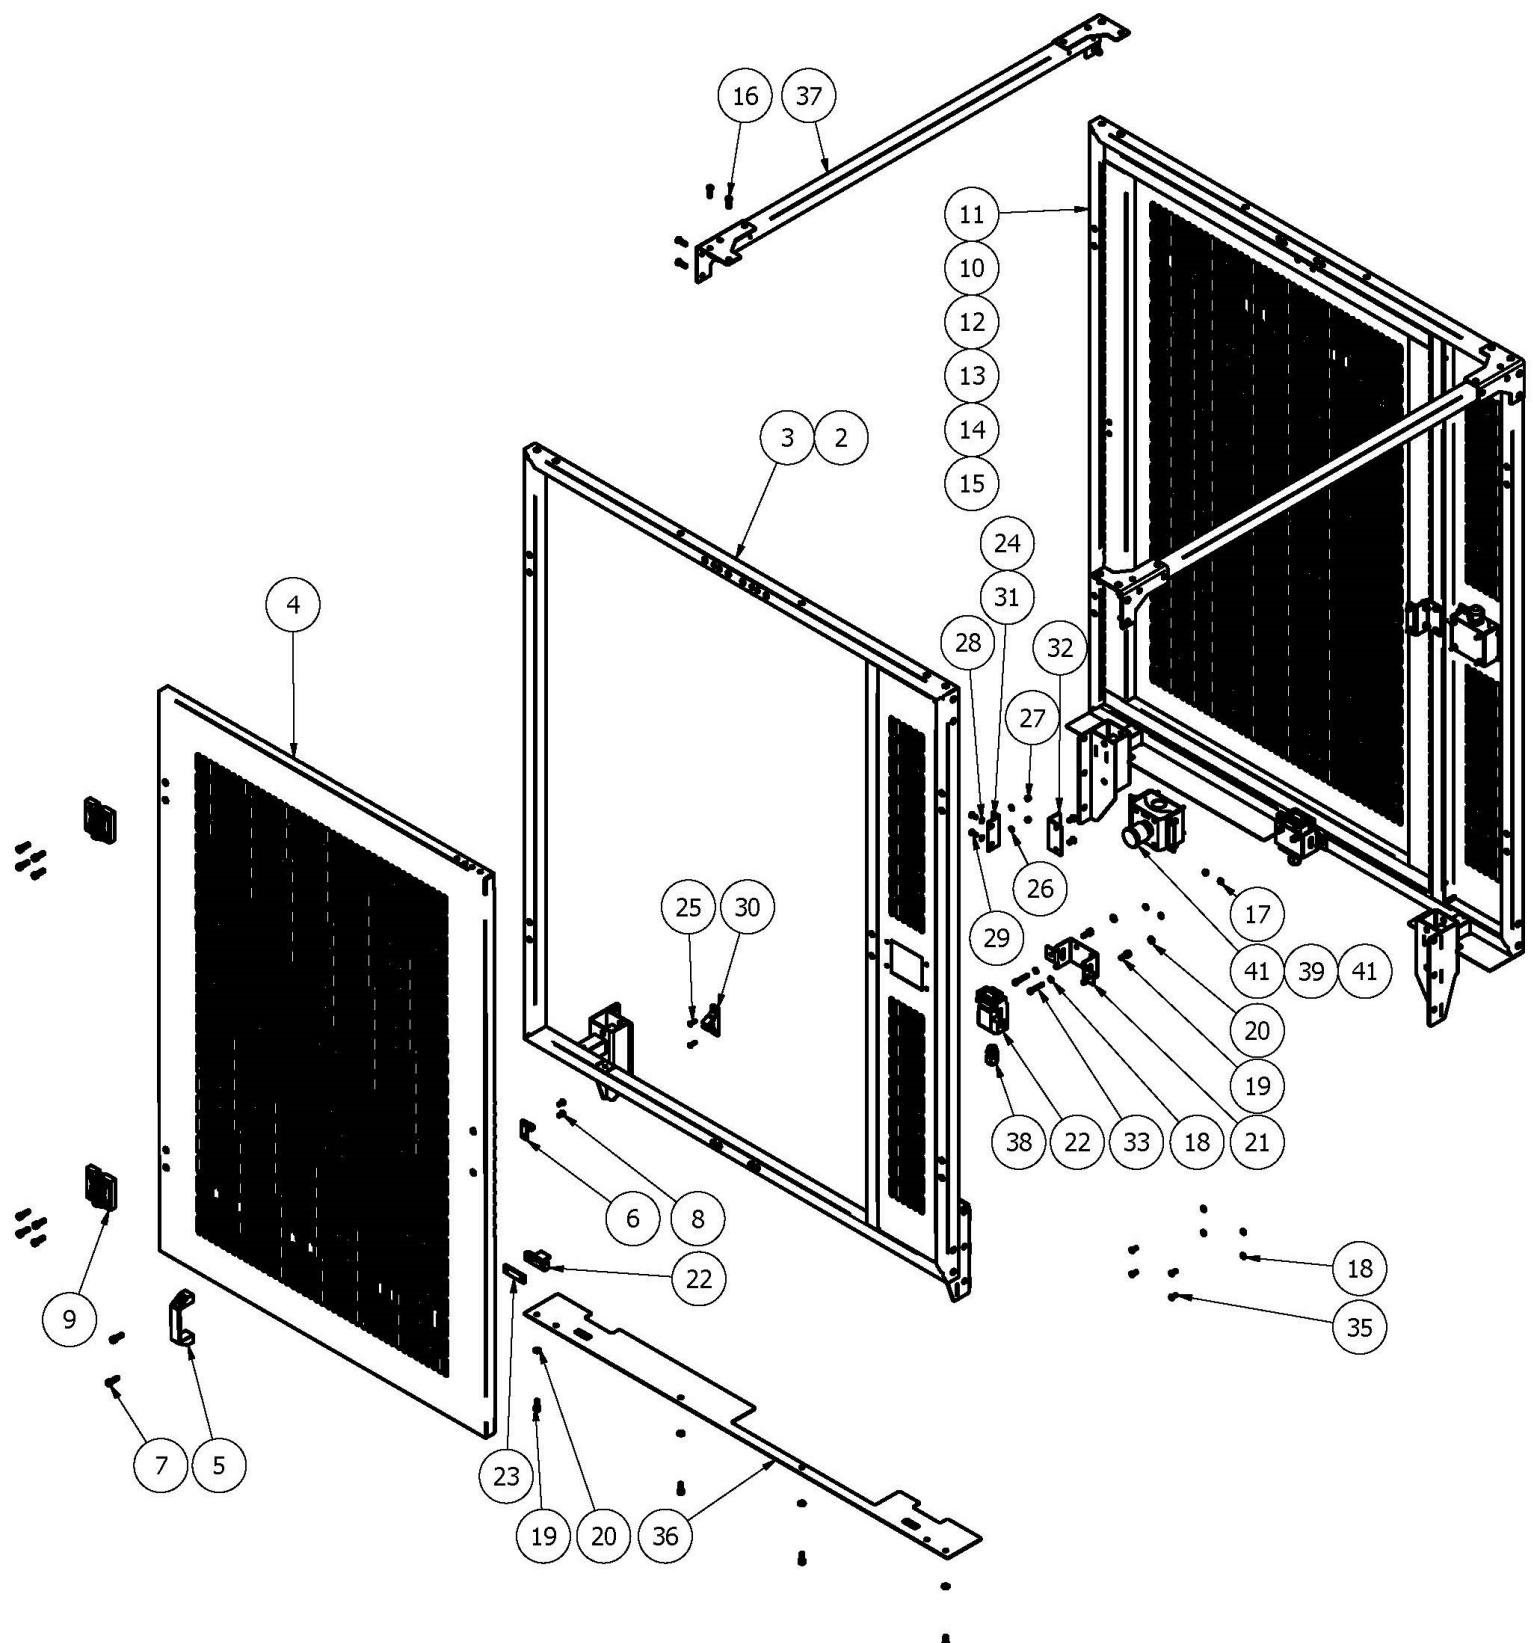


ITEM#	PART NUMBER	DESCRIPTION
23044-1	78-0025-3655-1	Guarding Assemblies
23044-2	78-0025-3656-9	GAURDING-LEFT SIDE ASSY
23044-3	78-0025-3657-7	FRAME-LEFT W/STATIC PANEL & INSERTS
23044-4	78-0025-3667-6	GUARDING-DOOR ASSEMBLY
23044-5	78-8060-7807-3	HANDLE M443/110
23044-6	78-8076-4931-0	Stop - Male Latch
23044-7	M6x20 SHCS	SCREW-M6X20 SHCS
23044-8	M5X12 FHSHCS	SCREW-M5X12 FHSHCS
23044-9	78-8129-6293-0	Hinge - Elesa
23044-10	78-0025-3669-2	GAURDING-RIGHT SIDE ASSY
23044-11	78-0025-3670-0	FRAME-RIGHT W/STATIC PANEL & INSERTS
23044-12	78-0025-3667-6	GUARDING-DOOR ASSEMBLY
23044-13	78-8129-6293-0	Hinge - Elesa
23044-14	78-8060-7807-3	HANDLE M443/110
23044-15	78-8076-4931-0	Stop - Male Latch
23044-16	78-8137-4035-0	SCREW-M6X20 BHSHCS
23044-17	26-1005-6859-6	Nut - Self-Locking, M5 VC
23044-18	M5 WSHR	WASHER-M5 PLAIN
23044-19	M6X16 SHCS	SCREW-M6X16 SHCS
23044-20	M6 WSHR	WASHER-M6 PLAIN
23044-21	78-0025-3672-6	BRACKET-INTERLOCK
23044-22	78-8076-4929-4	SAFETY INTERLOCK 800af AZ15ZVR
23044-23	78-0025-3673-4	SPACER-DOOR LOCK
23044-24	78-0025-3674-2	DOOR LOCK ASSY
23044-25	26-1004-7121-3	SCREW-M4X15 FHSHCS
23044-26	M4 WSHR	WASHER-M4 PLAIN
23044-27	M4 HEX-L	NUT-M4 HEX-L
23044-28	M5 WSHR SCHN	SAFETY WASHER "S" (SCHNORR)/5 F144
23044-29	78-8094-6145-8	SCREW-M5X12 PHBHCS
23044-30	78-8076-4932-8	Stop - Female Latch
23044-31	78-0025-3676-7	BRACKET-DOOR LOCK "B"
23044-32	78-0025-3759-1	BRACKET ASSY
23044-33	M5X30 SHCS	SCREW-M5X30 SHCS
23044-34	M6X12 BHSHCS	SCREW-6X12 BHSHCS
23044-35	78-8094-6145-8	SCREW-M5X12 PHBHCS
23044-36	78-0025-3677-5	PLATE-BOTTOM GUARDING
23044-37	78-0025-3680-9	CROSSBAR ASSY
23044-38	78-8100-1199-5	CORD GRIP
23044-39	78-0025-3757-5	E-STOP ASSY W/BRACKET
23044-40	78-0025-3678-3	BRACKET-E STOP ASSY
23044-41	78-0025-3385-5	EMERGENCY STOP ASSY 8000A

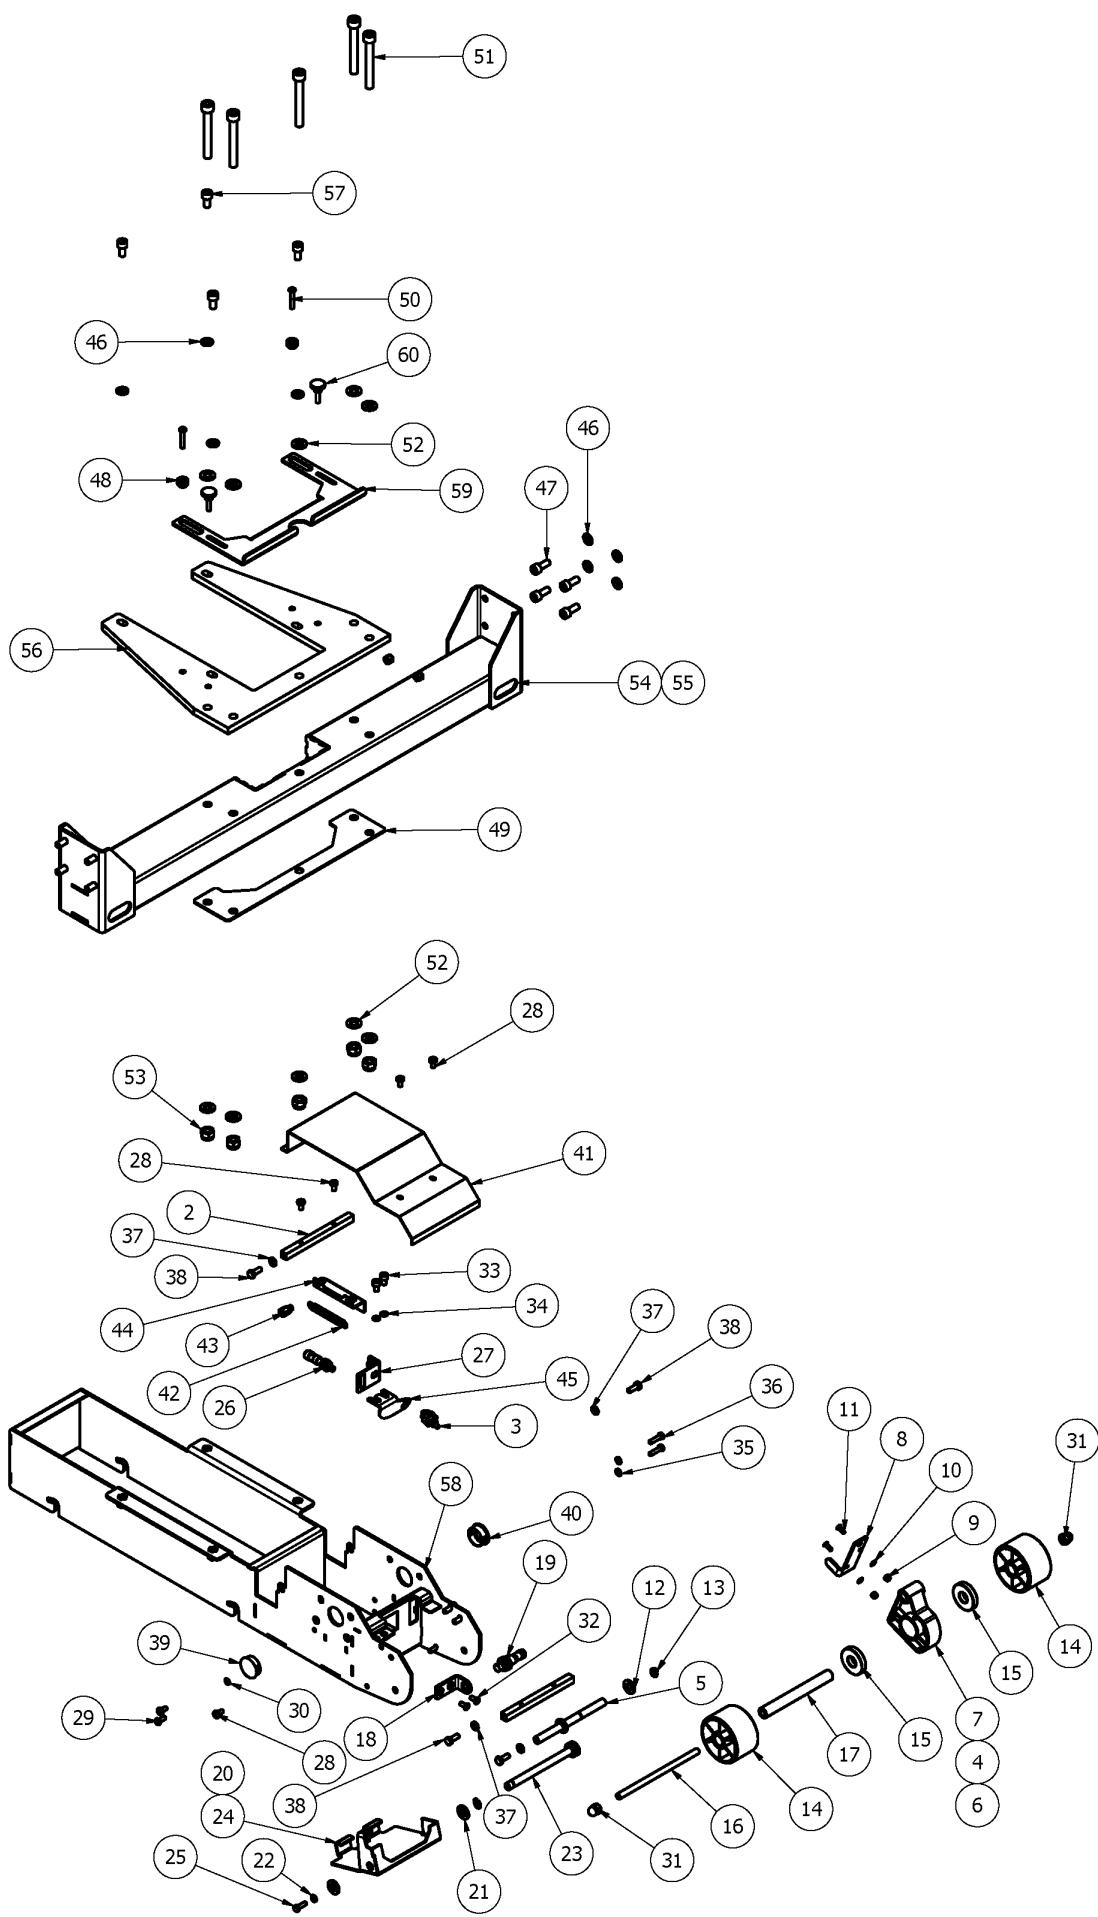


ITEM#	PART NUMBER	DESCRIPTION
23055-1	78-0025-3929-0	UPPER HEAD SUPPORT ASSY
23055-2	78-8137-0568-4	Spacer
23055-3	78-8137-7719-6	SPRING PLUNGER
23055-4	78-0025-3720-3	NOSE SWITCH ASSY
23055-5	78-8137-0591-6	PIN-CAM
23055-6	78-8137-8224-6	Lever Assy
23055-7	78-8137-8019-0	Lever - Proximity Sensor
23055-8	78-8137-8387-1	Bracket – Support Nose Switch 7000rhs
23055-9	M4 HEX-L	NUT-M4 HEX-L
23055-10	M4 WSHR	WASHER-M4 PLAIN
23055-11	78-8017-9317-1	SCREW-M4X12 FHSCHS
23055-12	M10 WSHR	WASHER-M10 PLAIN
23055-13	78-8016-5855-6	E-Ring - 10 mm
23055-14	78-8137-0599-9	Roller
23055-15	78-8137-7715-4	Spacer - Infeed Rollers
23055-16	78-8137-0535-3	Shaft - Roller 700a3 (15233-14)
23055-17	78-8137-0536-1	Tube - Roller Entry
23055-18	78-0025-3721-1	BRACKET-SENSOR
23055-19	78-8137-7720-4	Switch - Proximity M12 7000r
23055-20	78-0025-3722-9	PADDLE ASSY
23055-21	M10 WSHR	WASHER-M10 PLAIN
23055-22	M5 WSHR	WASHER-M5 PLAIN
23055-23	78-8137-8234-5	PIN-PADDLE
23055-24	78-0025-3723-7	PADDLE
23055-25	M5X16 HHCS	SCREW-M5X16 HHCS
23055-26	78-8137-8230-3	PROXIMITY SENSOR
23055-27	78-0025-3724-5	PROXIMITY SENSOR BRACKET ASSY
23055-28	78-8060-8087-1	Screw - M5 x 10
23055-29	M5X12 HHCS	SCREW-M5X12 HHCS
23055-30	M5 WSHR SCHN	SAFETY WASHER "S" (SCHNORR)/5 F144
23055-31	M8 ACORN NUT	NUT-M8 ACORN
23055-32	M5X12 FHSHCS	SCREW-M5X12 FHSHCS
23055-33	78-8010-7229-5	SCREW-M6X10 SHCS
23055-34	M6 WSHR SCHN	WASHER-SAFETY (SCHNORR)/6 F144
23055-35	M5 WSHR	WASHER-M5 PLAIN
23055-36	M5X20 HHCS	SCREW-M5X20 HHCS
23055-37	M6 WSHR	WASHER-M6 PLAIN
23055-38	M6X16 HHCS	SCREW-M6X16 HHCS
23055-39	78-8114-4966-5	CAP - DP-1093 /28
23055-40	78-8076-4702-5	GROMMET-HEYCO SB1093-13
23055-41	78-0025-3732-8	HOUSING TOP
23055-42	78-0025-3733-6	SPRING
23055-43	78-0025-3734-4	Pivot
23055-44	78-0025-3735-1	SPRING BRACKET ASSY
23055-45	78-0025-3737-7	BRACKET-SPRING PLUNGER


23055-46	M8 WSHR	WASHER-M8 PLAIN
23055-47	M8x20 SHCS	SCREW-M8X20 SHCS
23055-48	78-8137-8397-0	BUSHING
23055-49	78-0025-3692-4	PLATE-BOTTOM CROSSBEAM
23055-50	78-0025-2073-8	SCREW-M5X30 BHSHCS
23055-51	78-8076-4796-7	SCREW-M10X80 SHCS
23055-52	M10 WSHR	WASHER-M10 PLAIN
23055-53	M10 HEX NUT	NUT-M10 HEX LOCKING
23055-54	78-0025-3688-2	WELDMENT-TAPE HEAD CROSSBEAM
23055-55	78-0025-3693-2	PLATE-TOP CROSSBEAM ASSY
23055-56	78-0025-3694-0	PLATE-TOP CROSSBEAM
23055-57	M8x16 SHCS	SCREW-M8x16 SHCS
23055-58	78-0025-3931-6	HOUSING ASSY
23055-59	78-0025-3950-6	LOCK-TAPE HEAD
23055-60	78-0025-3956-3	Knob - M5x20

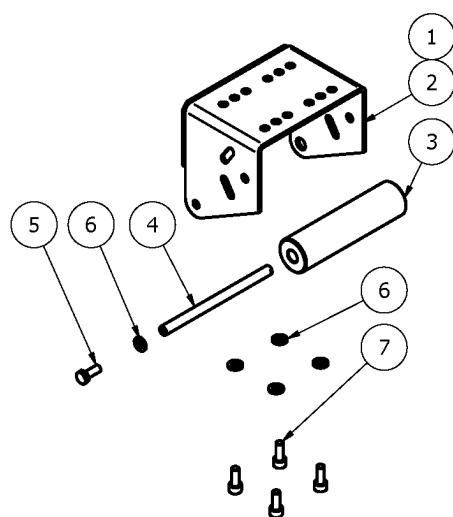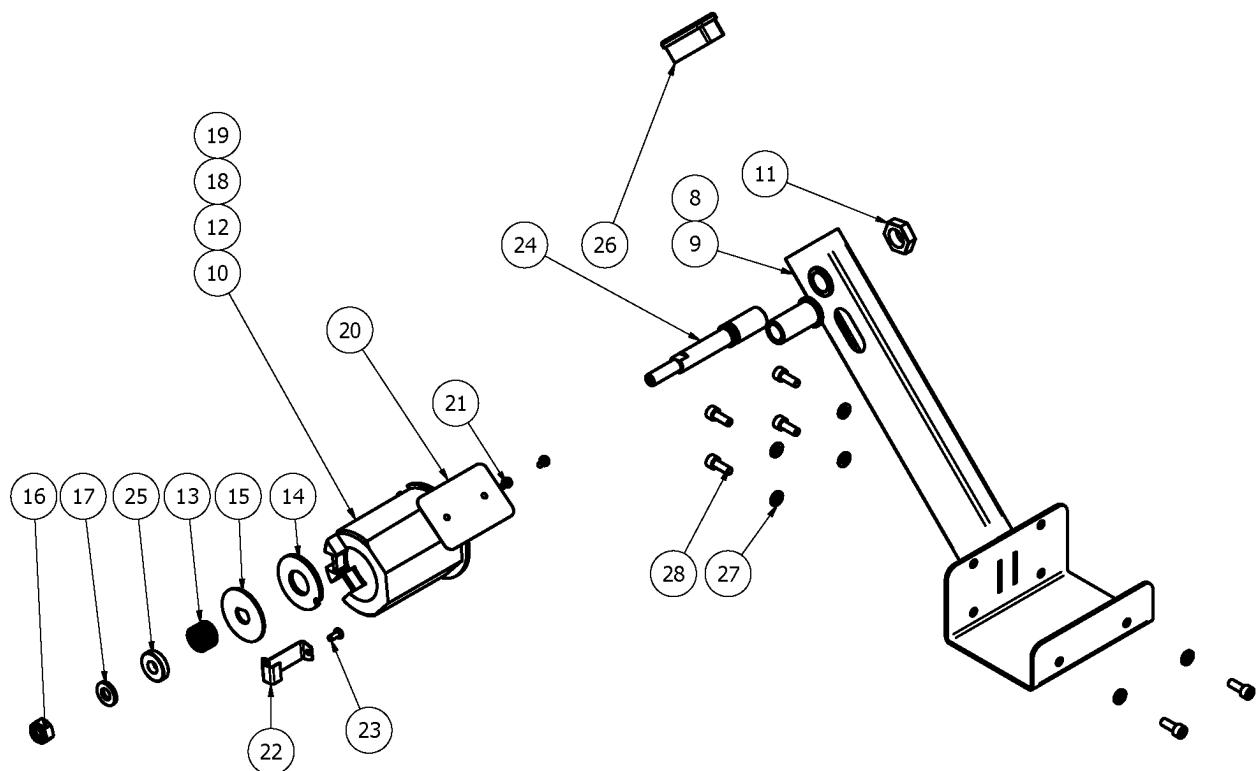


ITEM#	PART NUMBER	DESCRIPTION
23049-1	78-0025-3235-2	OUTBOARD TAPING ASSY 3"
23049-2	78-0025-3236-0	BRACKET-SUPPORT OUTBOARD TAPING 3" (LOWER)
23049-3	78-0025-3241-0	ROLLER-TAPE 3"
23049-4	78-8076-4759-5	SHAFT - ROLLER 3"
23049-5	M6X16 HHCS	SCREW-M6X16 HHCS
23049-6	M6 WSHR	WASHER-M6 PLAIN
23049-7	M6X16 SHCS	SCREW-M6X16 SHCS
23049-8	78-8137-8154-5	UPPER TAPE ARM ASSY
23049-9	78-8137-8028-1	Bracket - Tape Head Arm
23049-10	78-0025-3260-0	TAPE DRUM ASSY-3" WITH NUT
23049-11	78-8017-9169-6	Nut - M18 x 1
23049-12	78-8098-8832-0	TAPE DRUM ASSY W/SHAFT 3"
23049-13	78-8100-1048-4	Spring - Core Holder
23049-14	78-8060-8172-1	Washer - Friction
23049-15	78-8052-6271-0	Washer - Tape Drum
23049-16	78-8017-9077-1	Nut - Self Locking, M10 x 1
23049-17	26-1004-5510-9	Washer - Plain, M10 x 20 x 2.5
23049-18	78-8098-8829-6	Tape Drum Sub Assembly - 3 Inch Wide
23049-19	78-8098-8828-8	DRUM-TAPE 3"
23049-20	78-8098-8830-4	SPRING-LEAF 3"
23049-21	26-1002-5753-9	Screw - Self Tapping
23049-22	78-8098-8816-3	Latch - Tape Drum
23049-23	26-1002-6167-1	Screw - Self Tapping
23049-24	78-8137-8058-8	SHAFT-TAPE DRUM 3"
23049-25	78-8052-6651-3	Washer - Nylon
23049-26	78-8137-6346-9	Cap
23049-27	M6 WSHR	WASHER-M6 PLAIN
23049-28	M6X16 SHCS	SCREW-M6X16 SHCS

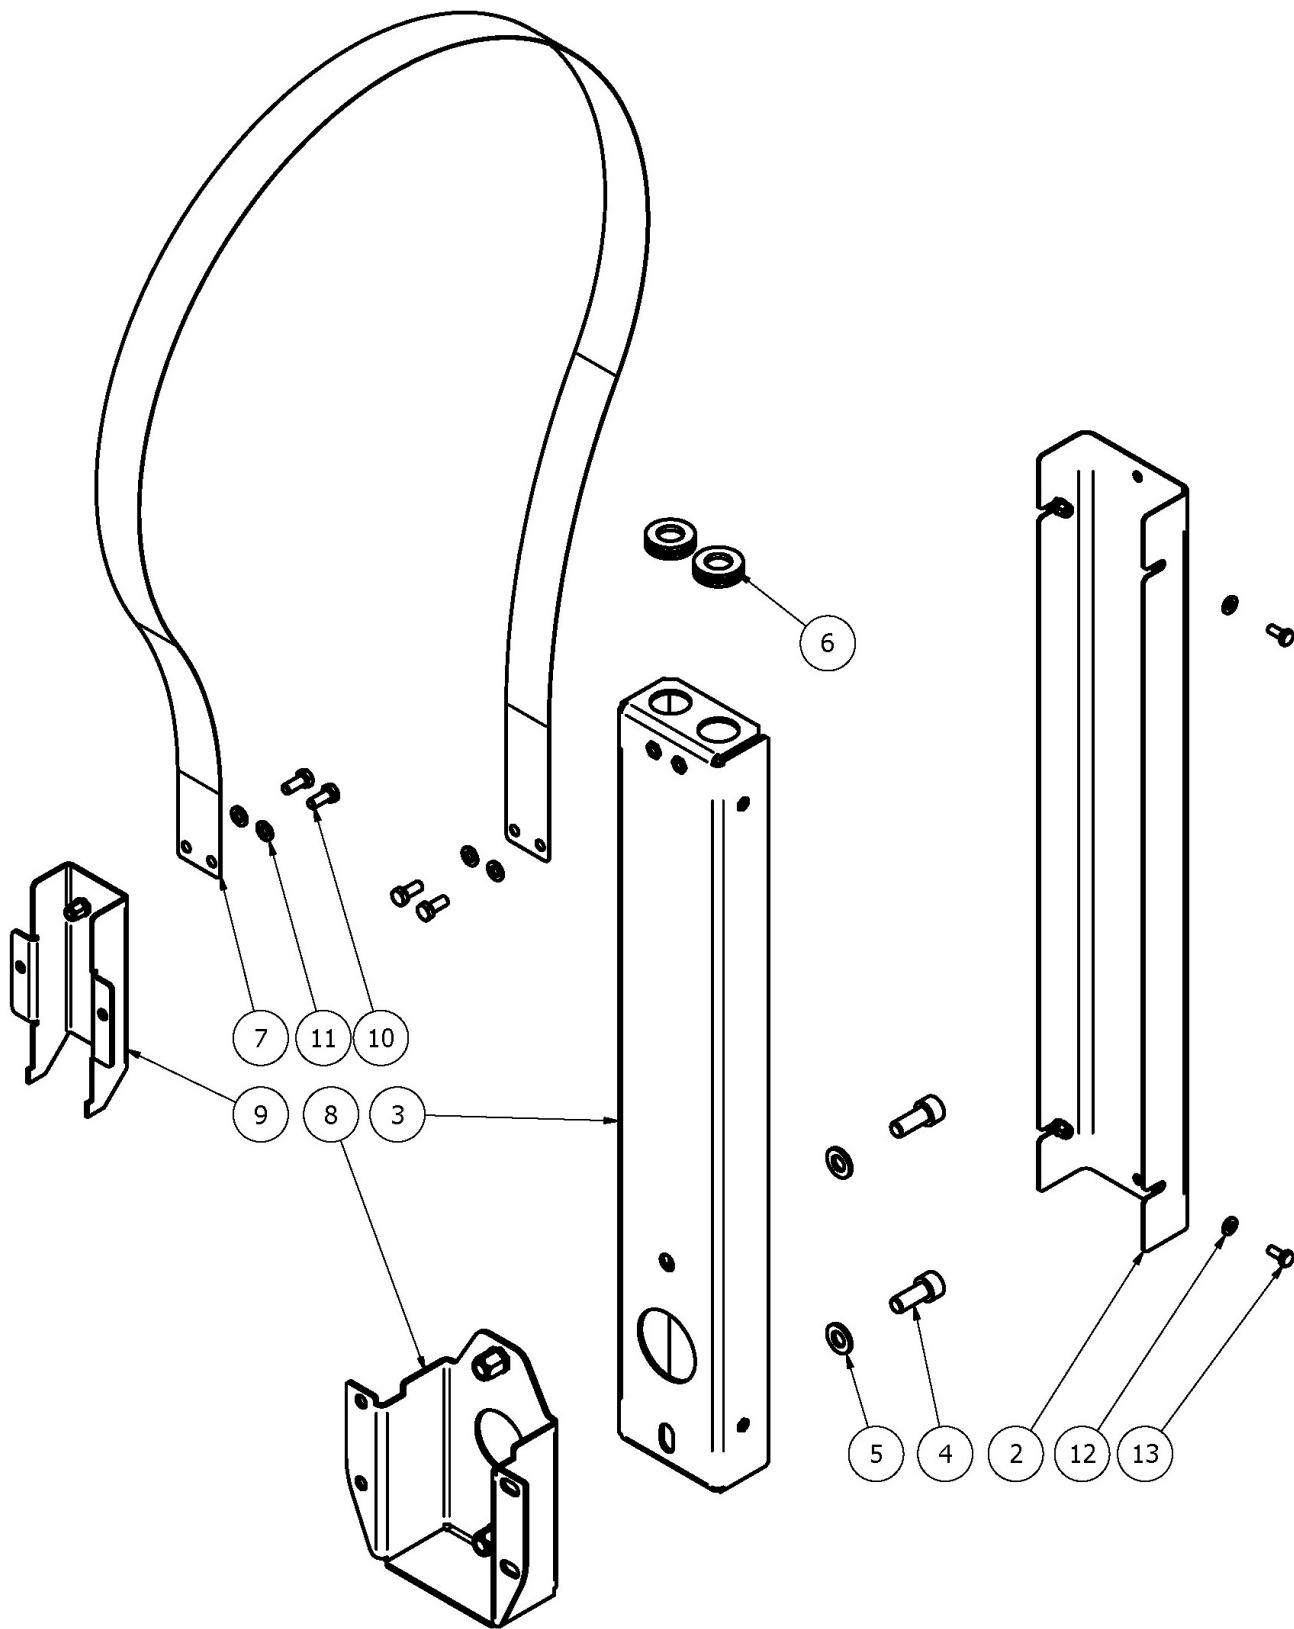

ITEM#	PART NUMBER	DESCRIPTION
23050-1	78-0025-3715-3	Cable Track Assembly
23050-2	78-8137-7853-3	COVER-HOUSING
23050-3	78-0025-0934-3	HOUSING BODY ASSY
23050-4	M8x20 SHCS	SCREW-M8X20 SHCS
23050-5	M8 WSHR	WASHER-M8 PLAIN
23050-6	78-8060-7758-8	GROMMET
23050-7	78-0025-0928-5	TRACK-CABLE
23050-8	78-0025-3716-1	CABLE TRACK BRACKET ASSY "A"
23050-9	78-0025-3718-7	BRACKET-CABLE TRACK ASSY "B"
23050-10	M5X12 HHCS	SCREW-M5X12 HHCS
23050-11	M5 WSHR	WASHER-M5 PLAIN
23050-12	M4 WSHR	WASHER-M4 PLAIN
23050-13	M4X10 HHCS	SCREW-M4X10 HHCS

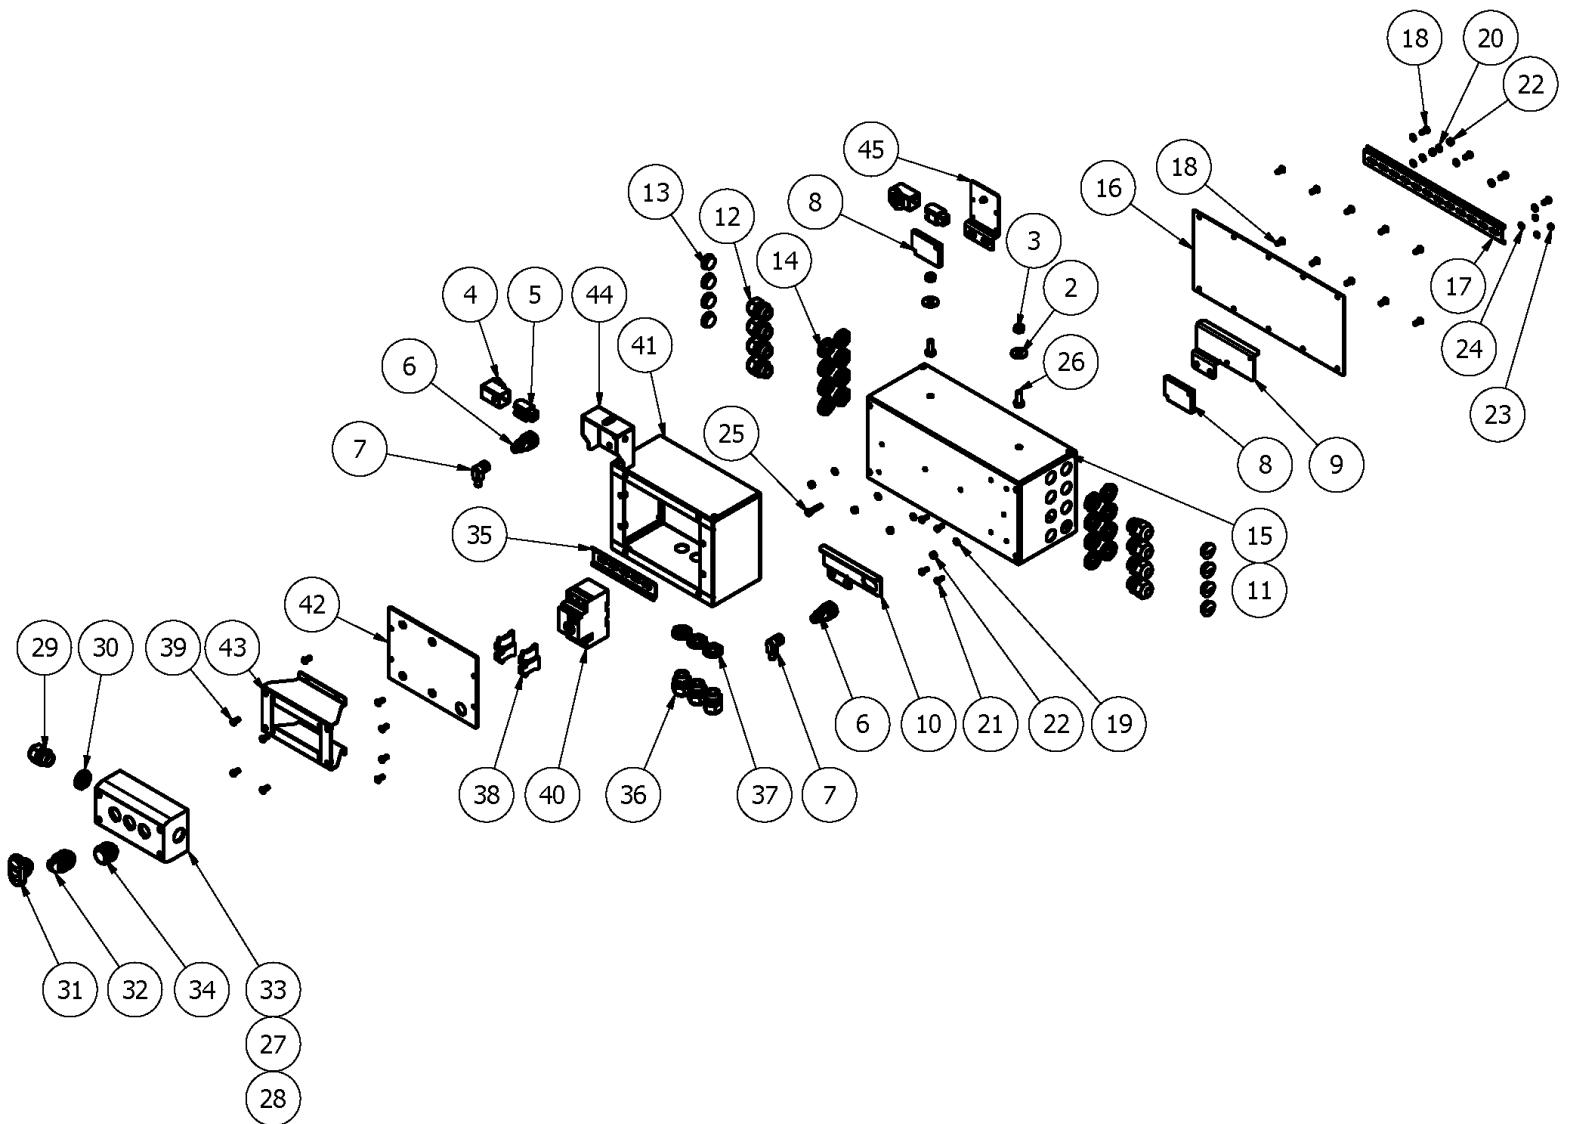

ITEM#	PART NUMBER	DESCRIPTION
23053-1	78-0025-3924-1	ELECTRICAL ASSEMBLIES
23053-2	M8 WSHR FEND	WASHER-M8 FENDER
23053-3	M8 HEX NUT	NUT-M8 HEX
23053-4	78-8060-7876-8	COVER-PLUG
23053-5	78-8060-7873-5	PLUG-FEMALE 3P+T
23053-6	78-8137-7972-1	PHOTOCELL-POLARIZED M18 PNP 3MT
23053-7	78-8114-4825-3	PLUG 4 POLE 90°
23053-8	78-8076-5057-3	Reflector - Omron E39-R1
23053-9	78-0025-2090-2	PE Bracket Right Side
23053-10	78-0025-2089-4	PE Bracket Left Side
23053-11	78-0025-3738-5	ELECTRICAL BOX ASSY
23053-12	78-8137-0607-0	CORD GRIP
23053-13	78-8137-0796-1	PLUG-HOLE PG11
23053-14	78-8129-6469-6	NUT-CORD GRIP M20X1.5
23053-15	78-0025-3739-3	ELECTRICAL BOX W/INSERTS
23053-16	78-0025-3743-5	ELECTRICAL BOX COVER
23053-17	78-0025-3744-3	DIN RAIL
23053-18	78-8094-6145-8	SCREW-M5X12 PHBHCS
23053-19	M5 WSHR	WASHER-M5 PLAIN
23053-20	26-1009-3592-8	WASHER-M5 LOCKING
23053-21	M4X12 PHBHCS	SCREW-M4X12 PHBHCS
23053-22	M5 HEX NUT	NUT-M5 HEX
23053-23	M4 HEX NUT	NUT-M4 HEX
23053-24	M4 WSHR	WASHER-M4 PLAIN
23053-25	M5X25 SHCS	SCREW-M5X25 SHCS
23053-26	M8X20 HHCS	SCREW-M8X20 HHCS
23053-27	78-0025-3925-8	COMMAND BOX ASSY
23053-28	78-0025-3746-8	CONTROL BOX ASSY
23053-29	78-8137-0607-0	CORD GRIP
23053-30	78-8129-6469-6	NUT-CORD GRIP M20X1.5
23053-31	78-8137-8079-4	Push Button - Start/Stop
23053-32	78-8137-8422-6	Switch - Selector
23053-33	78-8137-8210-5	3 HOLES WHITE HOUSING M22-I3
23053-34	78-8137-8344-2	LUMINOUS BLUE BUTTON M22-DL-BQ
23053-35	78-0025-3751-8	DIN RAIL
23053-36	78-8137-0607-0	CORD GRIP
23053-37	78-8129-6469-6	NUT-CORD GRIP M20X1.5
23053-38	78-8094-6384-3	CLAMP - VGPE 4/6
23053-39	78-8094-6145-8	SCREW-M5X12 PHBHCS
23053-40	78-8137-0603-9	CIRCUIT BREAKER 2,5-4A 140MC2E-B40
23053-41	78-0025-3926-6	BOX-ELECTRICAL ON/OFF
23053-42	78-0025-3927-4	COMPONENT BOX COVER
23053-43	78-0025-3928-2	BRACKET ASSY-CONTROL BOX
23053-44	78-0025-3937-3	PHOTO CELL COVER BRACKET ASSY
23053-45	78-0025-3939-9	ASSY - REFLECTOR BRACKET (EXIT)

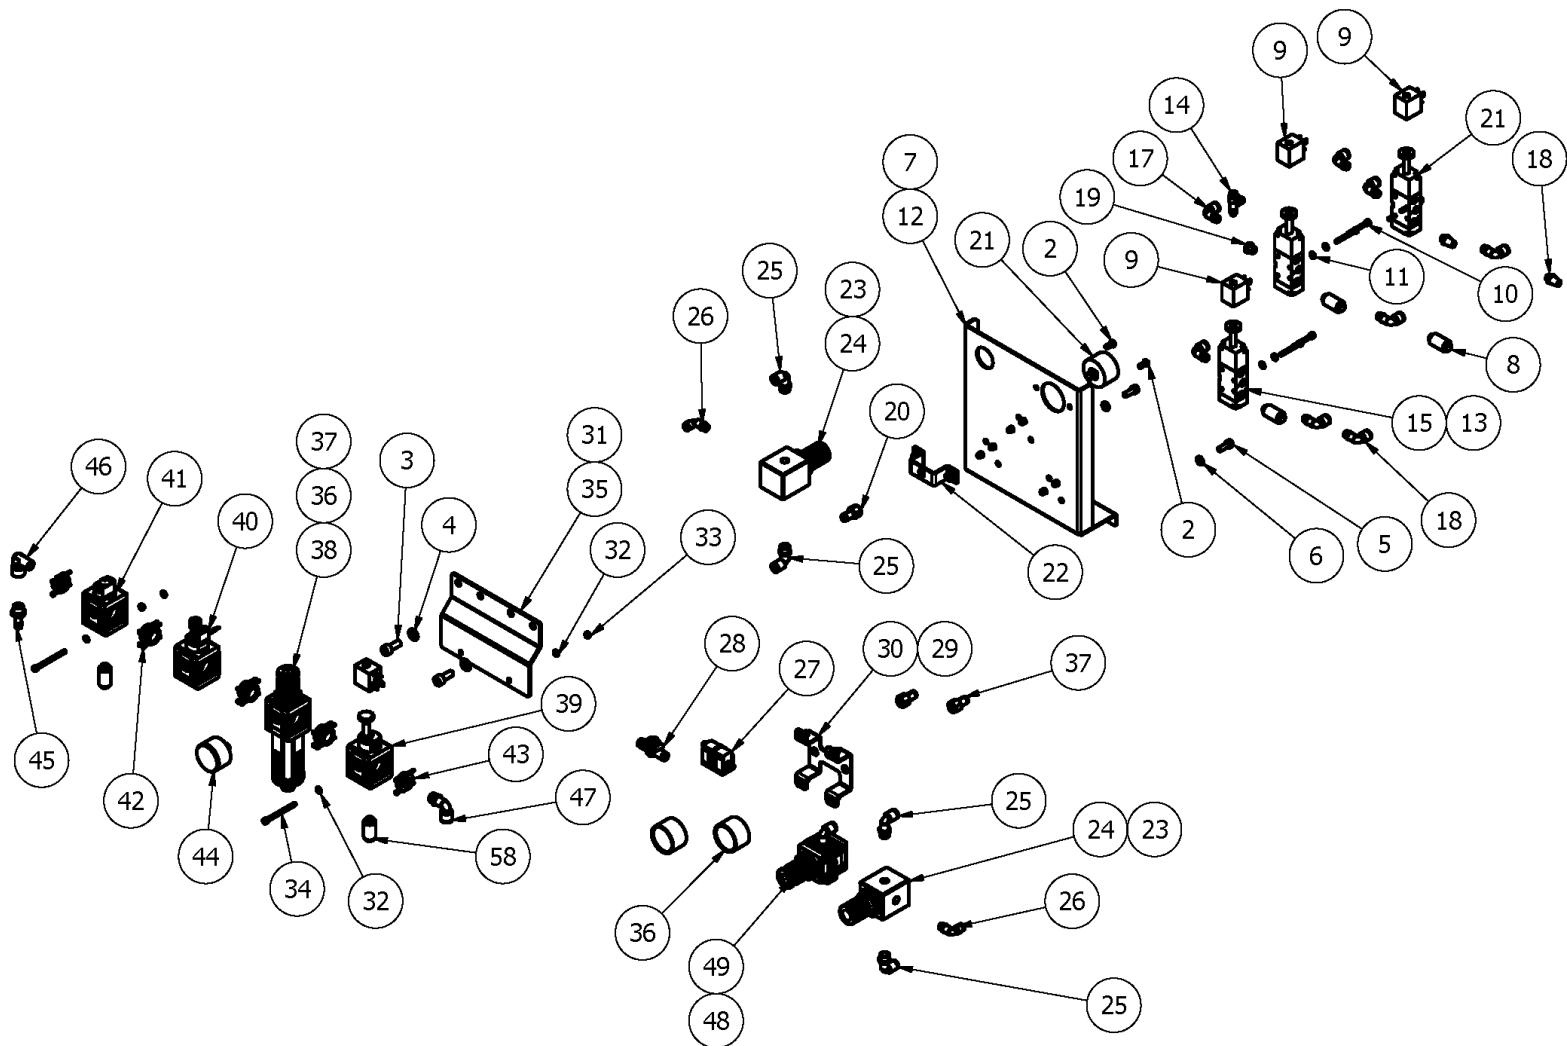

ITEM#	PART NUMBER	DESCRIPTION
23056-1	78-0025-3932-4	PNEUMATIC ASSEMBLIES
23056-2	78-8094-6145-8	SCREW-M5X12 PHBHCS
23056-3	M8x20 SHCS	SCREW-M8X20 SHCS
23056-4	M8 WSHR	WASHER-M8 PLAIN
23056-5	M6X16 SHCS	SCREW-M6X16 SHCS
23056-6	M6 WSHR	WASHER-M6 PLAIN
23056-7	78-0025-3639-5	VALVE GROUP ASSEBMLY
23056-8	78-8137-7704-8	SILENCER MWSPL-F 1/8
23056-9	78-8137-7701-4	Coil - 22 ø8 BA 2W-24VDC UR
23056-10	M4X35 SHCS	SCREW-M4X35 SHCS
23056-11	M4 WSHR	WASHER-M4 PLAIN
23056-12	78-0025-3644-5	SUPPORT ASSEMBLY
23056-13	78-8137-7953-1	Valve - Solenoid
23056-14	78-8137-7992-9	Regulator - Flow AS-FS AS1201FS-M5-04
23056-15	78-8137-7700-6	Valve - SOV 25 SOS OO
23056-16	78-8060-7690-3	Cap - B-1/8 Inch
23056-17	78-8076-4890-8	Fitting - 90 Degree Elbow, 6mm
23056-18	26-1005-6890-1	Muffler - Bronze 1/8"
23056-19	78-8060-7690-3	Cap - B-1/8 Inch
23056-20	78-8076-4672-0	Union - Straight, Female
23056-21	78-8076-4671-2	Gauge - Pressure
23056-22	78-8076-4535-9	BRACKET-GAUGE ASSY
23056-23	78-0025-3761-7	ASSY- REGULATOR
23056-24	78-8137-6398-0	Regulator - SY1 1/4 04 PZ 1
23056-25	78-8055-0756-9	Union Rotating MR41-6-14 (Elbow 1/4 x 6mm)
23056-26	78-8076-4888-2	KQL Male elbow - Inch-size One-touch Fittings Male elbow
23056-27	78-8137-8410-1	PRESSURE SWITCH SDE5-D10-FP-Q6-P-M8
23056-28	78-8137-7951-5	Valve - Quick Exhaust
23056-29	78-0025-3641-1	GUAGE CLUSTER ASSY
23056-30	78-0025-3642-9	BRACKET-ASSY-GAUGE CLUSTER
23056-31	78-0025-3933-2	REGULATOR ASSY W/BRACKET
23056-32	78-8005-5740-3	Washer - Plain 4 mm
23056-33	78-8010-7416-8	Nut - Metric, Hex, Steel M4 VC
23056-34	M4X55 SHCS	SCREW-M4X55 SHCS
23056-35	78-0025-3935-7	BRACKET-MOUNTING REGULATOR GROUP
23056-36	78-0025-3934-0	Air Supply
23056-37	78-0025-3936-5	Air Pressure Assembly - 24VDC
23056-38	78-8137-6395-6	Filter - Regulator FR SY1 20 08 RA
23056-39	78-8137-8252-7	Filter - Regulator FR SY1
23056-40	78-8137-8250-1	SPECIAL PRESSURE SWITCH SY NO BUSHES
23056-41	78-8137-7957-2	Valve - Manual V3V SY1
23056-42	78-8137-8251-9	COUPLER
23056-43	78-0025-0620-8	CONNECTOR
23056-44	78-8054-8838-0	Guage - Air (6236-15)
23056-45	26-1005-6897-6	Hose Connector RA030 9-1/4"(6236-18) VC

23056-46	78-8060-7900-6	Union - RA022 1/4"-1/4"
23056-47	78-8076-4885-8	KQL Male elbow - Inch-size One-touch Fittings Male elbow
23056-48	78-0025-3760-9	ASSY-CENTERING REGULATOR
23056-49	78-8137-7702-2	REGULATOR SY1 1/4 08